

PowerFlex Active Front End

Catalog Number 20Y

PowerFlex AFE/PowerFlex 700AFE

Frames 10 and 13, Firmware Revision Number 1.xxx



Important User Information

Read this document and the documents listed in the additional resources section about installation, configuration, and operation of this equipment before you install, configure, operate, or maintain this product. Users are required to familiarize themselves with installation and wiring instructions in addition to requirements of all applicable codes, laws, and standards.

Activities including installation, adjustments, putting into service, use, assembly, disassembly, and maintenance are required to be carried out by suitably trained personnel in accordance with applicable code of practice.

If this equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

In no event will Rockwell Automation, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Rockwell Automation, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, Inc. with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Rockwell Automation, Inc., is prohibited

Throughout this manual, when necessary, we use notes to make you aware of safety considerations.



WARNING: Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.



ATTENTION: Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. Attentions help you identify a hazard, avoid a hazard, and recognize the consequence.

IMPORTANT Identifies information that is critical for successful application and understanding of the product.

Labels may also be on or inside the equipment to provide specific precautions.



SHOCK HAZARD: Labels may be on or inside the equipment, for example, a drive or motor, to alert people that dangerous voltage may be present.



BURN HAZARD: Labels may be on or inside the equipment, for example, a drive or motor, to alert people that surfaces may reach dangerous temperatures.



ARC FLASH HAZARD: Labels may be on or inside the equipment, for example, a motor control center, to alert people to potential Arc Flash. Arc Flash will cause severe injury or death. Wear proper Personal Protective Equipment (PPE). Follow ALL Regulatory requirements for safe work practices and for Personal Protective Equipment (PPE).

Preface

Summary of Changes 9
 Intended Audience 9
 What Is Not in This Manual 9
 Manual Conventions 10
 Rockwell Automation Support 10
 Technical Support 10
 Additional Resources 10
 Drive Information 11
 General Precautions 12
 Catalog Number Explanation 13
 Description of Operation 14
 Benefits of the AFE 16
 AFE in IP00 Open Chassis Configuration 17

Chapter 1

**AFE in IP20 2500 MCC Style
 Enclosure – Installation/Wiring**

Main Component Sections 20
 Frame 10 20
 Frame 13 21
 Main Component Locations 22
 Frame 10 22
 Frame 13 23
 Mounting Considerations 24
 Operating Temperatures 24
 Minimum Mounting Clearances 24
 AC Supply Source Considerations 26
 Unbalanced, Ungrounded, or Resistive Grounded
 Distribution Systems 26
 Input Power Conditioning 27
 Grounding Requirements 27
 Recommended Grounding Scheme 27
 Safety Ground - PE and Shield Termination - SHLD 29
 Fuses and Circuit Breakers 29
 Power Wiring 29
 Power Cable Types Acceptable for 400...690 Volt
 Installations 29
 Unshielded Cable 30
 Shielded Cable 30
 Armored Cable 30
 Cable Trays and Conduit 31
 Select and Verify Control Transformer Voltage 31
 Power Terminals for AFE in IP20 2500 MCC
 Style Enclosure 34
 Route the AC Input, Ground (PE), and DC Bus Output
 Wiring for AFE in IP20 2500 MCC Style Enclosure 36

Disconnect the Common Mode Capacitors	37
Frame 10 LCL Filter	37
Frame 13 LCL Filter	38
Frame 10 or Frame 13 Power Structure	39
Use the AFE with PowerFlex Drives	39
Control Wiring	40
Signal and Control Wire Types	41
I/O Terminal Blocks	42
I/O Cable Grounding	43
Typical I/O Wiring	45
Analog I/O Configuration	46
Hardware Enable Circuitry	46
Analog I/O Wiring Examples for AFE in IP20 2500 MCC Style Enclosure	47
Precharging the AFE	47
Introduction	47
Important Guidelines	48
CE Conformity	49
Low Voltage Directive (2006/95/EC)	49
EMC Directive (2004/108/EC)	49
General Notes	49
Essential Requirements for CE Compliance	49

Chapter 2

AFE in IP21 Rittal Enclosure – Installation/Wiring

Main Component Sections	52
Frame 10	52
Frame 13	53
Main Component Locations	54
Frame 10	54
Frame 13	55
Mounting Considerations	56
Operating Temperatures	56
Minimum Mounting Clearances	56
AC Supply Source Considerations	58
Unbalanced, Ungrounded, or Resistive Grounded Distribution Systems	58
Input Power Conditioning	59
Grounding Requirements	59
Recommended Grounding Scheme	59
Safety Ground - PE	61
Shield Termination - SHLD	61
Fuses and Circuit Breakers	62
Power Wiring	62
Power Cable Types Acceptable for 400...690 Volt Installations	62
Unshielded Cable	62
Shielded Cable	63

Armored Cable	63
Cable Trays and Conduit	64
Select and Verify Control Transformer Voltage	64
Power Terminals for AFE in IP21 Rittal Enclosure	66
DC Bus Output Wiring	67
Route the AC Input, Ground (PE), and DC Bus Output Wiring for AFE in IP21 Rittal Enclosure	68
Disconnect the Common Mode Capacitors	69
Frame 10 LCL Filter	69
Frame 13 LCL Filter	70
Frame 10 Power Structure	72
Frame 13 Power Structure	73
Using the AFE with PowerFlex Drives	74
Control Wiring	74
Signal and Control Wire Types	75
I/O Terminal Blocks	76
I/O Cable Grounding	77
Typical I/O Wiring	78
Analog I/O Configuration	79
Hardware Enable Circuitry	80
Analog I/O Wiring Examples for AFE in IP21 Rittal Enclosure	80
Precharging the AFE	81
Introduction	81
Important Guidelines	81
CE Conformity	82
Low Voltage Directive (2006/95/EC)	82
EMC Directive (2004/108/EC)	82
General Notes	82
Essential Requirements for CE Compliance	82

Chapter 3

Startup

AFE in IP20 2500 MCC Style Enclosure	85
Startup Procedure	85
Control Devices	88
Modes of Operation	88
AFE in IP21 Rittal Enclosure	90
Startup Procedure	90
Control Devices	92
MCCB (Motor-controlled Circuit Breaker) and Modes of Operation	92

Chapter 4

Programming and Parameters

About Parameters	95
How AFE Parameters are Organized	96
File-Group-Parameter Order	96

Basic Parameter View	97
Advanced Parameter View	98
Monitor File	99
Dynamic Control File	101
Utility File	105
Communication File	111
Inputs and Outputs File	113
Parameter Cross Reference – by Name	117
Parameter Cross Reference – by Number	120

Chapter 5

Troubleshooting

AFE Status	125
Front Panel Indications	125
HIM Indication	126
Faults and Alarms	126
Manually Clearing Faults	127
Fault and Alarm Descriptions	127
Clear the Alarms	131
Common Symptoms and Corrective Actions	131
Technical Support	135

Appendix A

Supplemental Information

Specifications	137
Derating Guidelines	139
Ambient Temperature/Load	139
Altitude/Load 400/480V AC Input	139
Altitude/Load 600/690V AC Input	139
AFE Current Ratings and Watts Loss	140
400 Volt AC Input Ratings	140
480 Volt AC Input Ratings	140
600 Volt AC Input Ratings	140
690 Volt AC Input Ratings	140
Fusing and Circuit Breakers for AFE in IP20 2500 MCC Style Enclosure	141
AC Input Fuse and Circuit Breaker Ratings	141
DC Bus Output Fuse Ratings	141
Fusing and Circuit Breakers for AFE in IP21 Rittal Enclosure	142
AC Input Fuse and Circuit Breaker Ratings	142
DC Bus Output Fuse Ratings	142
Dimensions	143
DPI Communication Configurations	152
Typical Programmable Controller Configurations	152
Logic Command Word for PowerFlex 700/700H/700S Drives	152
Logic Status Word for PowerFlex 700/700H/700S Drives	153
Logic Command Word for PowerFlex 750-Series Drives	155

	Logic Status Word for PowerFlex 750-Series Drives	156
HIM Overview	Appendix B	
	External and Internal Connections	159
	LCD Display Elements	160
	ALT Functions	160
	Menu Structure	161
	Diagnostics Menu	161
	Parameter Menu.	162
	Device Select Menu.	162
	Memory Storage Menu.	162
	Start-up Menu	162
	Preferences Menu	162
	View and Edit Parameters.	163
	HIM	163
	Numeric Keypad Shortcut.	163
	Remove/Install the HIM	163
Application Notes	Appendix C	
	Sizing Guidelines.	165
	Basic Procedure to Size the AFE	165
	Advanced Procedure to Size the AFE.	166
	Voltage Boost.	167
	Paralleling AFEs.	168
	Guidelines for AFEs in IP20 2500 MCC Style Enclosure	168
	Guidelines for AFEs in IP21 Rittal Enclosure	172
	Paralleling an AFE with One or More PowerFlex SCR Bus Supplies.	176
	Index	177

Notes:

The purpose of this manual is to provide the basic information to install, startup, and troubleshoot the PowerFlex® Active Front End (AFE).

Topic	Page
Summary of Changes	9
Intended Audience	9
What Is Not in This Manual	9
Manual Conventions	10
Rockwell Automation Support	10
Additional Resources	10
General Precautions	12
Catalog Number Explanation	13
Description of Operation	14
Benefits of the AFE	16
AFE in IP00 Open Chassis Configuration	17

Summary of Changes

This manual contains new and updated information as indicated in the following table.

Topic	Page
Updated the basic one-line diagram for a Frame 10 AFE in IP20 2500 MCC style enclosure to include the factory-installed common mode core at the DC bus output.	Figure 6 on page 20
Updated the system schematics for a Frame 13 AFE in IP20 2500 MCC style enclosure to include the factory-installed common mode core at the DC bus output.	Figure 7 on page 21
Updated the drawing for connecting parallel Frame 10 AFEs in IP20 2500 MCC style enclosures to include the factory-installed common mode core at the DC bus output.	Figure 56 on page 170
Updated the drawing for connecting parallel Frame 13 AFEs in IP20 2500 MCC Style Enclosures to include the factory-installed common mode core at the DC bus output.	Figure 57 on page 171
Added information for KCC and Regulatory compliance mark (RCM) certifications.	137

Intended Audience

This manual is intended for qualified personnel. You must be able to program and operate an Active Front End unit and adjustable frequency AC drives. In addition, you must have an understanding of the parameter settings and functions.

What Is Not in This Manual

This manual provides installation, start-up, and programming information for the PowerFlex Active Front End. For detailed drive information, see Drive Information on [page 11](#).

Manual Conventions

The following conventions are used throughout this manual:

- In this manual, we also refer to the PowerFlex Active Front End as AFE, Active Front End, or unit.
- To differentiate parameter names and LCD display text from other text, the following conventions are used:
 - Parameter names appear in [brackets].
For example: [DC Bus Voltage].
 - Display text appears in ‘quotes’.
For example, ‘Enabled’.

Rockwell Automation Support

Contact your local Rockwell Automation representative for these items:

- Sales and order support
- Product technical training
- Warranty support
- Support service agreements

Technical Support

For technical support, first review the information in [Chapter 5](#). If you still need help, click the link for Allen-Bradley® Drives Service and Support website at <http://www.ab.com/support/abdriives>. When you contact Technical Support, be prepared to provide the information that is listed on [page 135](#).

Additional Resources

These documents contain additional information concerning related products from Rockwell Automation.

Resource	Description
PowerFlex Active Front End—Frame 10 Hardware Service Manual, publication 20Y-TG001	Provides information for how to troubleshoot Frame 10 AFE units.
PowerFlex Active Front End—Frame 13 Hardware Service Manual, publication 20Y-TG002	Provides information for how to troubleshoot Frame 13 AFE units.
PowerFlex 700H, 700S, and 700AFE Drive Fan Systems Installation Instructions, publication PFLEX-IN029	Provides information for how to install drive fan systems.
Drives in Common Bus Configurations, publication DRIVES-AT002	Provides information for common bus configurations.
Wiring and Grounding Guidelines for Pulse Width Modulated (PWM) AC Drives, publication DRIVES-IN001	Provides information for wiring and grounding AC drives.
Preventive Maintenance of Industrial Control and Drive System Equipment, publication DRIVES-TD001	Provides information for preventative maintenance control and drive systems.
Safety Guidelines for the Application, Installation, and Maintenance of Solid-state Control, publication SGI-1.1	Provides safety guidelines for drive systems.
Guarding Against Electrostatic Damage, publication 8000-4.5.2	Provides information for how to prevent electrostatic damage.
Industrial Automation Wiring and Grounding Guidelines, publication 1770-4.1	Provides general guidelines for installing a Rockwell Automation industrial system.
Product Certifications website, http://www.rockwellautomation.com/global/certification/overview.page	Provides declarations of conformity, certificates, and other certification details.

You can view or download publications at <http://www.rockwellautomation.com/global/literature-library/overview.page>. To order paper copies of technical documentation, contact your local Allen-Bradley distributor or Rockwell Automation sales representative.

Drive Information

The following publications provide detailed information for PowerFlex drives that are compatible with the PowerFlex Active Front End.

Drive	Resource	Description
PowerFlex 700 Series A Drive	PowerFlex 700 Series A User Manual, publication 20B-UM001	Provides information for how to install, configure, and use PowerFlex 700 Series A and Series B drives.
PowerFlex 700 Series B Drive	PowerFlex 700 Series B User Manual, publication 20B-UM002	
	PowerFlex 700 Frames 0...6 Installation Instructions, publication 20B-IN019	
	PowerFlex 700 Frames 7...10 Installation Instructions, publication 20B-IN014	
	PowerFlex 70/700 Reference Manual, publication PFLEX-RM001	
	PowerFlex 70 Installation Instructions, publication 20A-IN009	
	PowerFlex 70EC/700VC Reference Manual, publication PFLEX-RM004	
	PowerFlex 700 Technical Data, publication 20B-TD001	
	PowerFlex Dynamic Braking Resistor Calculator, publication PFLEX-AT001	
PowerFlex 700H Drive	PowerFlex 700H Installation Manual, publication PFLEX-IN006	Provides information for how to install, configure, and use PowerFlex 700H drives.
	PowerFlex 700H Programming Manual, publication 20C-PM001	
	PowerFlex 700H Technical Data, publication 20C-TD001	
PowerFlex 700S Drive	PowerFlex 700S with Phase II Control Installation Manual (Frames 1...6), publication 20D-IN024	Provides information for how to install, configure, and use PowerFlex 700S drives.
	PowerFlex 700S with Phase II Control Installation Manual (Frames 9...14), publication PFLEX-IN006	
	PowerFlex 700S with Phase II Control Programming Manual (All Frame Sizes), publication 20D-PM001	
	PowerFlex 700S with Phase II Control Reference Manual, publication PFLEX-RM003	
	PowerFlex 700S with Phase II Control Technical Data, publication 20D-TD002	
PowerFlex 750-Series Drive	PowerFlex 750-Series Drive Installation Instructions, publication 750-IN001	Provides information for how to install, configure, and use PowerFlex 750-Series drives.
	PowerFlex 750-Series Drive Programming Manual, publication 750-PM001	
	PowerFlex 750-Series Technical Data, publication 750-TD001	
PowerFlex SCR Bus Supply	PowerFlex SCR Bus Supply User Manual, publication 20S-UM001	Provides information for SCR bus supplies.

You can view or download publications at <http://www.rockwellautomation.com/global/literature-library/overview.page>. To order paper copies of technical documentation, contact your local Allen-Bradley distributor or Rockwell Automation sales representative.

To find your local Rockwell Automation distributor or sales representative, visit <http://www.rockwellautomation.com/global/distributor-locator/sales-locator.page>

General Precautions



ATTENTION: To avoid an electric shock hazard, verify that the voltage on the bus capacitors has discharged completely before servicing. Check the DC bus voltage between the +DC and -DC terminals, between the +DC terminal and the chassis, and between the -DC terminal and the chassis. The voltage must be zero for all three measurements.



ATTENTION: To guard against personal injury and equipment damage that is caused by an arc flash, you must identify the arc flash requirements per NFPA 70E.



ATTENTION: The PowerFlex Active Front End contains electrostatic discharge (ESD) sensitive parts and assemblies that can be damaged if you do not follow ESD control procedures. Static control precautions are required when you install, test, service, or repair this unit. If you are unfamiliar with static control procedures, see Guarding Against Electrostatic Damage, publication [8000-4.5.2](#), or any other applicable ESD protection handbook.



ATTENTION: An incorrectly applied or installed PowerFlex Active Front End can result in component damage or a reduction in product life. Wiring or application errors, such as undersizing the motor, incorrect or inadequate AC supply, or excessive ambient temperatures, can result in malfunction of the system.



ATTENTION: Only qualified personnel familiar with adjustable frequency AC drives and associated machinery can plan or implement the installation, start-up, and subsequent maintenance of the system. Failure to comply can result in personal injury and/or equipment damage.

Catalog Number Explanation

1...3			4	5...7		8	9	10		11	12	13	14	15	16
20Y			D	460		A	0	A		N	N	A	N	A	0
a			b	c		d	e	f		g	h	i	j	k	l

a

Drive	
Code	Type
20Y	PowerFlex AFE/ PowerFlex 700AFE

b

Voltage Rating		
Code	Input Voltage	Phase
D	400/480V AC	3
F	600/690V AC	3

c1

400/480V Input				
Code	Input Amps ND (HD)	kW at 400V ND (HD)	Hp at 480V ND (HD)	Frame Size
460	460 (385)	309 (258)	497 (416)	10
1K3	1300 (1150)	873 (772)	1404 (1242)	13

c2

600/690V Input				
Code	Input Amps ND (HD)	Hp at 600V ND (HD)	kW at 690V ND (HD)	Frame Size
325	325 (240)	439 (324)	376 (278)	10
1K0	1030 ⁽¹⁾	1390 ⁽¹⁾	1193 ⁽¹⁾	13

(1) There is no heavy-duty rating for Frame 13 600/690V.

d

Enclosure		
Code	Type	Conformal Coating
A ⁽¹⁾	IP21 Rittal Enclosure, NEMA/UL Type 1	Yes
N ⁽²⁾	IP00, open-chassis	Yes
p ⁽³⁾	IP20, NEMA/UL Type 1 2500 MCC Style enclosure with power bus, 800 mm (31.5 in.) deep, standard cabinet color (RAL7032)	Yes
W ⁽³⁾	IP20, NEMA/UL Type 1 2500 MCC Style enclosure with power bus, 800 mm (31.5 in.) deep, CenterLine 2100 gray (ASA49)	Yes

- (1) Includes AFE power module, LCL filter, control assembly, motor-controlled circuit breaker, and precharge circuit in a Rittal enclosure.
- (2) Restricted to SSB. Includes AFE power module, LCL filter, and control assembly. Excludes circuit breaker or precharge circuit.
- (3) Includes AFE power module, LCL filter, control assembly, Incoming circuit breaker, and precharge circuit in 2500 MCC Style enclosure. Frame 10 has 1250 amp DC bus and Frame 13 has 3000 amp DC bus.

e

HIM		
Code	Operator Interface	Mount
0	No HIM	AFE

f

Documentation		
Code	Documents	Ship Carton
A	User Manual	Yes

g

Brake	
Code	With Brake IGBT
N	No

h

Brake Resistor	
Code	With Resistor
N	No

i

Equipment Type	
Code	Description
A	AFE with power line filter

j

Comm Slot	
Code	Communication Option
N	None

k

I/O Option		
Code	Type	I/O Volts
A ⁽¹⁾	Standard, with outputs	24V DC

(1) A 120V AC I/O option is not available.

l

Feedback		
Code	Type	Installed On
0	None	N/A

Description of Operation

The PowerFlex Active Front End is a regenerative DC bus supply that is used to supply DC power to a lineup of common DC bus drives, or one common bus drive. The AFE uses a pulse width modulated (PWM)-controlled IGBT converter to allow bi-directional power flow to the AC line. [Figure 1](#) and [Figure 2](#) show examples of the AFE powering a lineup of PowerFlex 755 drives and the AFE powering one PowerFlex 755 drive. For additional information and bus conditioning requirements, see Drives in Common Bus Configurations, publication [DRIVES-AT002](#).

Figure 1 - AFE Supplying a Lineup of Common Bus Drives


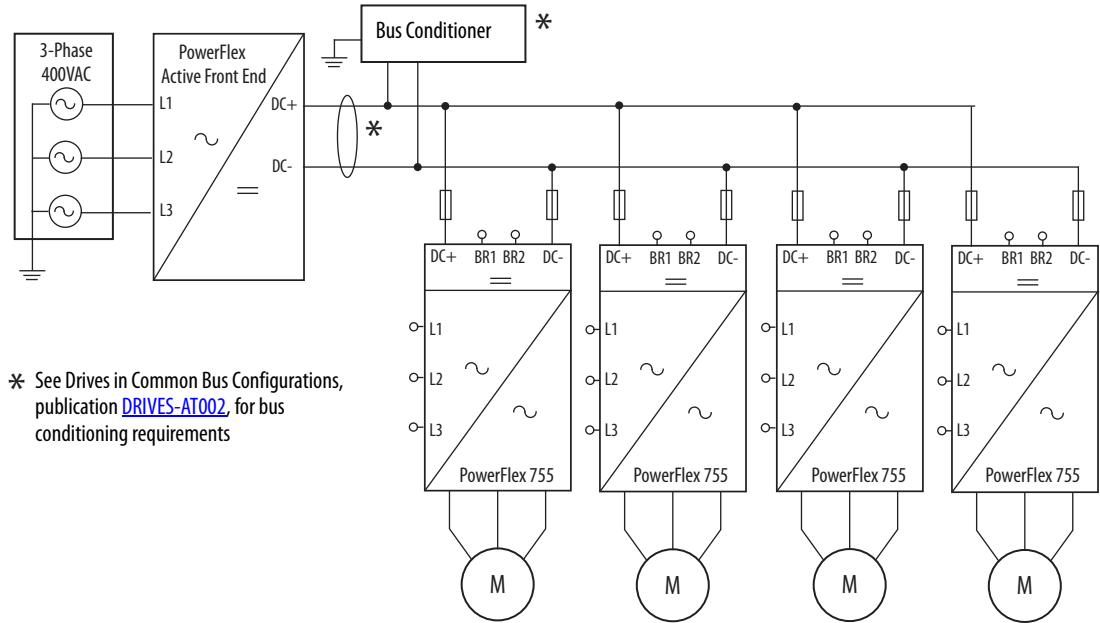


Figure 2 - AFE Supplying a Single Drive

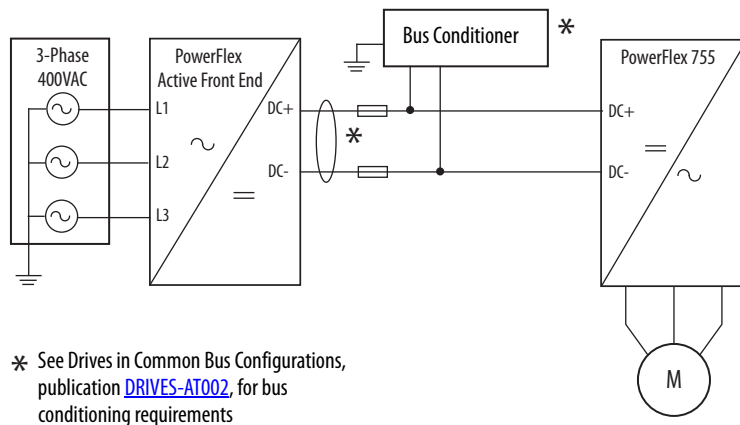


Active current and reactive currents are calculated from the three input phase current measurements (I_{L1} , I_{L2} , and I_{L3}) as shown in [Figure 3](#). The DC voltage controller is a PI type regulator. A DC voltage reference sets the value of the DC link voltage to be maintained. It is compared to measured DC voltage to obtain a DC voltage error as the input for the DC voltage controller.

The output of the DC voltage controller is the active current reference, which is compared to the measured active current. The error between them is the input for the active current controller. The output of the active current controller changes the modulation index and controls the inverter voltage.

The reactive current reference can be used for reactive power compensation. A positive reactive current reference indicates inductive and a negative reactive current reference indicates capacitive reactive power compensation. The default value of the reactive current reference parameter is zero. The set value of the reactive current reference is compared to its measured value and the error is fed to the PI regulator. The PI regulator is also referred to as the synchronizing controller because its function is to keep the inverter synchronized with line supply. The frequency reference to the AFE is derived from the reactive current controller output. Normally the active current K_p , active current K_i , reactive current K_p , and reactive current K_i default values of the two current controllers are satisfactory with the standard LCL filter. Do not change the default values.

Figure 3 - AFE Block Diagram

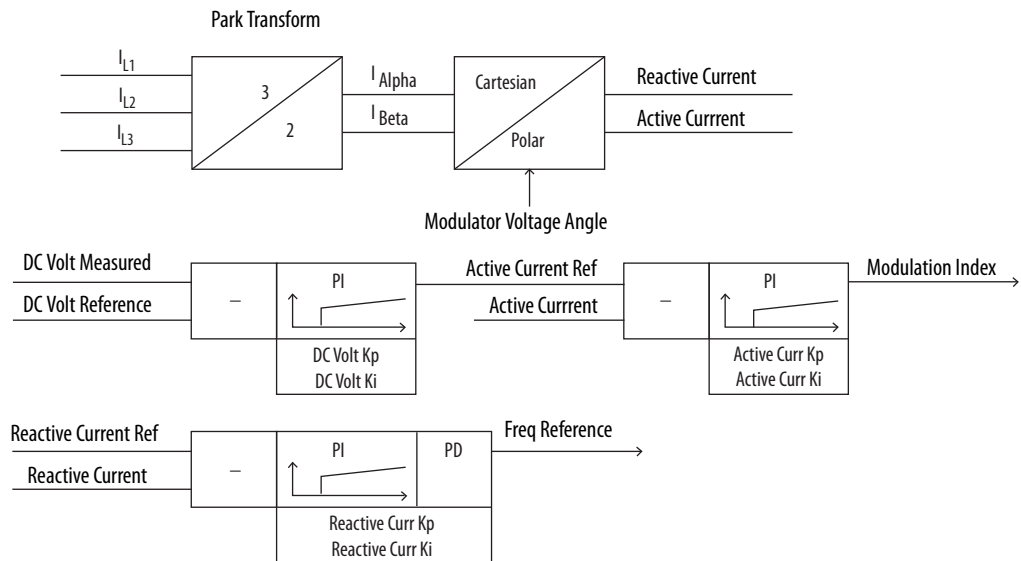

Benefits of the AFE

The PowerFlex Active Front End provides these benefits:

- Energy savings with regenerative braking – instead of wasted energy with resistor brake technology, regenerative braking puts the energy back into the system to be used by other equipment.
- Low AC input harmonics – the active front end provides low harmonics to meet IEEE 519 and CE at its input terminals.
- Improved power factor – the AFE actively controls the power factor regardless of motor speed and load. In addition, the PowerFlex AFE can be used for power factor correction on the power system.
- Voltage boost – the AFE boosts the DC voltage. See [Voltage Boost on page 167](#) for guidelines regarding voltage boost. This voltage boost also helps protect critical processes from the potentially disruptive effects of input voltage dips and sags.



ATTENTION: The PowerFlex Active Front End can be used for voltage boost, but cannot be used to lower the DC bus voltage. The minimum DC bus voltage is limited by the rectified diode bridge voltage.

AFE in IP00 Open Chassis Configuration

Figure 4 shows a basic one-line diagram for an AFE Frame 10 in an IP00, NEMA/UL Open chassis configuration, and the parts that the customer must supply.

Figure 4 - Basic One-line Diagram for an AFE Frame 10 in IP00 Open Chassis Configuration


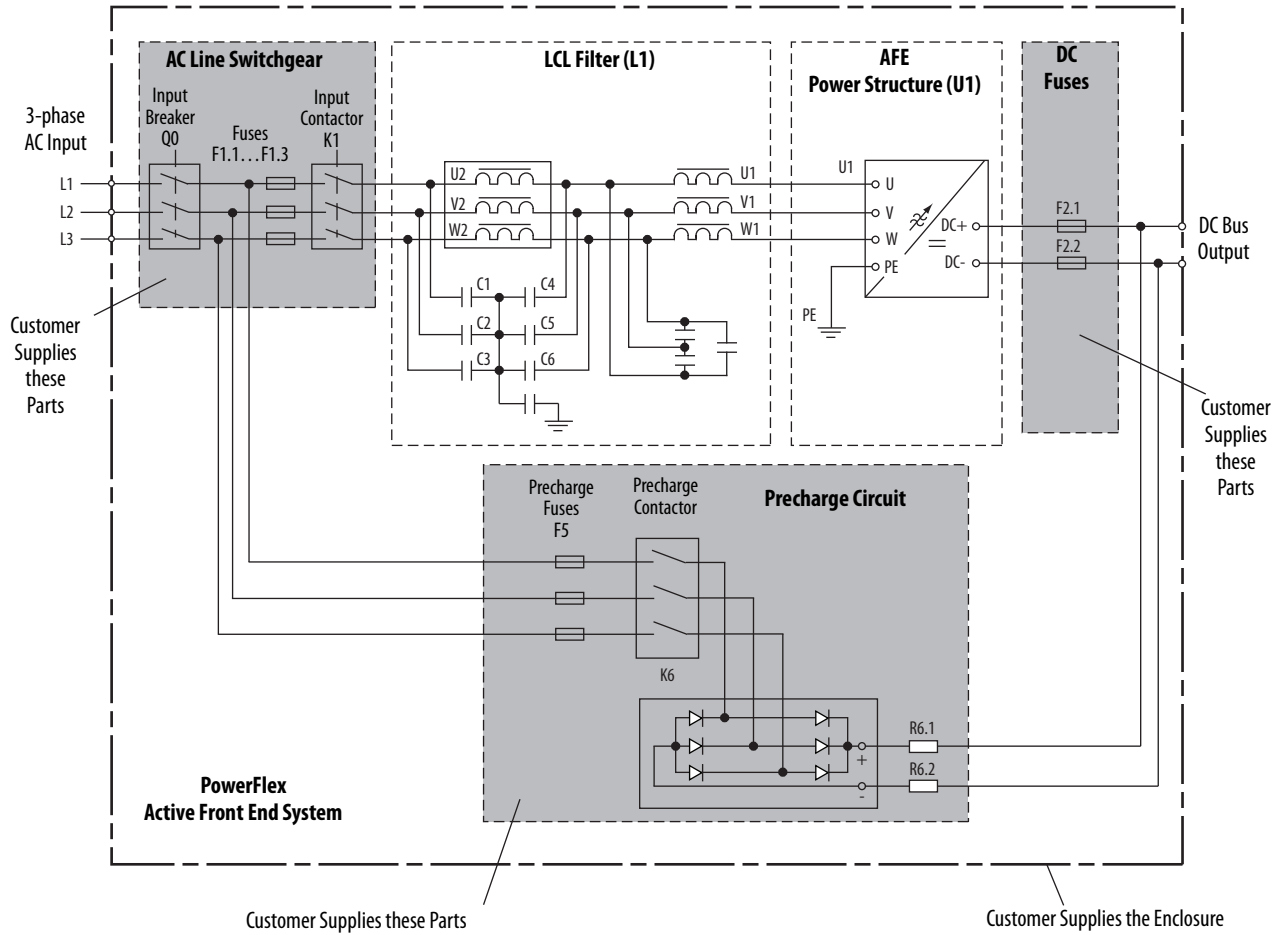


Figure 5 shows a basic one-line diagram for an AFE Frame 13 in an IP00, NEMA/UL Open chassis configuration, and the parts that the customer must supply.

Figure 5 - Basic One-line Diagram for an AFE Frame 13 in IP00 Open Chassis Configuration

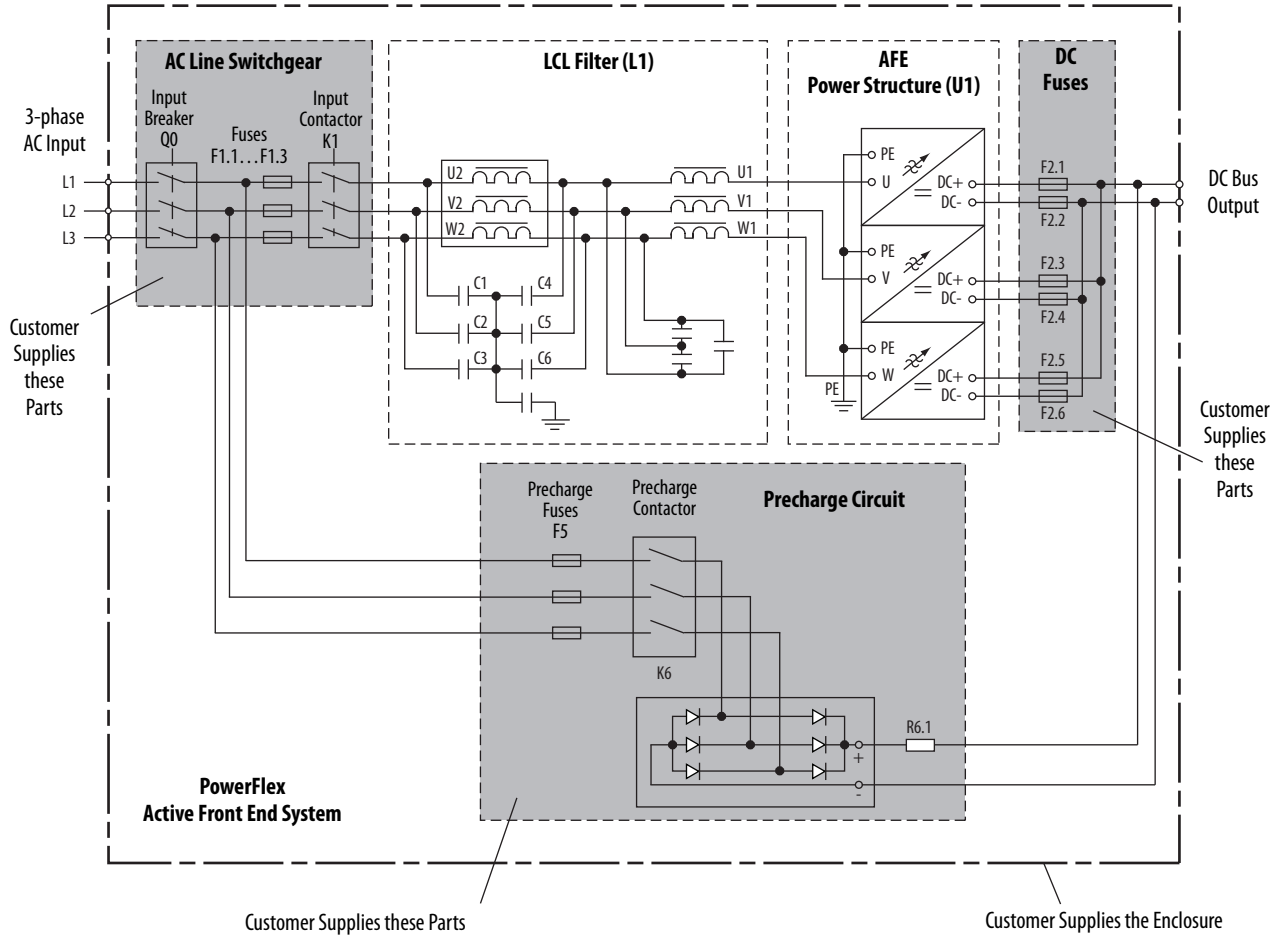

AFE in IP20 2500 MCC Style Enclosure – Installation/Wiring

This chapter provides information on how to install and wire the PowerFlex® Active Front End in an IP20 2500 MCC Style enclosure. For information on how to install and wire the AFE in an IP21 Rittal enclosure, see [Chapter 2](#).

Topic	Page
Main Component Sections	20
Main Component Locations	22
Mounting Considerations	24
AC Supply Source Considerations	26
Grounding Requirements	27
Fuses and Circuit Breakers	29
Power Wiring	29
Disconnect the Common Mode Capacitors	37
Use the AFE with PowerFlex Drives	39
Control Wiring	40
Precharging the AFE	47
CE Conformity	49

Most start-up difficulties are the result of incorrect wiring. Verify that the wiring is done as instructed. Read and understand the instructions before you begin to install the AFE.



ATTENTION: The following information is a guide for proper installation. Rockwell Automation does not assume responsibility for the compliance or the noncompliance to any code, national, local, or otherwise, for the proper installation of this 700AFE or associated equipment. A hazard of personal injury and/or equipment damage exists if codes are ignored during installation.

Main Component Sections


This section describes the main component sections of AFE Frame 10 and Frame 13 systems in an IP20 2500 MCC Style enclosure.

Frame 10

Figure 6 shows a basic one-line diagram for an AFE Frame 10 in an IP20 2500 MCC Style enclosure. The main component sections consist of the following items:

- AC line switchgear consisting of the input circuit breaker (Q0), fuses (F1.1...F1.3), and input contactor (K1)
- LCL filter (L1)
- Precharge circuit
- AFE power structure (U1) with AFE control assembly
- DC fuses (F2.1 and F2.2)

Figure 6 - Basic One-line Diagram for a Frame 10 AFE in IP20 2500 MCC Style Enclosure

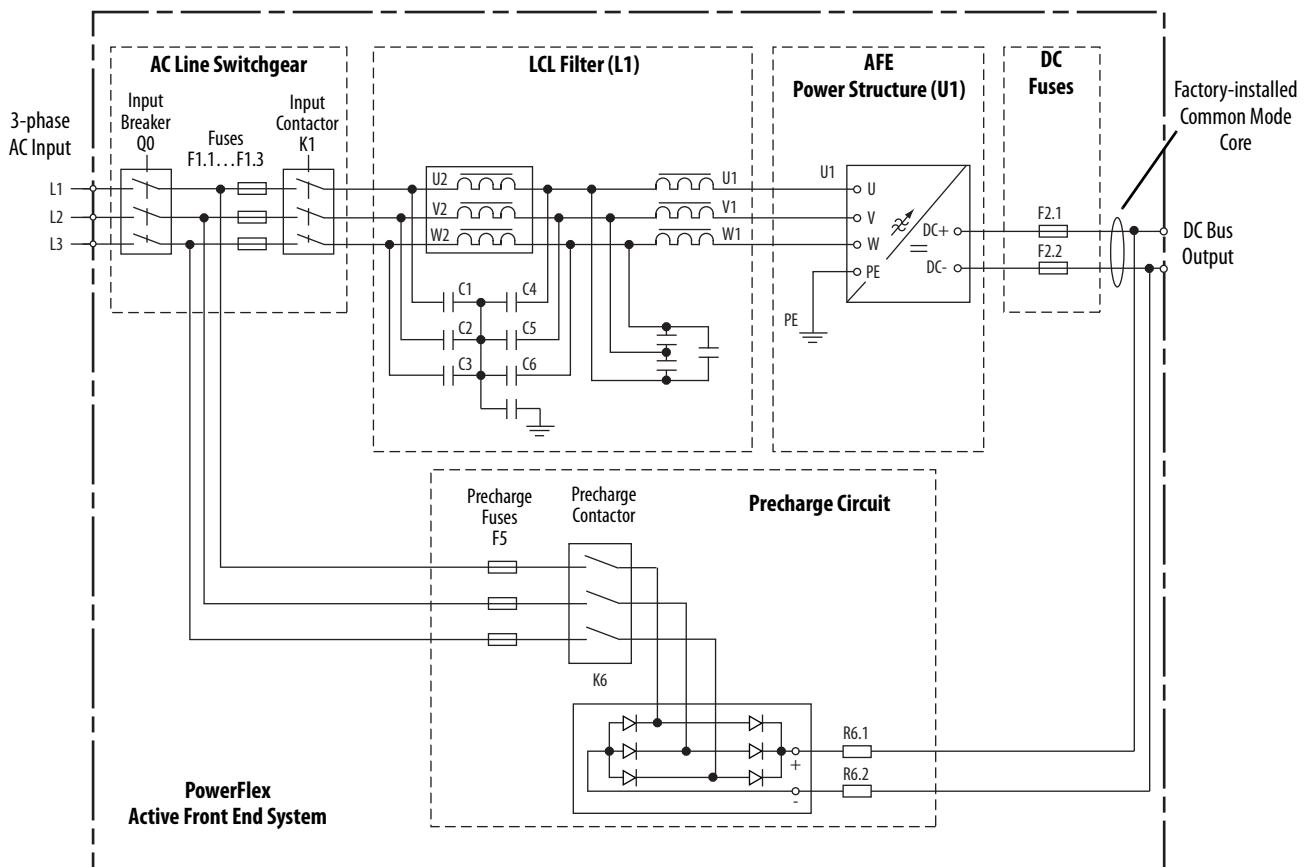


Frame 13

Figure 7 shows a basic one-line diagram for an AFE Frame 13 in an IP20 2500 MCC Style enclosure. The main component sections consist of the following items:

- AC line switchgear consisting of the input circuit breaker (Q0), fuses (F1.1...F1.3), and input contactor (K1)
- LCL filter (L1)
- Precharge circuit
- AFE power structure (U1) with AFE control assembly
- DC fuses (F2.1...F2.6)

Figure 7 - Basic One-line Diagram for a Frame 13 AFE in IP20 2500 MCC Style Enclosure

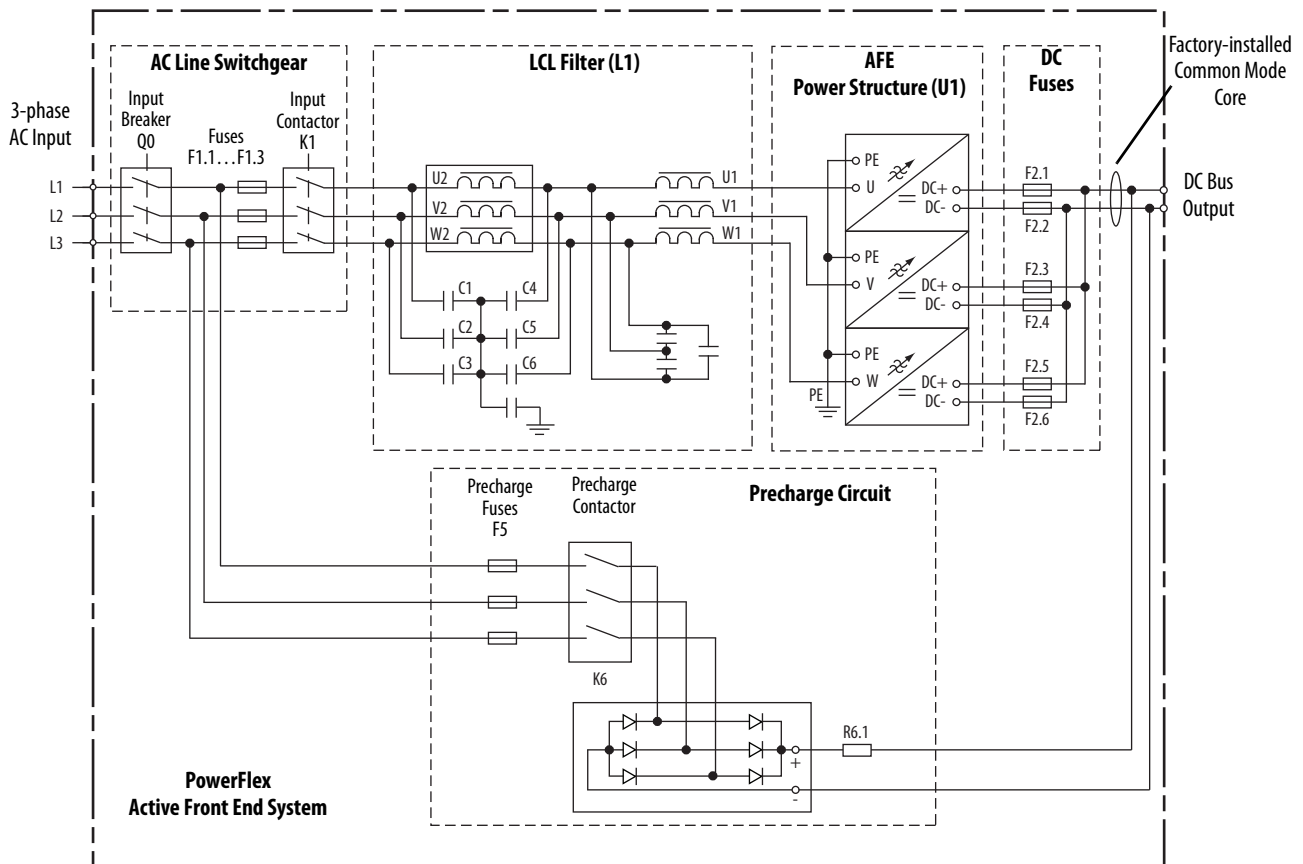


Main Component Locations

This section shows the main component locations for AFE Frame 10 and Frame 13 systems in an IP20 2500 MCC Style enclosure.

Frame 10

[Figure 8](#) shows the main components of the AFE Frame 10 system in an IP20 2500 MCC Style enclosure.

Figure 8 - AFE Frame 10 Main Component Locations in IP20 2500 MCC Style Enclosure

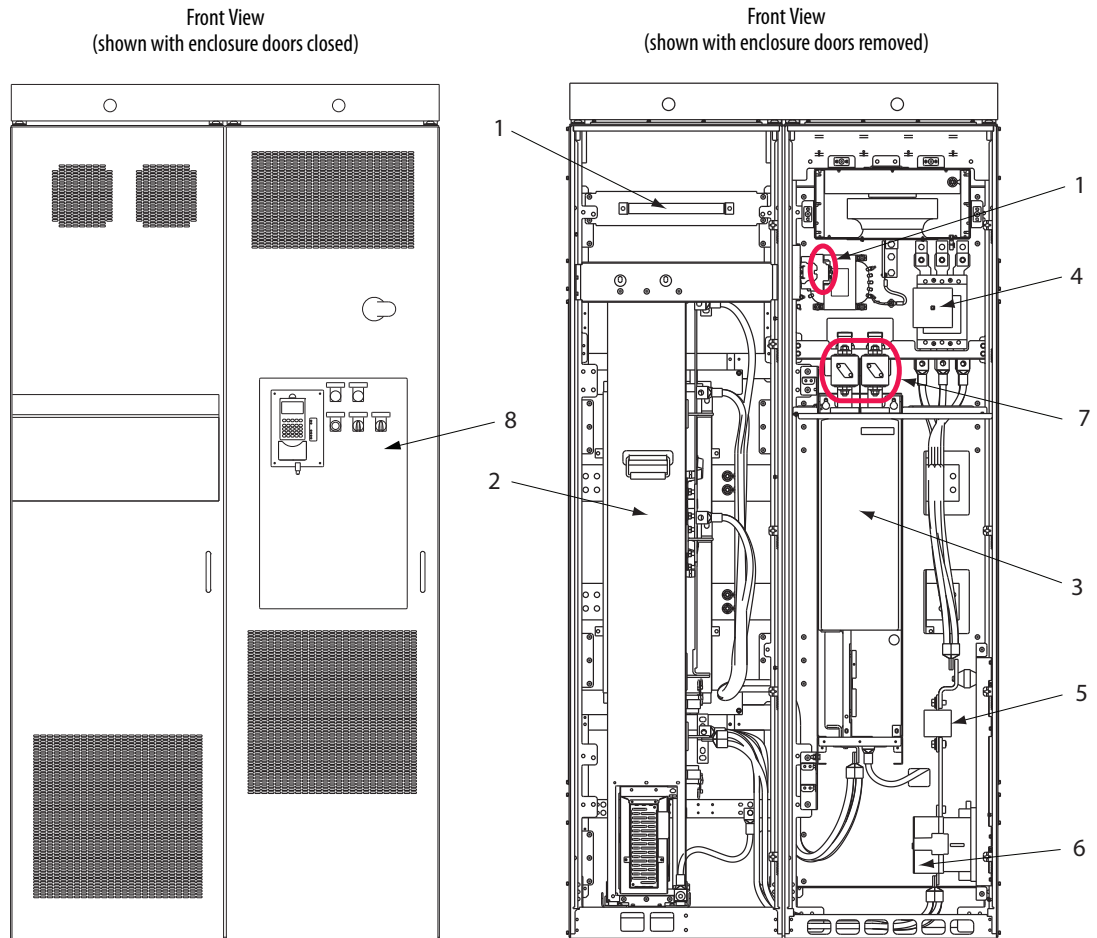


Item	Description	
1	Precharge circuit and precharge resistor	
2	LCL filter (L1)	
3	Active Front End power structure (U1)	
4	AC line switchgear	Input circuit breaker
5		Input fuses
6		Input contactor
7	DC fuses	
8	AFE control assembly (on the AFE door and shown with user-installed Human Interface Module (HIM))	

Frame 13

Figure 9 shows the main components of the AFE Frame 13 system in an IP20 2500 MCC Style enclosure.

Figure 9 - AFE Frame 13 Main Component Locations in IP20 2500 MCC Style Enclosure

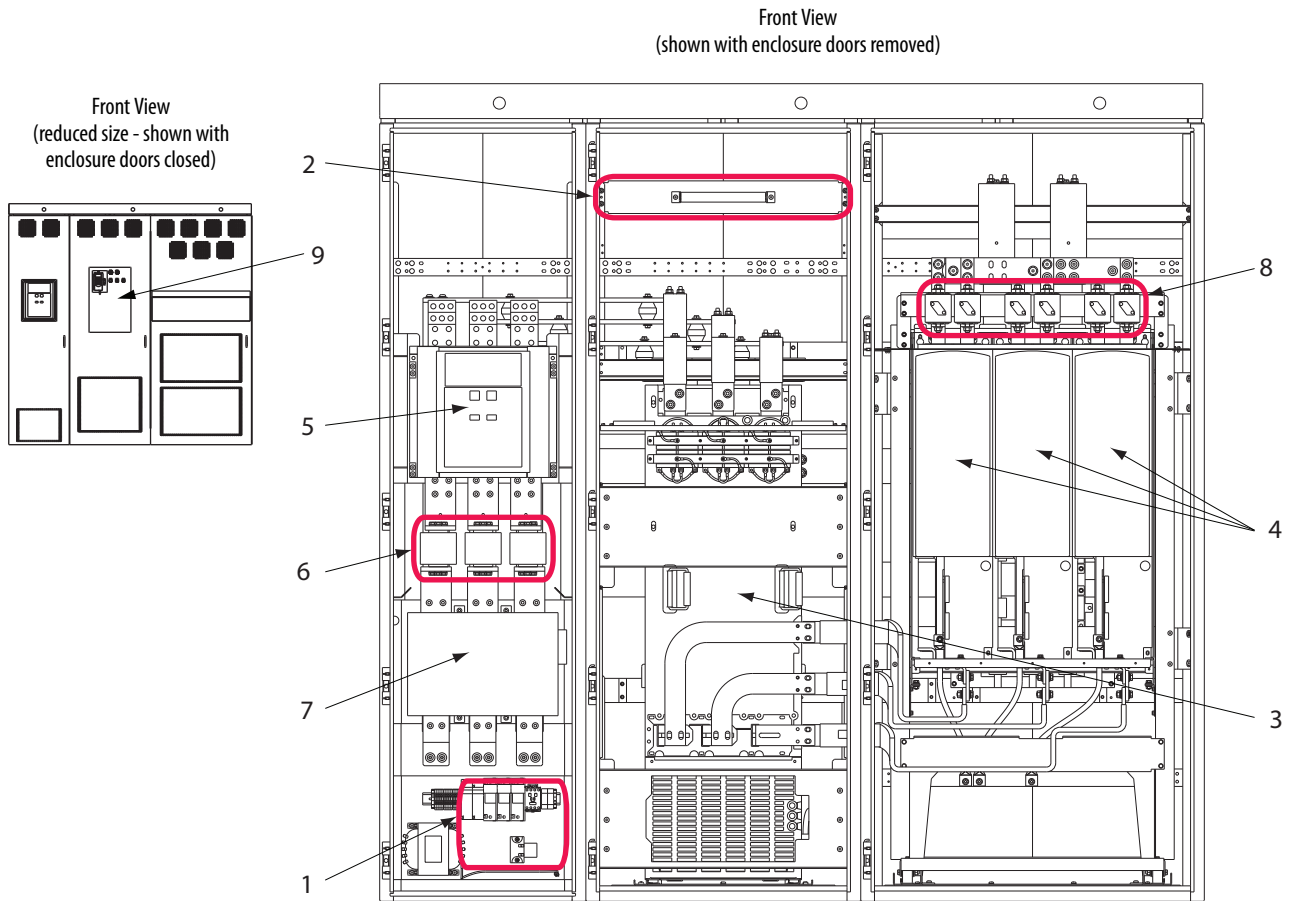

Item	Description	
1	Precharge circuit	
2	Precharge resistor	
3	LCL filter (L1)	
4	Active Front End power structure (U1)	
5	AC line switchgear	Input circuit breaker
6		Input fuses
7		Input contactor
8	DC fuses	
9	AFE control assembly (on the AFE door and shown with user-installed HIM)	

Mounting Considerations

When mounting the Active Front End, consider the following information.

Operating Temperatures

Frame Size	Surrounding Air Temperature ⁽²⁾		Minimum Airflow	
	Normal Duty	Heavy Duty	Power Module	LCL Filter
10	0...40 °C	0...40 °C	1400 m ³ /hr (824 cfm)	1100 m ³ /hr (647 cfm)
13 ⁽¹⁾	(32...104 °F)	(32...104 °F)	4200 m ³ /hr (2472 cfm)	1300 m ³ /hr (765 cfm)

(1) The Frame 13 690V AFE has only normal duty operation at nominal rated power and maximum ambient temperature at 35 °C (95 °F).

(2) For an AFE in the IP20 2500 MCC Style enclosure, this air means surrounding the outside of the enclosure.

Minimum Mounting Clearances

Figure 10 - Frame 10 in IP20 2500 MCC Style Enclosure


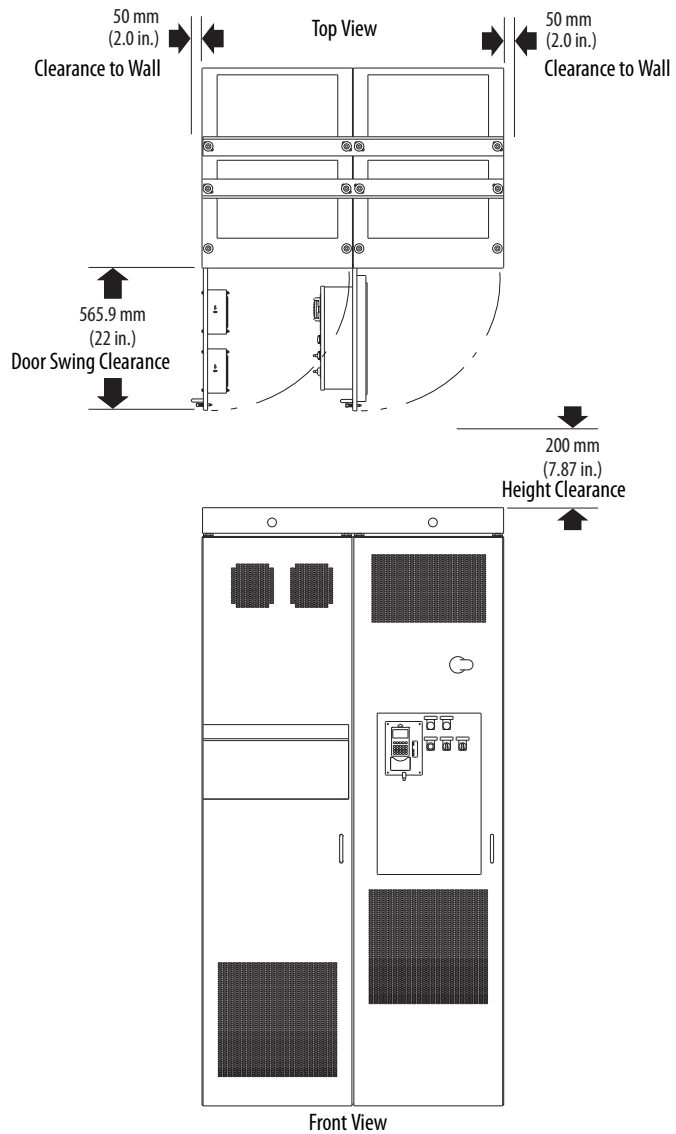


Figure 11 - Frame 13 in IP20 2500 MCC Style Enclosure

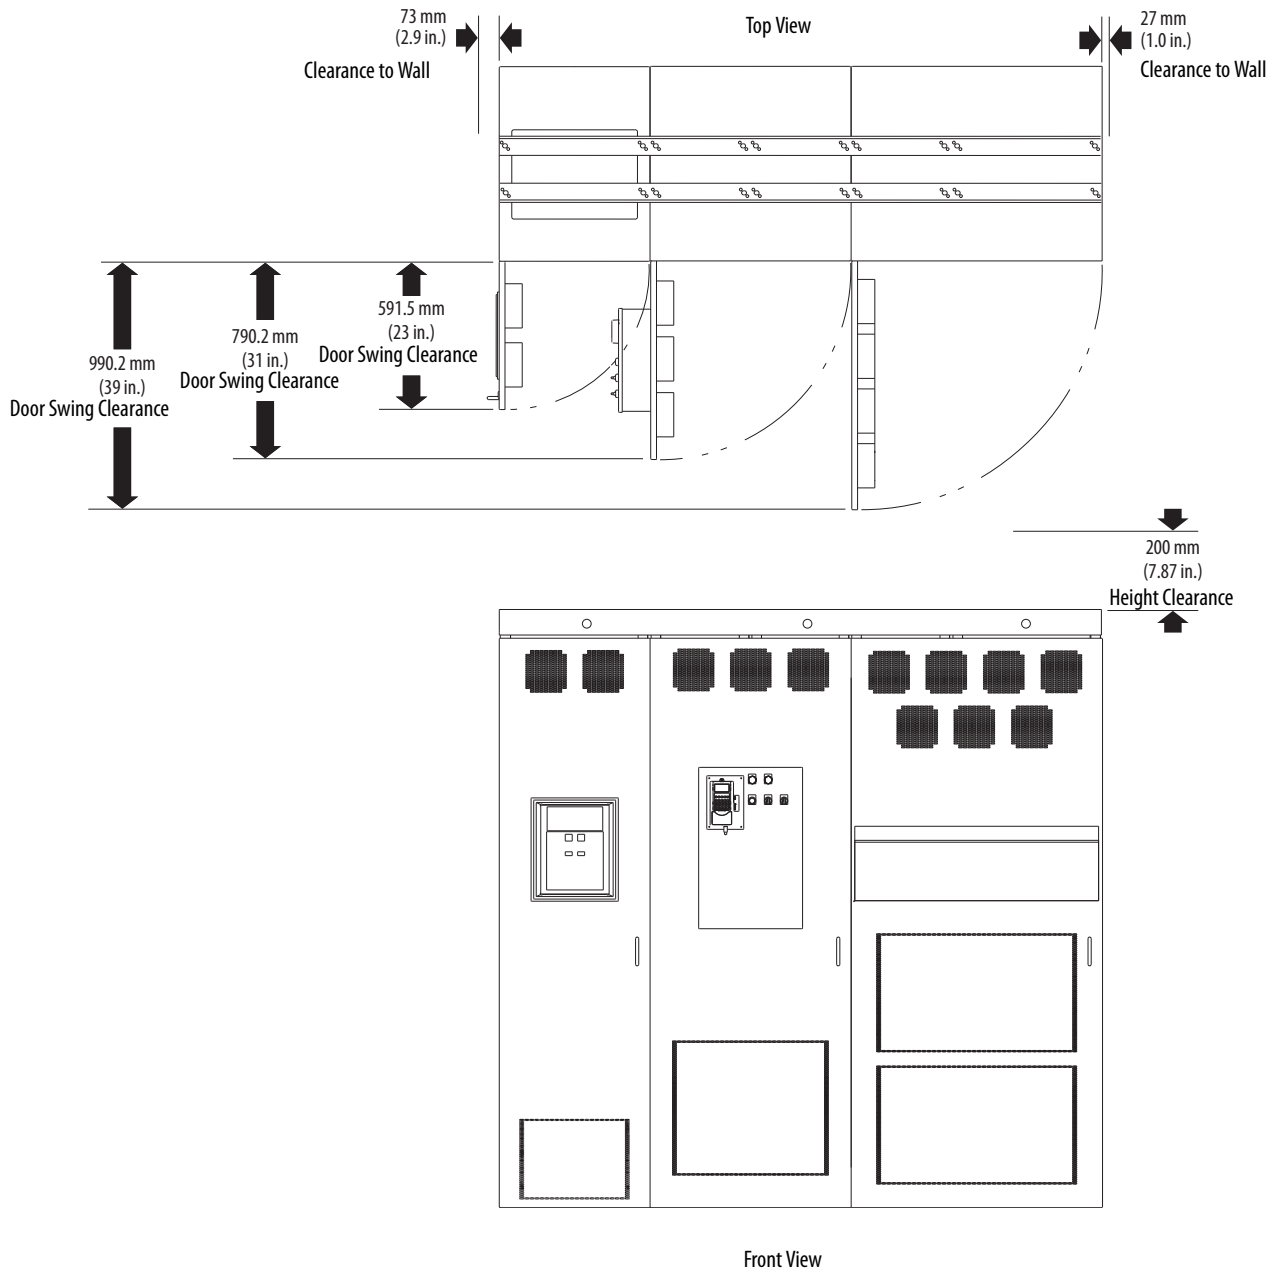

AC Supply Source Considerations

The AFE Frame 10 or Frame 13 in an IP20 2500 MCC Style enclosure is suitable for use on a circuit capable of delivering these ratings:

- 100,000 rms symmetrical amperes at 400/480V
- 65,000 rms symmetrical amperes at 600/690V

The AFE must not be used on undersized or high-impedance supply systems. The supply system kVA must be equal to or greater than the drive-related kW, and the system impedance must be less than 10%. Operation outside these limits can cause instability that results in the shutdown of the AFE.

System Impedance = (PowerFlex 700AFE kVA ÷ Transformer kVA) x Transformer % Impedance

You must consider the kVA of all PowerFlex AFEs on the distribution system and the system impedance of upstream transformers.



ATTENTION: To guard against personal injury and equipment damage that is caused by improper fusing or circuit breaker selection, use only the recommended line fuses or circuit breakers that are specified in [Appendix A](#).

If a residual current detector (RCD) is used as a system ground fault monitor, use only Type B (adjustable) devices to avoid nuisance tripping.

Unbalanced, Ungrounded, or Resistive Grounded Distribution Systems

If phase-to-ground voltage exceeds 125% of normal, or the supply system is ungrounded, see Wiring and Grounding Guidelines for Pulse Width Modulated (PWM) AC Drives, publication [DRIVES-IN001](#), for more information.



ATTENTION: The PowerFlex Active Front End is not designed to be used on IT (insulated terra) or corner-grounded power networks above 600V (phase-to-phase voltage). Operation on such a network can cause a hazardous failure of the insulation system of the AFE.



ATTENTION: The LCL filter of the PowerFlex Active Front End contains common mode capacitors that are referenced to ground. These devices **must be disconnected** if the AFE is installed on a resistive grounded distribution system or an ungrounded distribution system. See [Figure 20 on page 38](#) or [Figure 21 on page 39](#) for jumper locations.

Input Power Conditioning

These events on the power system that supplies an AFE can cause component damage or shortened product life:

- The power system has power factor correction capacitors that are switched in and out of the system, either by you or by the power company.
- The power source has intermittent voltage spikes in excess of 6000 volts. These spikes can be caused by other equipment on the line or by events such as lightning strikes.
- The power source has frequent interruptions.

Grounding Requirements

The Active Front End safety ground-PE must be connected to system ground. Ground impedance must conform to the requirements of national and local industrial safety regulations and electrical codes. Periodically check the integrity of all ground connections.

Recommended Grounding Scheme

For installations in which the AFE is within an enclosure, use one safety ground point or ground bus bar connected directly to building steel. All circuits including the AC input ground conductor must be grounded independently and directly to this point or ground bus bar.

Figure 12 - Typical Grounding Example for AFE Frame 10 in IP20 2500 MCC Style Enclosure


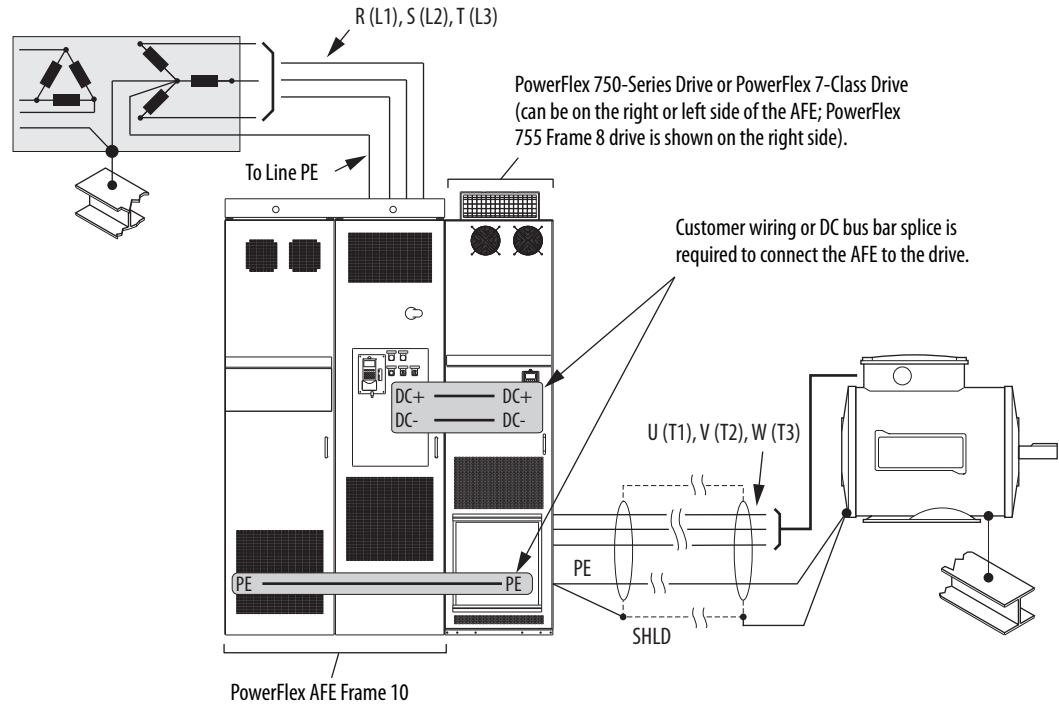


Figure 13 - Typical Grounding Example for AFE Frame 13 in IP20 2500 MCC Style Enclosure

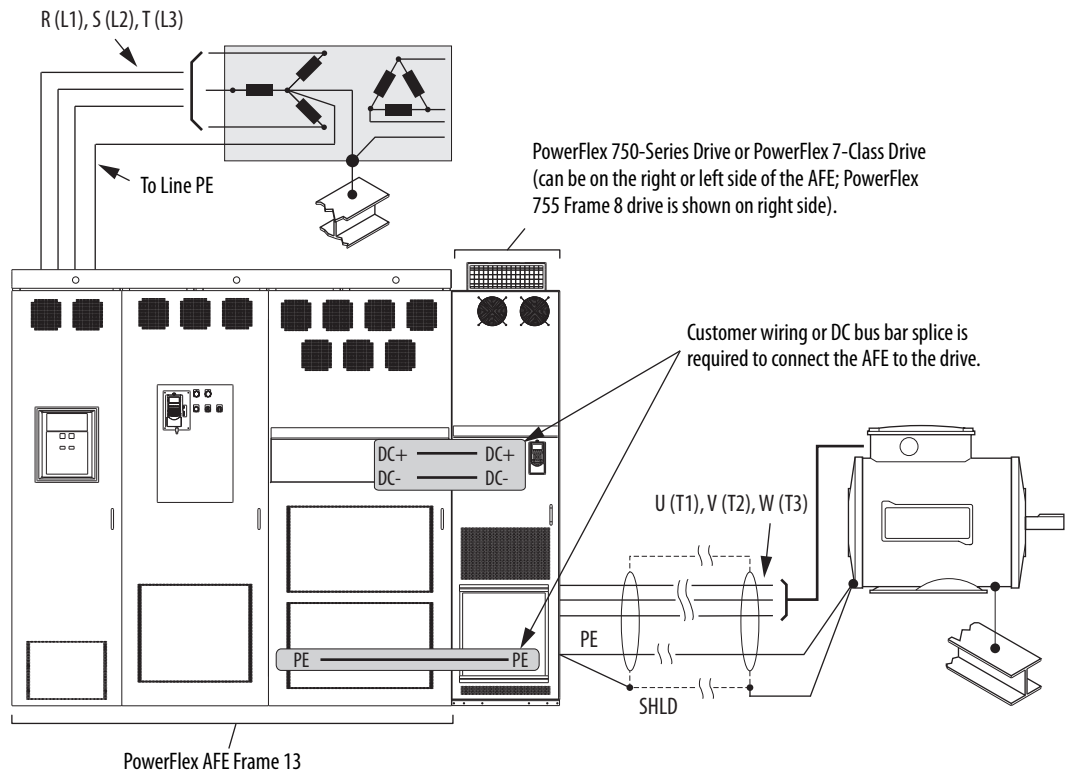

Safety Ground - PE and Shield Termination - SHLD

This ground is the safety ground for the AFE that code requires. This point must be connected to adjacent building steel (girder or joist), a floor ground rod, or bus bar (see [Figure 13](#)). Grounding points must comply with national and local industrial safety regulations and/or electrical codes.

The Shield terminal ([Figure 16](#) or [Figure 17](#)) provides a grounding point for the AFE cable shield. It must be connected to an earth ground by a separate continuous lead. The drive cable shield must be connected to this terminal on the AFE end and the drive frame on the drive end. Use a shield terminating or EMI clamp to connect the shield to this terminal.

Fuses and Circuit Breakers

The IP20 2500 MCC Style enclosure for the AFE includes AC input fuses, input circuit breaker (Q0), an input contactor (K1), and DC bus output fusing. The contactor is used for precharge operation. For details on precharge operation, see [page 47](#). For fuse and circuit breaker information, see [Appendix A](#). Local and national electrical codes can determine additional requirements for the installations.

Power Wiring

Most start-up difficulties are the result of incorrect wiring. Verify that the wiring is done as instructed. Read and understand the instructions before you begin to install the AFE.



ATTENTION: The following information is a guide for proper installation. Rockwell Automation does not assume responsibility for the compliance or noncompliance to any code, national, local, or otherwise, for the proper installation of this unit or associated equipment. A risk of personal injury and/or equipment damage exists if codes are ignored during installation.

Power Cable Types Acceptable for 400...690 Volt Installations



ATTENTION: National Codes and standards (NEC, VDE, CSA, BSI, and so forth) and local codes outline provisions for safely installing electrical equipment. Installation must comply with specifications regarding wire types, conductor sizes, branch circuit protection, and disconnect devices. Failure to do so can result in personal injury and/or equipment damage.

Various cable types are acceptable for PowerFlex Active Front End installations. For many installations, unshielded cable is adequate, provided it can be separated from sensitive circuits. As an approximate guide, use a spacing of 0.3 meters (1 ft) for every 10 meters (32.8 ft) of length. In all cases, avoid long parallel runs. Do not use cable with an insulation thickness less than or equal to 15 mils (0.4mm/0.015 in.). Use only copper wire. Wire gauge requirements

and recommendations are based on 75°C (167°F). Do not reduce wire gauge when using higher temperature wire.

Unshielded Cable

THHN, THWN, or similar wire is acceptable for PowerFlex Active Front End installation in dry environments provided adequate free air space and/or conduit fill rate limits are provided. **Do not use THHN or similarly coated wire in wet areas.** Any wire that is chosen must have a minimum insulation thickness of 15 mils and cannot have large variations in insulation concentricity.

Shielded Cable

Shielded cable contains the general benefits of multi-conductor cable with the added benefit of a copper braided shield. The shield can contain much of the noise that is generated by a typical AC drive. Shielded cable is recommended in installations with sensitive equipment such as weigh scales, capacitive proximity switches, and other devices affected by electrical noise in the distribution system.

Applications with large numbers of drives in a similar location, imposed EMC regulations, or a high degree of communication and networking are also good candidates for shielded cable.

Consider the general specifications that are dictated by the environment of the installation, including temperature, flexibility, moisture characteristics, and chemical resistance. Also, include a braided shield that is specified by the manufacturer as having coverage of at least 75%. An additional foil shield can improve noise containment.

A good example of recommended cable is Belden 29528 - 29532 (AWG-1 through AWG-410). This cable has three XLPE insulated conductors plus ground with a spiral copper shield that is surrounded by a PVC jacket.

Armored Cable

Cable with continuous aluminum armor is often recommended in drive system applications or specific industries. It offers most of the advantages of standard shielded cable and also combines considerable mechanical strength and resistance to moisture. It can be installed in concealed and exposed manners, and removes the requirement for conduit (EMT) in the installation. It can also be directly buried or embedded in concrete.

Because noise containment is affected by incidental grounding of the armor to building steel when the cable is mounted, we recommend that the armored cable has an overall PVC jacket. See Chapter 2, 'Wire Types' in Wiring and

Grounding Guidelines for Pulse Width Modulated (PWM) AC Drives, publication [DRIVES-IN001](#).

Interlocked armor is acceptable for shorter cable runs, but continuous welded armor is preferred.

Best performance is achieved with three spaced ground conductors, but acceptable performance below 200 Hp is provided by use of one ground conductor.

Recommended shielded/armored wire is listed in [Table 1](#).

Table 1 - Recommended Shielded/Armored Wire for AFE in IP20 2500 MCC Style Enclosure

Location	Rating/Type	Description
Standard (option 1)	1000V, 90 °C (194 °F) XHHW2/RHW-2 Anixter B29528-B29532 Belden 29528-29532 Or equivalent	<ul style="list-style-type: none"> • Four tinned copper conductors with XLPE insulation. • Copper braid/aluminum foil combination shield and tinned copper drain wire. • PVC jacket.
Standard (option 2)	Tray rated 1000V, 90 °C (194 °F) RHH/RHW-2 Anixter OLFLEX-76xxx03 Or equivalent	<ul style="list-style-type: none"> • Three tinned copper conductors with XLPE insulation. • Corrugated copper tape with three bare copper grounds in contact with shield. • PVC jacket.
Class I & II; Division I & II	Tray rated 1000V, 90 °C (194 °F) RHH/RHW-2 Anixter 7VFD-xxxx Or equivalent	<ul style="list-style-type: none"> • Three bare copper conductors with XLPE insulation and impervious corrugated continuously welded aluminum armor. • Black sunlight resistant PVC jacket overall. • Three copper grounds.

Cable Trays and Conduit



ATTENTION: To avoid a possible shock hazard that is caused by induced voltages, unused wires in the conduit must be grounded at both ends. For the same reason, if a drive that shares a conduit is being serviced or installed, all drives that use this conduit must be disabled. Disable the drives to help minimize the possible shock hazard from ‘cross coupled’ motor leads.

If cable trays or large conduits are used, see the guidelines in [Wiring and Grounding Guidelines for Pulse Width Modulated \(PWM\) AC Drives](#), publication [DRIVES-IN001](#).


Select and Verify Control Transformer Voltage

The control transformer in the AFE is used to match the input AC line voltage of the AFE in an IP20 2500 MCC Style enclosure to the 230V and 120V control voltage.

Verify that the control voltage is set appropriately for the supplied AC line voltage. If necessary, use this procedure to change the control voltage.

1. Locate the X3 terminal block (Figure 14).


Figure 14 - X3 Terminal Block Location for AFE in IP20 2500 MCC Style Enclosure

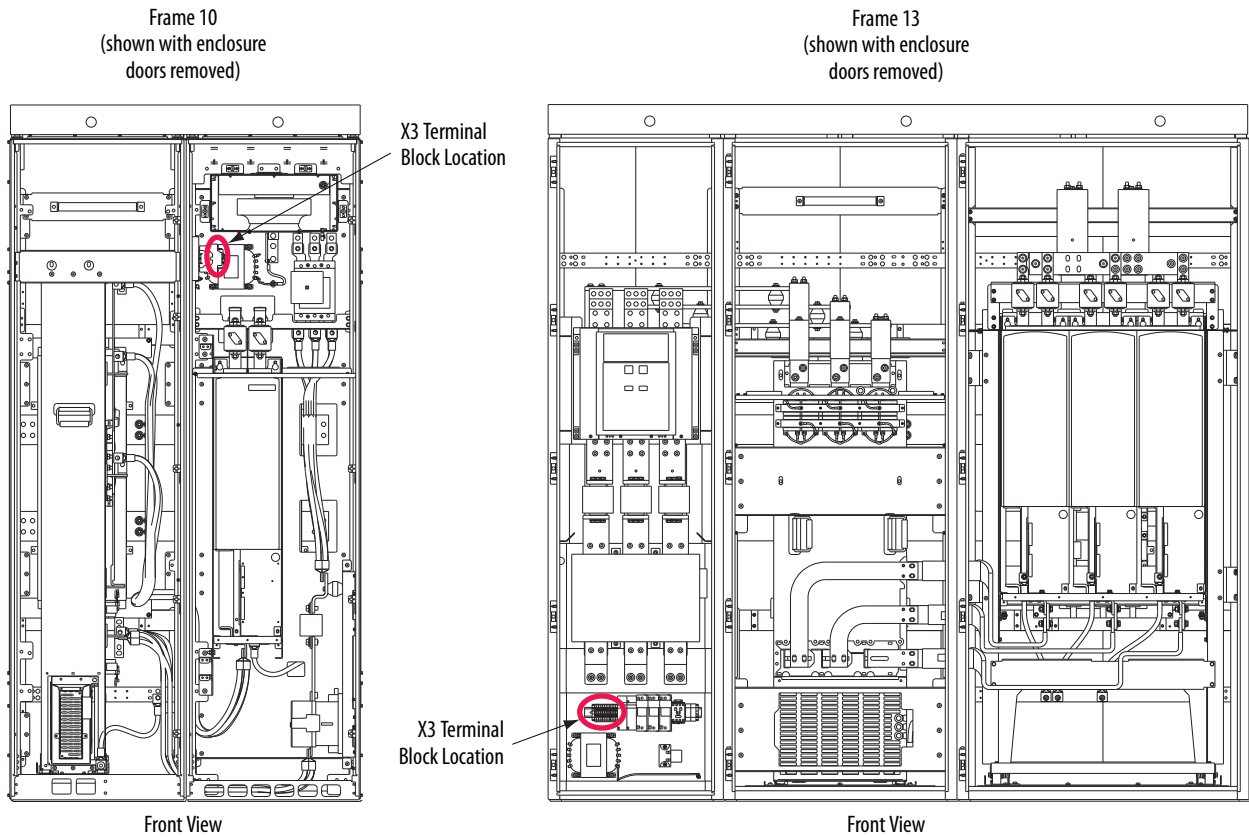

2. To match the AC line voltage, move the wire that is shown in Figure 15 to the appropriate X3 terminal.

Figure 15 - Input Voltage Setting for Control Voltage on Frames 10 and 13 in IP20 2500 MCC Style Enclosure

For 400/480V or 600/690VAC Input

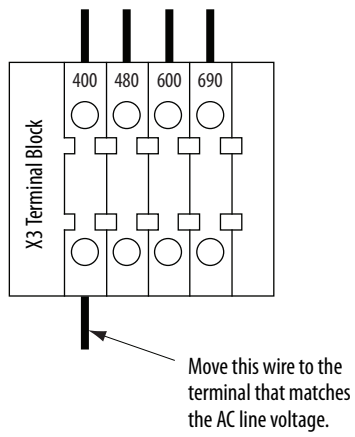

Power Terminals for AFE in IP20 2500 MCC Style Enclosure

Figure 16 and Figure 17 show the power terminal locations and specifications for AFE Frames 10 and 13 in an IP20 2500 MCC Style enclosure.

Figure 16 - AFE Frame 10 Power Terminal Locations in IP20 2500 MCC Style Enclosure

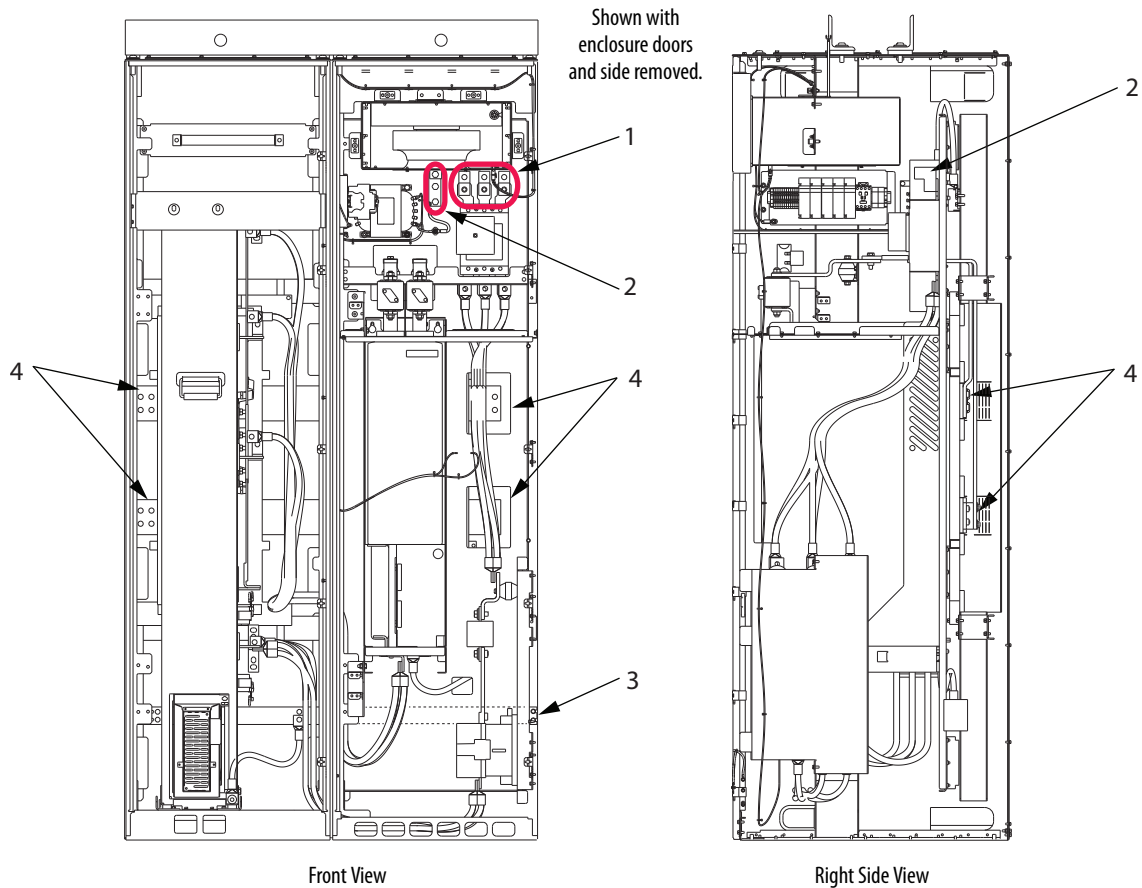


Table 2 - AFE Frame 10 Power Terminal Specifications in IP20 2500 MCC Style Enclosure

Item	Name	Frame	Description	Wire Size Range ^{(1) (2)}		Torque	Terminal Bolt Size ^{(3) (4)}
				Max	Min	Recommended	
1	Input power terminals L1, L2, L3 ⁽¹⁾	10	Input power	240 mm ² (500 MCM)	95 mm ² (3/0 AWG)	40 N•m (354 lb•in)	N/A
2	SHLD terminal, line PE, ground ⁽³⁾	10	Terminating point for wiring shields	300 mm ² (600 MCM)	2.1 mm ² (14 AWG)	40 N•m (354 lb•in)	M5-M10
3	SHLD terminal, motor PE, ground ⁽³⁾						
4	DC bus ⁽³⁾ (DC-, DC+)	10	DC output (using cable)	240 mm ² (500 MCM)	2.1 mm ² (14 AWG)	70 N•m (620 lb•in)	M12
			DC output (using splice kit SK-Y1-BUSSPLICE-F10)	—	—	40 N•m (354 lb•in)	M10

- (1) Maximum/minimum sizes that the terminals can accept. These sizes are not recommendations.
- (2) Do **not** exceed maximum wire size. Parallel connections can be required.
- (3) These connections are bus bar type terminations and require the use of lug type connectors.
- (4) Apply counter-torque to the nut on the other side of terminations when tightening or loosening the terminal bolt to avoid damage to the terminal.

Figure 17 - AFE Frame 13 Power Terminal Locations in IP20 2500 MCC Style Enclosure

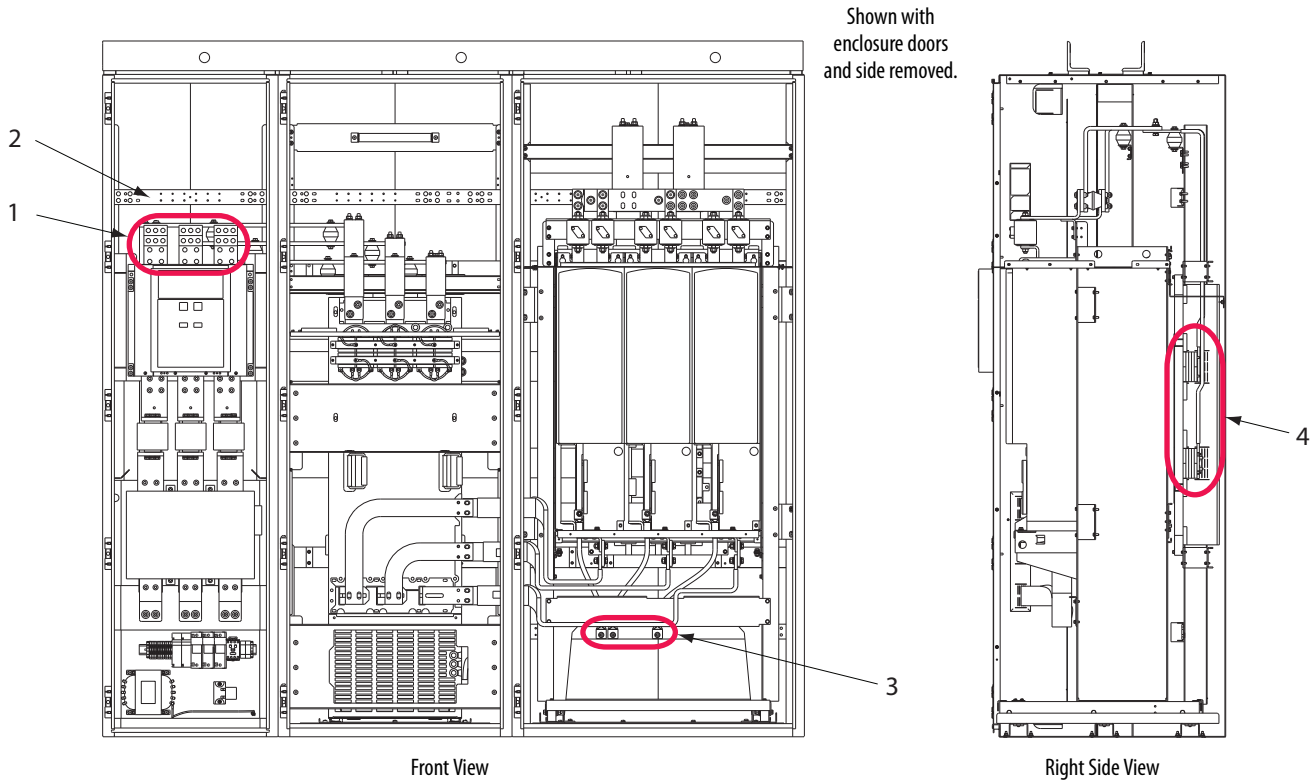


Table 3 - AFE Frame 13 Power Terminal Specifications in IP20 2500 MCC Style Enclosure

Item	Name	Frame	Description	Wire Size Range ^{(1) (2)}		Torque	Terminal Bolt Size ^{(3) (4)}
				Max	Min	Recommended	
1	Input power terminals L1, L2, L3 ⁽¹⁾	13	Input power	380 mm ² (750 MCM)	53 mm ² (1/0 AWG)	50 N•m (442 lb•in)	N/A
2	SHLD terminal, line PE, ground ⁽³⁾	13	Terminating point for wiring shields	300 mm ² (600 MCM)	2.1 mm ² (14 AWG)	40 N•m (354 lb•in)	M5-M10
3	SHLD terminal, motor PE, ground ⁽³⁾						
4	DC bus ⁽³⁾ (DC-, DC+)	13	DC output (using cable)	380 mm ² (750 MCM)	2.1 mm ² (14 AWG)	70 N•m (620 lb•in)	M12
			DC output (using right-side splice kit SK-Y1-BUSSPLICE-F13R)	—	—	40 N•m (354 lb•in)	M10
			DC output (using left-side splice kit SK-Y1-BUSSPLICE-F13L)	—	—		

- (1) Maximum/minimum sizes that the terminals can accept. These sizes are not recommendations.
- (2) Do **not** exceed maximum wire size. Parallel connections can be required.
- (3) These connections are bus bar type terminations and require the use of lug type connectors.
- (4) Apply counter-torque to the nut on the other side of terminations when tightening or loosening the terminal bolt to avoid damage to the terminal.

Route the AC Input, Ground (PE), and DC Bus Output Wiring for AFE in IP20 2500 MCC Style Enclosure



ATTENTION: To minimize disruption of airflow through the enclosure and avoid overheating within the AFE enclosure, remove only the minimum area that is needed to route the power cables.

When you remove any of the five side cover-plates (shaded areas that are shown in [Figure 18](#)) for routing the AC input, ground (PE), and DC bus output wiring, always use the barrier kit, catalog number SK-Y1-MCCBARRIER, to maintain airflow integrity through the enclosure.


When you remove sections for routing in other areas, airflow is disrupted throughout the enclosure, and causes overheating.

Frame 10

The AC input and ground (PE) wiring for the IP20 2500 MCC Style enclosure must be routed through the top of the enclosure.

The DC bus output can be routed through either the left or right side of the enclosure (see shaded areas in [Figure 18](#)).

Figure 18 - Routing Areas for AC Input, Ground, and DC Bus Output Wiring for AFE Frame 10 in IP20 2500 MCC Style Enclosure

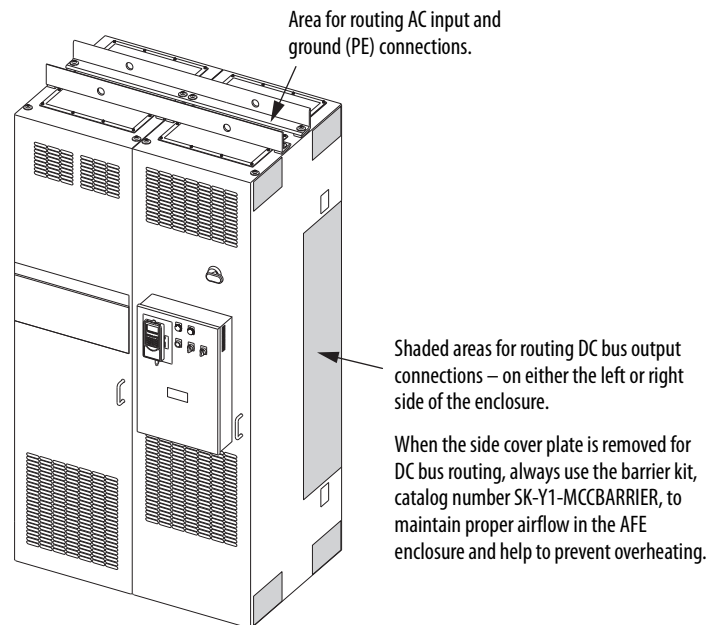


Frame 13

The AC input and ground (PE) wiring for the IP20 2500 MCC Style enclosure must be routed through the top of the enclosure.

The DC bus output can be routed through either the left or right side of the enclosure (see shaded area in [Figure 19](#)).

Figure 19 - Routing Areas for AC Input, Ground, and DC Bus Output Wiring for AFE Frame 13 in IP20 2500 MCC Style Enclosure

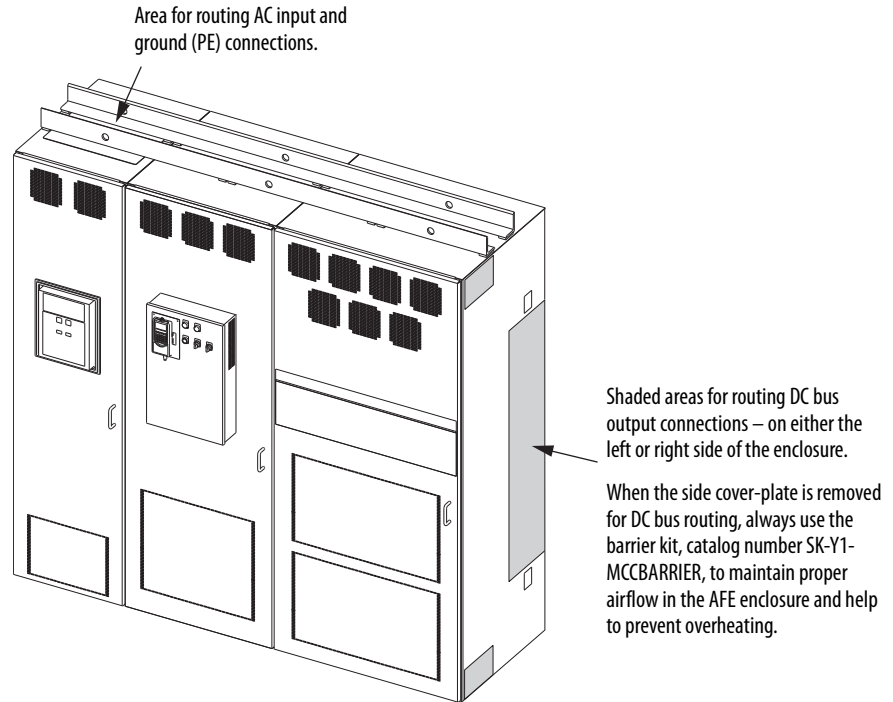

Disconnect the Common Mode Capacitors

Frame 10 LCL Filter

The Frame 10 AFE LCL filter contains common mode capacitors that are referenced to ground. To guard against AFE damage, disconnect these devices if the AFE is installed in either of these systems:

- A high-resistance grounded distribution system
- An ungrounded distribution system where the line-to-ground voltages on any phase exceed 125% of the nominal line-to-line voltage.


To access the common mode capacitors, the LCL filter must be removed from the enclosure. To remove the Frame 10 AFE LCL filter from the IP20 2500 MCC Style enclosure, see the instructions in the PowerFlex Active Front End—Frame 10 Hardware Service Manual, publication [20Y-TG001](#).



ATTENTION: To avoid an electric shock hazard, verify that the voltage on the bus capacitors has discharged completely before you remove or install any jumpers. Check the DC bus voltage between the +DC and –DC terminals, between the +DC terminal and the chassis, and between the –DC terminal and the chassis. The voltage must be zero for all three measurements.

To disconnect the common mode capacitors, remove the jumpers that are shown in [Figure 20](#). For more information on ungrounded system installation, see *Wiring and Grounding Guidelines for Pulse Width Modulated (PWM) AC Drives*, publication [DRIVES-IN001](#).

Figure 20 - AFE Frame 10 LCL Filter Common Mode Capacitor Jumper Locations

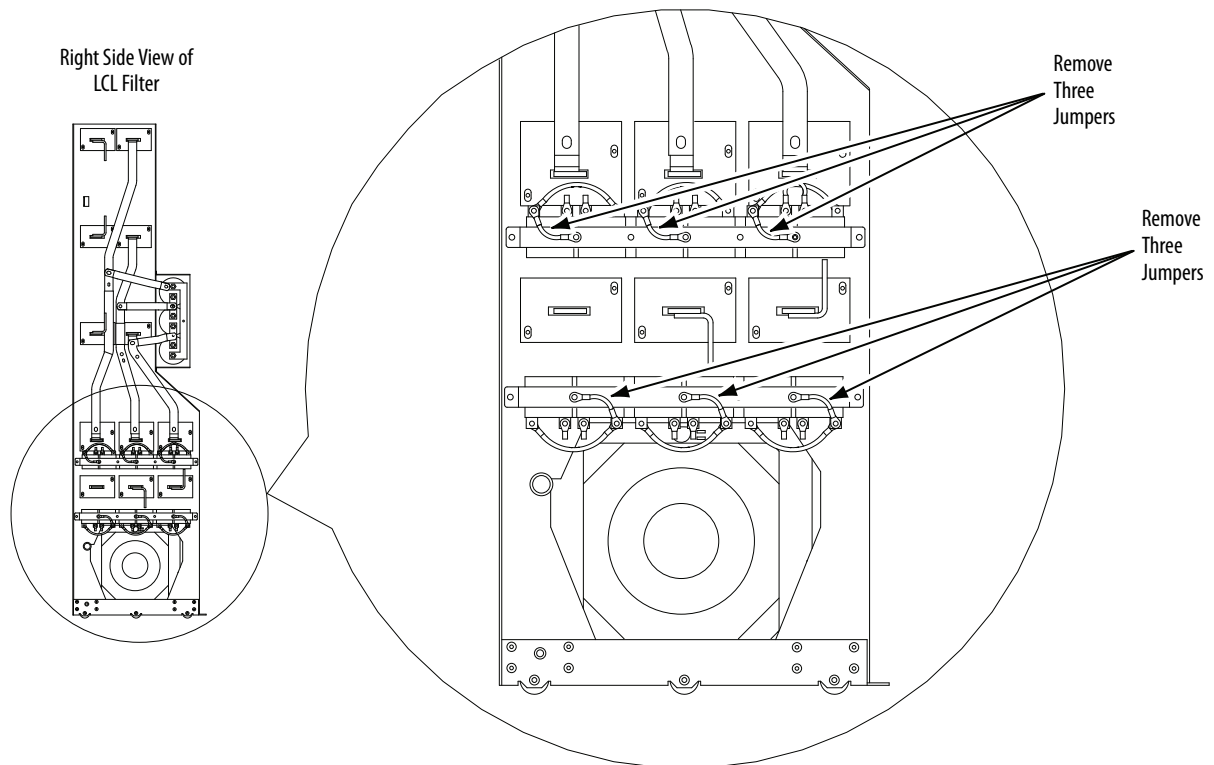

Frame 13 LCL Filter

The Frame 13 AFE LCL filter contains common mode capacitors that are referenced to ground. To guard against AFE damage, disconnect these devices if the AFE is installed in either of these systems:

- A high-resistance grounded distribution system
- An ungrounded distribution system where the line-to-ground voltages on any phase exceed 125% of the nominal line-to-line voltage.


To remove the AFE Frame 13 LCL filter from the IP20 2500 MCC Style enclosure, see the instructions in the *PowerFlex Active Front End—Frame 13 Hardware Service Manual*, publication [20Y-TG002](#).



ATTENTION: To avoid an electric shock hazard, verify that the voltage on the bus capacitors has discharged completely before you remove or install any jumpers. Check the DC bus voltage between the +DC and –DC terminals, between the +DC terminal and the chassis, and between the –DC terminal and the chassis. The voltage must be zero for all three measurements.

To disconnect the common mode capacitors, remove the upper guard and then remove the jumpers that are shown in [Figure 21](#). For more information on ungrounded system installation, see *Wiring and Grounding Guidelines for Pulse Width Modulated (PWM) AC Drives*, publication [DRIVES-IN001](#).

Figure 21 - AFE Frame 13 LCL Filter Common Mode Capacitor Jumper Locations

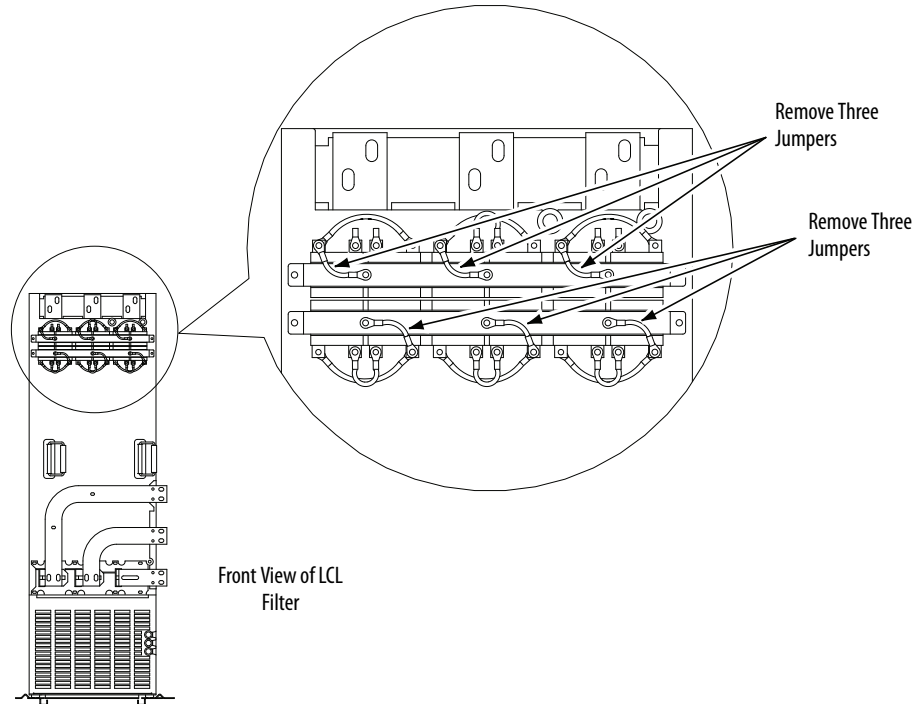

Frame 10 or Frame 13 Power Structure

IMPORTANT The Frame 10 or Frame 13 AFE in an IP20 2500 MCC Style enclosure is shipped from the factory with the common mode capacitors removed. You do not need to remove the capacitors. However, when you replace a power structure, **you must remove the common mode capacitors in the new power structure** before installation. See [Frame 10 Power Structure on page 72](#) or [Frame 13 Power Structure on page 73](#) for instructions.

Use the AFE with PowerFlex Drives

When the Active Front End is used with drives that have common mode capacitors (for example, PowerFlex 7-Class or PowerFlex 750-Series drives), the common mode capacitors of these drives **must be disconnected**. See the documentation for the respective drives.

When supplying power to PowerFlex drives of different frame sizes on the same DC bus, additional bus capacitance can be needed. For details, see *Drives in Common Bus Configurations*, publication [DRIVES-AT002](#).

Control Wiring

The AFE in an IP20 2500 MCC Style enclosure is wired at the factory and programmed to operate from the operator switches on the front of the enclosure. See [Table 7](#) and [Figure 23](#) for I/O terminal designations. If customized (or remote) control is required, then you must change the control wiring and correspondent digital I/O parameter setting.

Here are some important points to remember about I/O wiring:

- Always use copper wire.
- Wire with an insulation rating of 600V or greater is recommended.
- Control and signal wires must be separated from power wires by at least 0.3 meters (1 foot).
- When it is unavoidable to cross control and signal wires with power wires, always cross power wires at a 90° angle.

IMPORTANT I/O terminals that are labeled '(–)' or 'Common' are not referenced to earth ground. They are designed to reduce common mode interference. Grounding these terminals can cause signal noise.



ATTENTION: Inputs must be configured with software and jumpers (see [Analog I/O Configuration on page 46](#)). If you configure an analog input for 0...20 mA operation and drive it from a voltage source, you can cause component damage. Verify proper configuration before you apply input signals.



ATTENTION: It is important to disable the variable frequency drives that are connected to the AFE output when the AFE is not active (not modulating). Connect the 'Inverter Enable' output of the AFE to each variable frequency drive enable input, or enable parameter 132 [Contact Off Cnfg] to force off the main contactor if there is a fault. This action makes sure that once the AFE stops modulating, there is no motoring current flowing through the AFE IGBT diodes. Failure to disable the AFE output can result in component damage or a reduction in product life.

When you enable parameter 132, see [page 109](#) for details. The AFE is shipped with parameter 132 disabled. The disabled parameter does not stop or shut down DC output when a fault occurs.

Signal and Control Wire Types

Table 4 - Recommended Signal Wire for AFE in IP20 2500 MCC Style Enclosure


Signal Type	Wire Types	Description	Minimum Insulation Rating
Analog I/O	Belden 8760/9460 (or equivalent)	0.5 mm ² (22 AWG), twisted pair, 100% shield with drain ⁽¹⁾	300V, 75...90 °C (167...194 °F)
	Belden 8770 (or equivalent)	0.5 mm ² (22 AWG), 3-conductor, shielded for remote pot only	
EMC compliance	See CE Conformity on page 49 for details.		

(1) If the wires are short and contained within an enclosure that has no sensitive circuits, the use of shielded wire is not necessary, but is always recommended.

Table 5 - Recommended Control Wire for Digital I/O


Type	Wire Types	Description	Minimum Insulation Rating
Unshielded	Per US NEC or applicable national or local code	—	300V, 60 °C (140 °F)
Shielded	Multi-conductor shielded cable such as Belden 8770 (or equivalent)	0.5 mm ² (22 AWG), 3-conductor, shielded	

Figure 22 - Door Control Box I/O Terminal Blocks and Jumpers

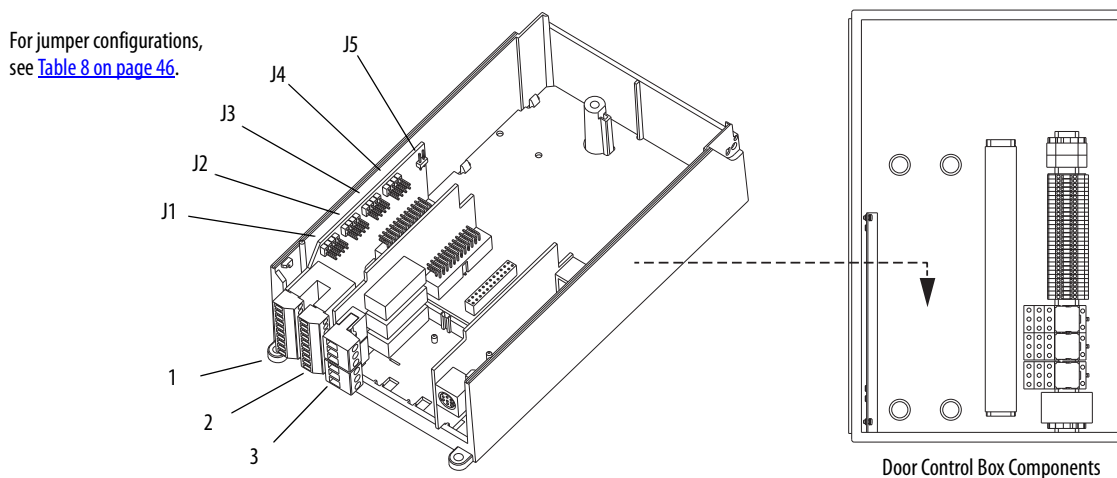

For jumper configurations, see [Table 8 on page 46](#).

Components that are mounted on inside of AFE enclosure (see [Figure 14](#) for location).

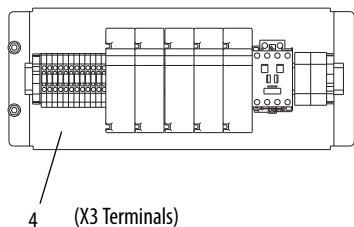

X3 Term. No.	Default	Description
57 and 60	—	Remote momentary pulse of 0.4...1.0 sec. across these terminals starts precharge in REM mode when terminals 58 and 61 are remotely closed.
58 and 61	—	These terminals must be remotely closed to start precharge. Opening these terminals opens the main contactor K1.
63 and 64	—	Remotely closing these terminals resets an AFE fault.
65 and 66	—	AFE run signal to the inverter enable input.
400 and 480	480	Control input voltage setting.
600 and 690	690	

See [Table 6](#) for door-control box item number descriptions and specifications.

I/O Terminal Blocks


Table 6 - Door Control Box I/O Terminal Block Specifications for AFE in IP20 2500 MCC Style Enclosure

No.	Name	Description	Wire Size Range ⁽¹⁾		Torque	
			Max	Min	Max	Recommended
1	Analog I/O	Analog I/O signals	2.5 mm ² (14 AWG)	0.5 mm ² (22 AWG)	0.2 N•m 1.8 lb•in	0.2 N•m 1.8 lb•in
2	Digital inputs	Digital input signals	2.5 mm ² (14 AWG)	0.5 mm ² (22 AWG)	0.2 N•m 1.8 lb•in	0.2 N•m 1.8 lb•in
3	Digital outputs	Digital out relays	2.5 mm ² (14 AWG)	0.5 mm ² (22 AWG)	0.5 N•m 4.5 lb•in	0.5 N•m 4.5 lb•in
4	Control terminal	Customer input and output control	2.5 mm ² (14 AWG)	0.5 mm ² (22 AWG)	0.8 N•m 7.1 lb•in	0.8 N•m 7.1 lb•in

(1) Maximum/minimum that the terminal block can accept. These sizes are not recommendations.

I/O Cable Grounding

When installing shielded multi-conductor cable for analog and digital I/O, strip the cable from the terminal plug so you can fix it to the cable clamp for grounding.


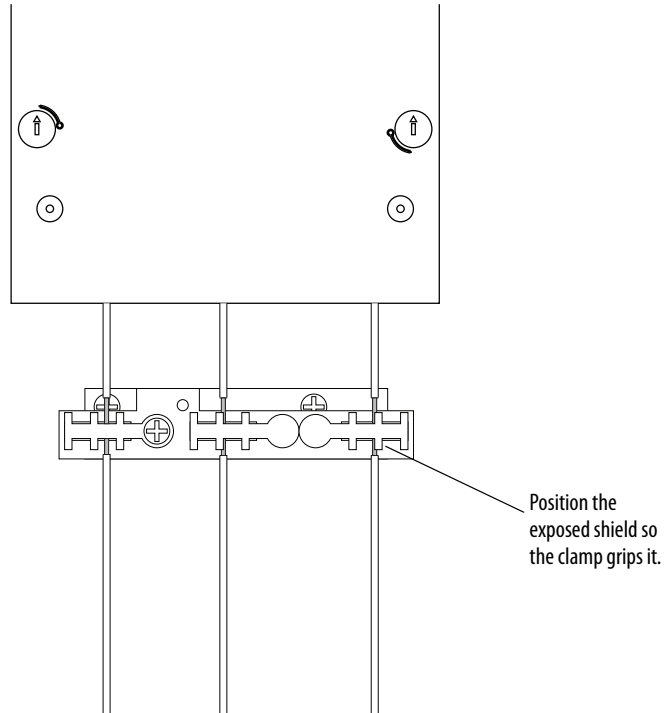


IMPORTANT: This clamp is not designed for strain relief.



ATTENTION: For the AFE in the IP20 2500 MCC Style enclosure, digital inputs 1, 3, 4, and 5, and digital outputs 1 and 2, are wired at the factory and programmed to operate from the controls on the front of the enclosure. Digital output 3 is programmable and factory-wired for +24V DC only. Do not change the wiring and programming for those digital inputs and outputs, or it results in malfunction of the system.

Table 7 - Door Control Box I/O Terminal Designations for AFE in IP20 2500 MCC Style Enclosure

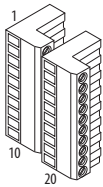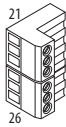
	No.	Signal	Default Configuration	Description
	1	Analog In 1 (-) ⁽¹⁾	(2)	Isolated ⁽³⁾ , bipolar, differential, 9-bit and sign, 88k Ω input impedance. A jumper (see Table 8) selects 0...10V, ±10V, or 4...20 mA. Default: 0...10V (Ri = 200k Ω), 4...20 mA (Ri = 100 ohm).
	2	Analog In 1 (+) ⁽¹⁾		
	3	Analog In 2 (-) ⁽¹⁾		
	4	Analog In 2 (+) ⁽¹⁾		
	5	-10V Pot Reference	—	2k Ω min, 10 mA max load, 1% accuracy
	6	Pot Common (GND)		For (+) and (-) 10V pot references
	7	+10V Pot Reference	—	2k Ω min, 10 mA max load, 1% accuracy
	8	Analog Out 1 (+)	(2)	Bipolar (current out is not bipolar), 9-bit and sign, 2k Ω min load. A jumper (see Table 8) selects 0...10V, ±10V, or 4...20 mA.
	9	Analog Out Common		
	10	Analog Out 2 (+)		
	11	Digital In 1	RunCmd	24V DC - Opto isolated (250V)
	12	Digital In 2	Ext. Reset	Low state: less than 5V DC High state: greater than 20V DC, 11.2 mA DC
	13	Digital In 3	Enable Mcont	Enable: digital input 6 is jumper selectable for HW Enable. On-time: < 16.7 ms, Off-Time < 1 ms
	14	Digital In 4	Contact Ack	
	15	Digital In 5	LCL Temp	
	16	Digital In 6/Hardware Enable, see page 46		
	17	Digital In Common		Allows source or sink operation
	18			
	19	+24V DC ⁽⁴⁾	—	Unit supplied logic input power
	20	24V Common ⁽⁴⁾	—	Common for internal power supply
	21	Digital Out 1 – N.C. ⁽⁵⁾	Contact Ctrl	Max Resistive Load: 240V AC/30V DC – 1200VA, 150 W Max current: 5 A, Min Load: 10 mA Max. Inductive Load: 240V AC/30V DC – 840VA, 105 W Max current: 3.5 A, Min Load: 10 mA IMPORTANT: See the Attention above this table for more details.
	22	Digital Out 1 Common		
	23	Digital Out 1 – N.O. ⁽⁵⁾		
	24	Digital Out 2 – N.C. ⁽⁵⁾	Fault	
	25	Digital Out 2/3 Com.		
	26	Digital Out 3 – N.O. ^{(5) (6)}	Active	

- (1) **Important:** Input must be configured with a jumper. AFE damage can occur if jumper is not installed properly. See [Analog I/O Configuration on page 46](#).
- (2) These inputs/outputs are dependent on a number of parameters.
- (3) Differential Isolation - External source must be maintained at less than 160V regarding PE. Input provides high common mode immunity.
- (4) 150 mA maximum load. Can be used to provide control power from an external 24V source when main power is not applied.
- (5) Contacts in unpowered state. Any relay that is programmed as Fault or Alarm energizes (pick up) when power is applied to the AFE, and de-energizes (drop out) when a fault or alarm exists. Relays selected for other functions energize only when that condition exists and de-energizes when the condition is removed.
- (6) These sizes are not recommendations When this output is configured as active, it can be wired to the Enable input of the connected drives to prevent the AFE from supplying power when the AFE is not running.

Typical I/O Wiring

The IP20 2500 MCC Style enclosure for the AFE is wired at the factory and programmed to operate from the operator switches on the front of the enclosure. The AFE in the IP20 2500 MCC Style enclosure has an input contactor K1. The AFE is configured to run when precharge is complete, the contactor is closed, and no faults are present. [Figure 23](#) shows the factory-installed wiring.

Figure 23 - Factory-installed Wiring Diagram for AFE in IP20 2500 MCC Style Enclosure

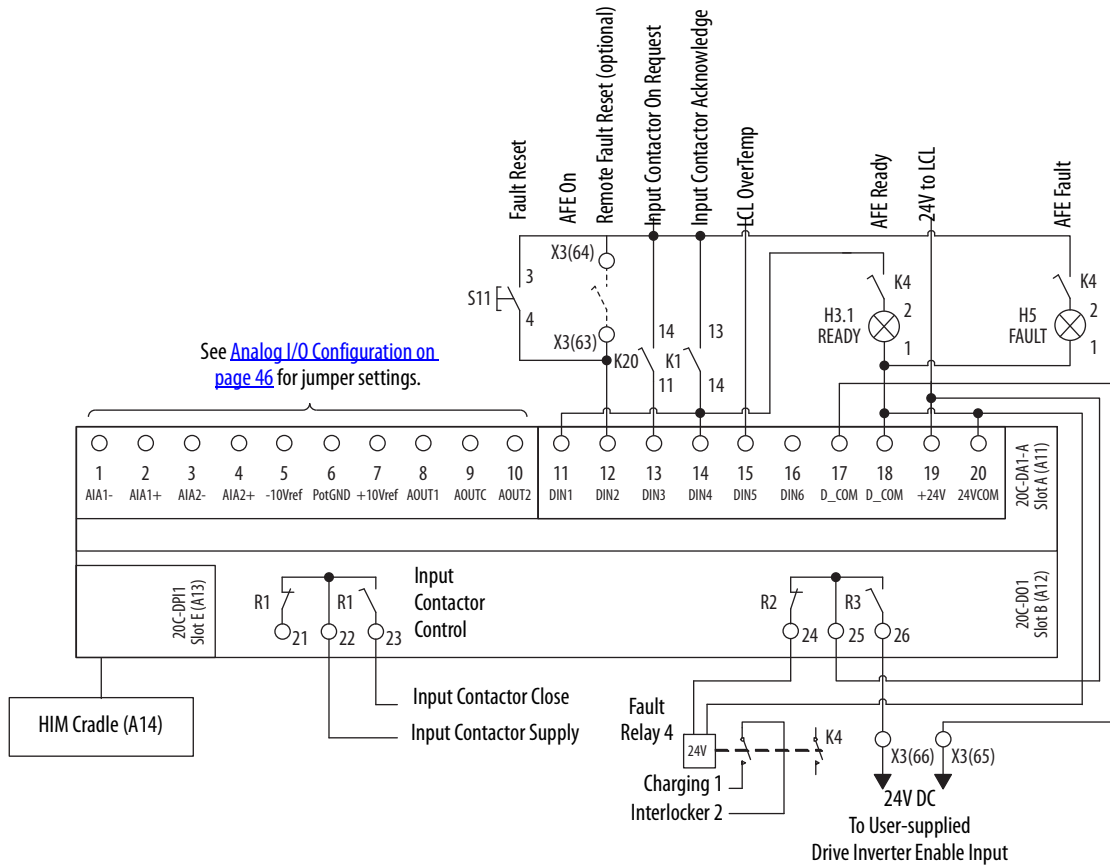

Analog I/O Configuration

IMPORTANT Analog I/O must be configured through programming, and the jumpers shown in [Table 8](#). See [Figure 22](#) for jumper locations and [Table 8](#) for I/O jumper configurations.

Table 8 - I/O Configuration for AFE in IP20 2500 MCC Style Enclosure

Signal	Jumper	Setting		
Analog inputs	J1 (analog in 1) J2 (analog in 2)	0...20 mA	0...10V	±10V
Analog outputs	J3 (analog out 1) J4 (analog out 2)	0...20 mA	0...10V	±10V

Hardware Enable Circuitry



ATTENTION: For the AFE in the IP20 2500 MCC Style enclosure, digital inputs 1, 3, 4, and 5, and digital outputs 1 and 2, are wired at the factory and programmed to operate from the controls on the front of the enclosure. Do not change the wiring and programming for those digital inputs and outputs, or it results in malfunction of the system.

You can program a digital input as an Enable input. The AFE software interprets the status of this input. If the application requires the AFE to be disabled without software interpretation, a dedicated hardware enable configuration can be used.

Remove jumper J5 ([Figure 22](#)) and wire the enable input to Digital In 6 (see [Table 9](#)). Verify that [Digital In6 Sel], parameter 226, is set to '1' (Enable).

Table 9 - Hardware Enable Configuration for AFE in IP20 2500 MCC Style Enclosure

Signal	Jumper	Setting	
Hardware Enable	J5	Hardware enable	Input programmable (no hardware enable)

Analog I/O Wiring Examples for AFE in IP20 2500 MCC Style Enclosure

Input/Output	Connection Example	Required Parameter Changes
Potentiometer unipolar DC volt reference 10k Ω Pot. recommended (2k Ω Min)		<ul style="list-style-type: none"> Configure input for voltage: Parameter 200 and set appropriate jumper per Table 8. Adjust scaling: Parameters 80/81 and 204/205 View results: Parameter 018
Analog voltage input unipolar DC volt reference 0...10V input		<ul style="list-style-type: none"> Configure input for voltage: Parameter 200 and set appropriate jumper per Table 8. Adjust scaling: Parameters 80/81 and 204/205 View results: Parameter 018
Analog current input unipolar DC volt reference 4...20 mA input		<ul style="list-style-type: none"> Configure input for current: Parameter 200 and set appropriate jumper per Table 8. Adjust scaling: Parameters 80/81 and 204/205 View results: Parameter 018.
Analog output \pm 10V, 4...20 mA bipolar +10V unipolar (shown)		<ul style="list-style-type: none"> Configure with Parameter 207 and set appropriate jumper per Table 8. Select source value: Parameter 209 - [Analog Out1 Sel] Adjust scaling: Parameters 210/211

Precharging the AFE

This section contains important information about AFE precharging.

Introduction

An AFE in the IP20 2500 MCC Style enclosure contains an internal precharging circuit. The precharging unit is used to charge the DC bus capacitors. The charging time depends on the capacitance of the intermediate circuit and the resistance of the charging resistors. [Table 10](#) shows the technical specifications for the precharge in the AFE enclosure. For correct operation of the precharging circuit, verify that the input circuit breaker (Q0) is on, and the input contactor (K1) and precharging circuit contactor are controlled by the AFE.

Table 10 - Total DC Bus Capacitance Limits for Precharging Circuit of AFE in IP20 2500 MCC Style Enclosure

Frame Size	Resistance	Capacitance, min ⁽¹⁾	Capacitance, max ⁽²⁾
10	2 x 25 Ω	9900 μ F	70,000 μ F
13	1 x 11 Ω (3 x 3.67 Ω)	29,700 μ F	128,000 μ F

- (1) The minimum capacitance is built into the AFE.
- (2) The maximum capacitance is the capacitance of the AFE plus the external capacitance.



ATTENTION: If the maximum capacitance is exceeded, component damage in AFE occurs.

Important Guidelines

Read and understand these guidelines:

- If drives **without** internal precharge are used and a disconnect is installed between the input of the drive and the DC bus, you must use an external precharge circuit between the disconnect and the DC input of the drive.
- If drives **with** internal precharge are used with a disconnect switch to the common bus, you must connect an auxiliary contact on the disconnect to a digital input of the drive. The corresponding input must be set to the 'Precharge Enable' option. This option provides the proper precharge interlock, guarding against possible damage to the drive when connected to a common DC bus.
- The precharge status of the AFE must be interlocked with the connected drives, such that the drives are disabled (not running) when the AFE is in a precharge state.

CE Conformity

Conformity with the Low Voltage (LV) Directive and Electromagnetic Compatibility (EMC) Directive has been demonstrated by using harmonized European Norm (EN) standards that are published in the Official Journal of the European Communities. PowerFlex Active Front End units comply with the EN standards listed here when installed according to this User Manual and the PowerFlex Drive Reference Manual.

Declarations of Conformity are available online at this link:

<http://www.rockwellautomation.com/certification/overview.page>

Low Voltage Directive (2006/95/EC)

EN61800-5-1 Adjustable speed electrical power drive systems Part 5-1: Safety requirements – Electrical, thermal and energy.

EMC Directive (2004/108/EC)

EN61800-3 Adjustable speed electrical power drive systems Part 3: EMC product standard including specific test methods.

General Notes

- The AFE can cause radio frequency interference if used in a residential or domestic environment. You are required to take measures to help prevent interference, and follow the essential requirements for CE compliance that is listed here, if necessary.
- Conformity of the AFE with CE EMC requirements does not guarantee an entire machine or installation complies with CE EMC requirements. Many factors can influence total machine/installation compliance.

Essential Requirements for CE Compliance

Conditions 1...6 listed here must be satisfied for the PowerFlex Active Front End to meet the requirements of EN61800-3.

1. Use a standard PowerFlex Active Front End CE-compatible unit.
2. Review important precautions and attention statements throughout this document before installing the Active Front End.
3. Grounding as described on [page 27](#).

4. Control (I/O) and signal wiring must be braided, shielded cable with a coverage of 75% or better, metal conduit, or have shielding/cover with equivalent attenuation.
5. All shielded cables must terminate with proper shielded connector.
6. Motor cables of DC input drives that are used with the AFE must be shielded cable wire with a coverage of 75% or more, or must be inside metal conduit or have shielding/cover with equivalent attenuation.

AFE in IP21 Rittal Enclosure – Installation/ Wiring

This chapter provides information on how to install and wire the PowerFlex® Active Front End in an IP21 Rittal enclosure. For information on how to install and wire the AFE in an IP20 2500 MCC Style enclosure, see [Chapter 1](#).

Topic	Page
Main Component Sections	52
Main Component Locations	54
Mounting Considerations	56
AC Supply Source Considerations	58
Grounding Requirements	59
Fuses and Circuit Breakers	62
Power Wiring	62
Disconnect the Common Mode Capacitors	69
Using the AFE with PowerFlex Drives	74
Control Wiring	74
Precharging the AFE	81
CE Conformity	82

Most start-up difficulties are the result of incorrect wiring. Verify that the wiring is done as instructed. Read and understand the instructions before you begin to installation the AFE.



ATTENTION: The following information is a guide for proper installation. Rockwell Automation does not assume responsibility for the compliance or the noncompliance to any code, national, local, or otherwise, for the proper installation of this 700AFE or associated equipment. A hazard of personal injury and/or equipment damage exists if codes are ignored during installation.

This section describes the main component sections and main component locations of AFE Frame 10 and Frame 13 systems in an IP21 Rittal enclosure.

Main Component Sections


This section describes the main component sections of AFE Frame 10 and Frame 13 systems in an IP21 Rittal enclosure.

Frame 10

Figure 24 shows a basic one-line diagram for an AFE Frame 10 in an IP21 Rittal enclosure. The main component sections consist of the following items:

- AC line switchgear consisting of the input disconnect (Q0) and MCCB motor-controlled circuit breaker (Q1)
- LCL filter (L1)
- Precharge circuit
- AFE power structure (U1) with AFE control assembly
- DC fuses (F2.1 and F2.2)

Figure 24 - Basic One-line Diagram for an AFE Frame 10 in IP21 Rittal Enclosure

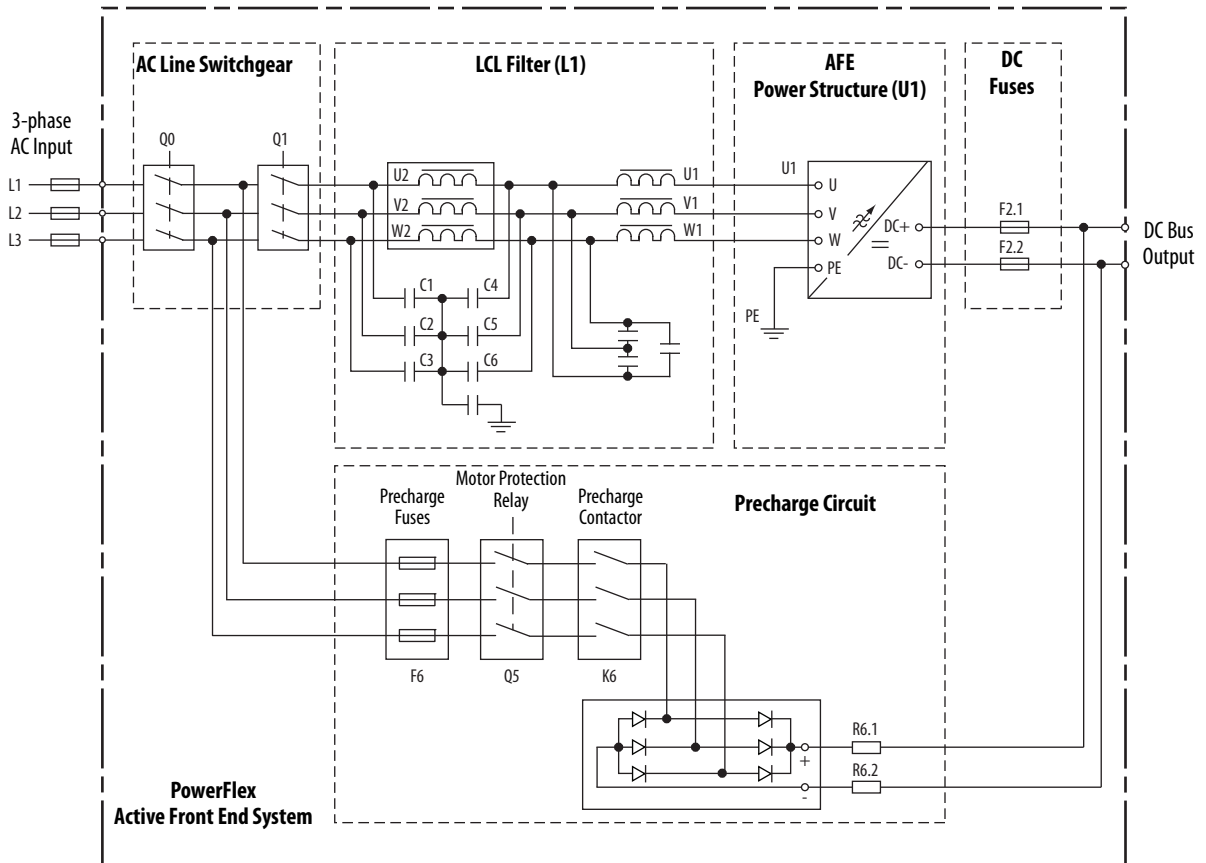


Frame 13

Figure 25 shows a basic one-line diagram for an AFE Frame 13 in an IP21 Rittal enclosure. The main component sections consist of the following items:

- AC line switchgear consisting of the input disconnect (Q0) and MCCB motor-controlled circuit breaker (Q1)
- LCL filter (L1)
- Precharge circuit
- AFE power structure (U1) with AFE control assembly
- DC fuses (F2.1...F2.6)

Figure 25 - Basic One-line Diagram for an AFE Frame 13 in IP21 Rittal Enclosure

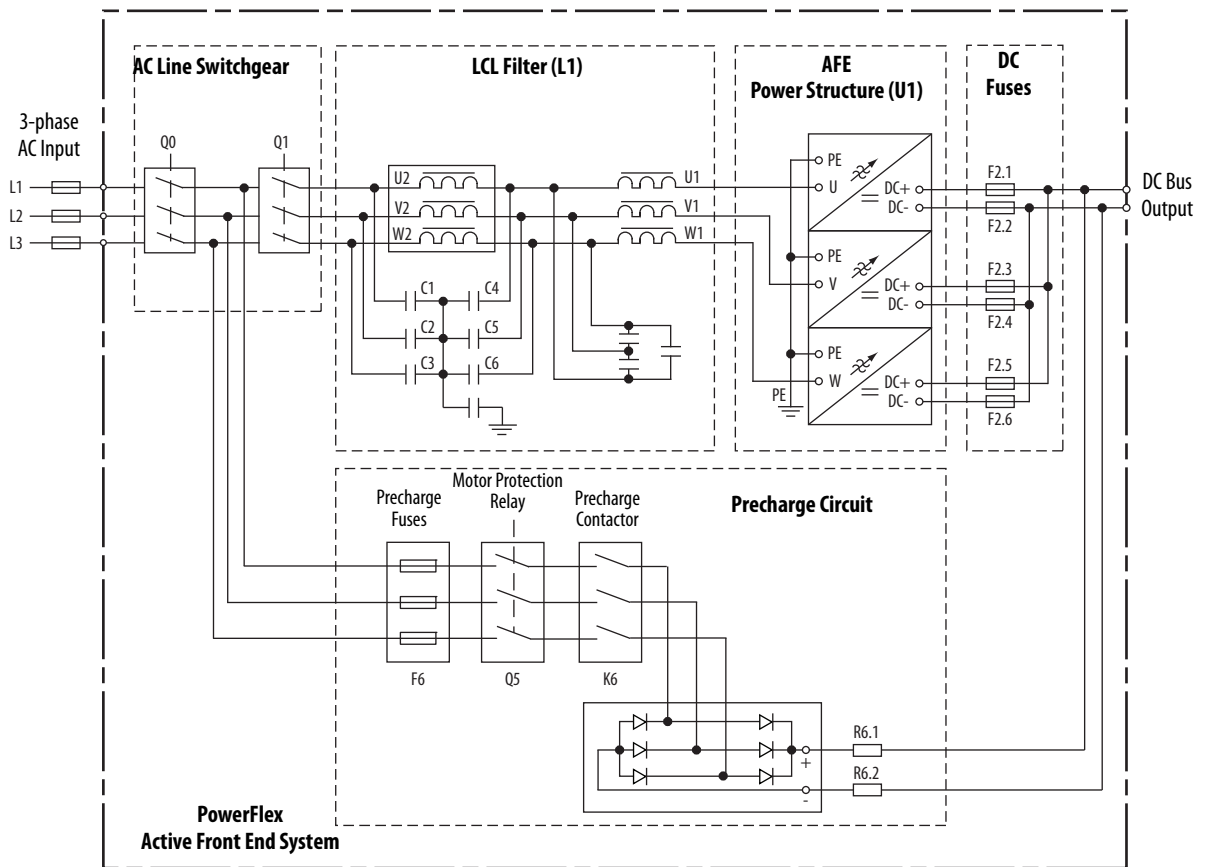


Main Component Locations

This section shows the main component locations for AFE Frame 10 and Frame 13 systems in an IP21 Rittal enclosure.

Frame 10

Figure 26 shows the main components of the AFE Frame 10 system in an IP21 Rittal enclosure.

Figure 26 - AFE Frame 10 Main Component Locations in IP21 Rittal Enclosure

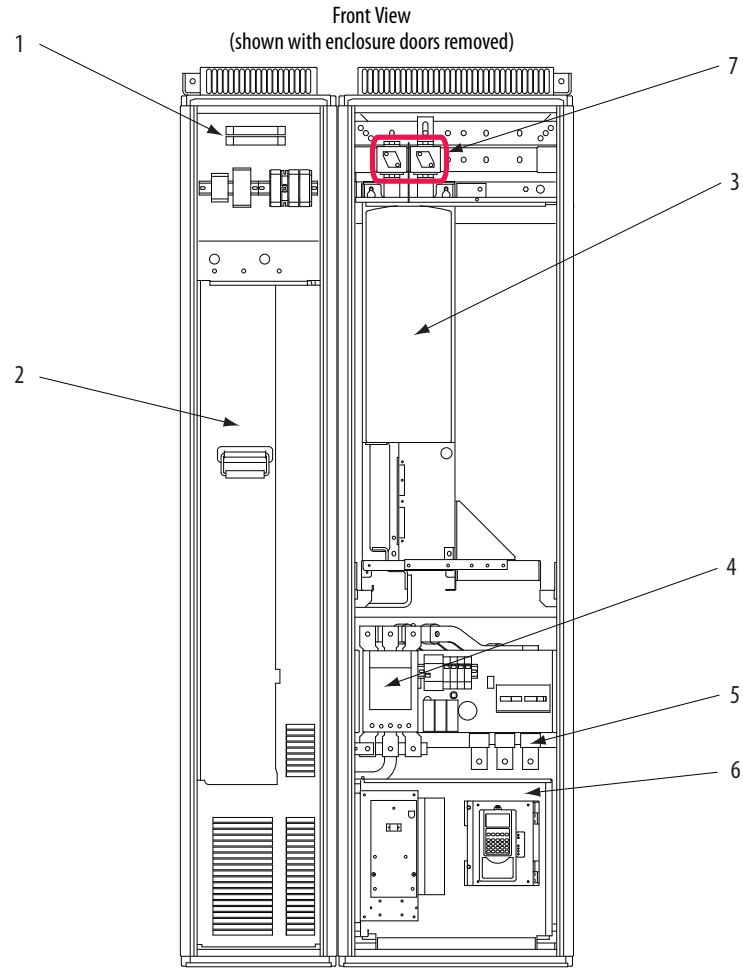


Item	Description	
1	Precharge circuit	
2	LCL filter (L1)	
3	Active Front End power structure (U1)	
4	AC line switchgear	Motor-controlled circuit breaker
5		Input disconnect
6	AFE control assembly (shown with user-installed HIM)	
7	DC fuses	

Frame 13

Figure 27 shows the main components of the AFE Frame 13 system in an IP21 Rittal enclosure.

Figure 27 - AFE Frame 13 Main Component Locations in IP21 Rittal Enclosure

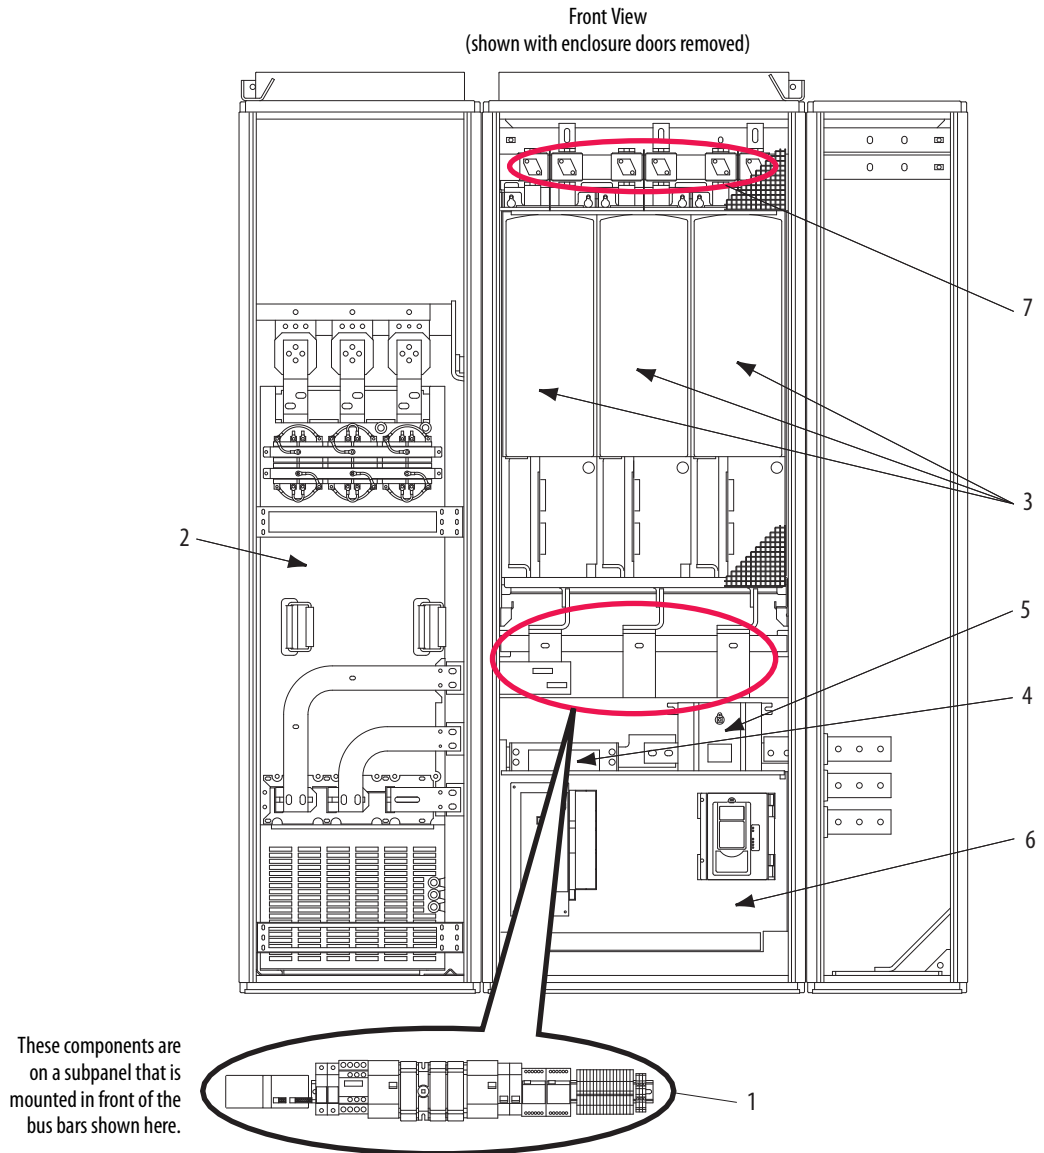

Item	Description	
1	Precharge circuit	
2	LCL filter (L1)	
3	Active Front End power structure (U1)	
4	AC line switchgear	Motor-controlled circuit breaker
		Input disconnect
6	AFE control assembly (shown with user-installed HIM)	
7	DC fuses	

Mounting Considerations

When mounting the Active Front End, consider the following information.

Operating Temperatures

Frame Size	Surrounding Air Temperature ⁽²⁾		Minimum Airflow	
	Normal Duty	Heavy Duty	Power Module	LCL Filter
10	0...40 °C (32...104 °F)	0...40 °C (32...104 °F)	1400 m ³ /hr (824 cfm)	1100 m ³ /hr (647 cfm)
13 ⁽¹⁾			4200 m ³ /hr (2472 cfm)	1300 m ³ /hr (765 cfm)

(1) The Frame 13 690V AFE has only normal duty operation at nominal rated power and maximum ambient temperature at 35 °C (95 °F).

(2) For an AFE in the IP21 Rittal enclosure, this means air surrounding the module.

Minimum Mounting Clearances

Figure 28 - Frame 10 in IP21 Rittal Enclosure


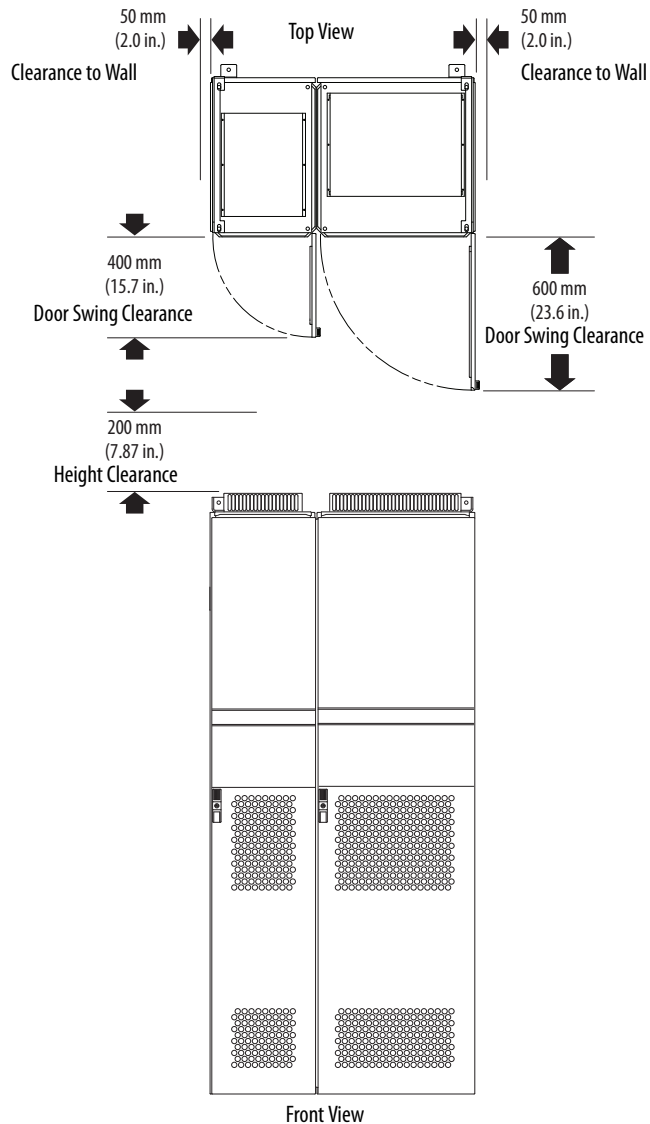


Figure 29 - Frame 13 in IP21 Rittal Enclosure

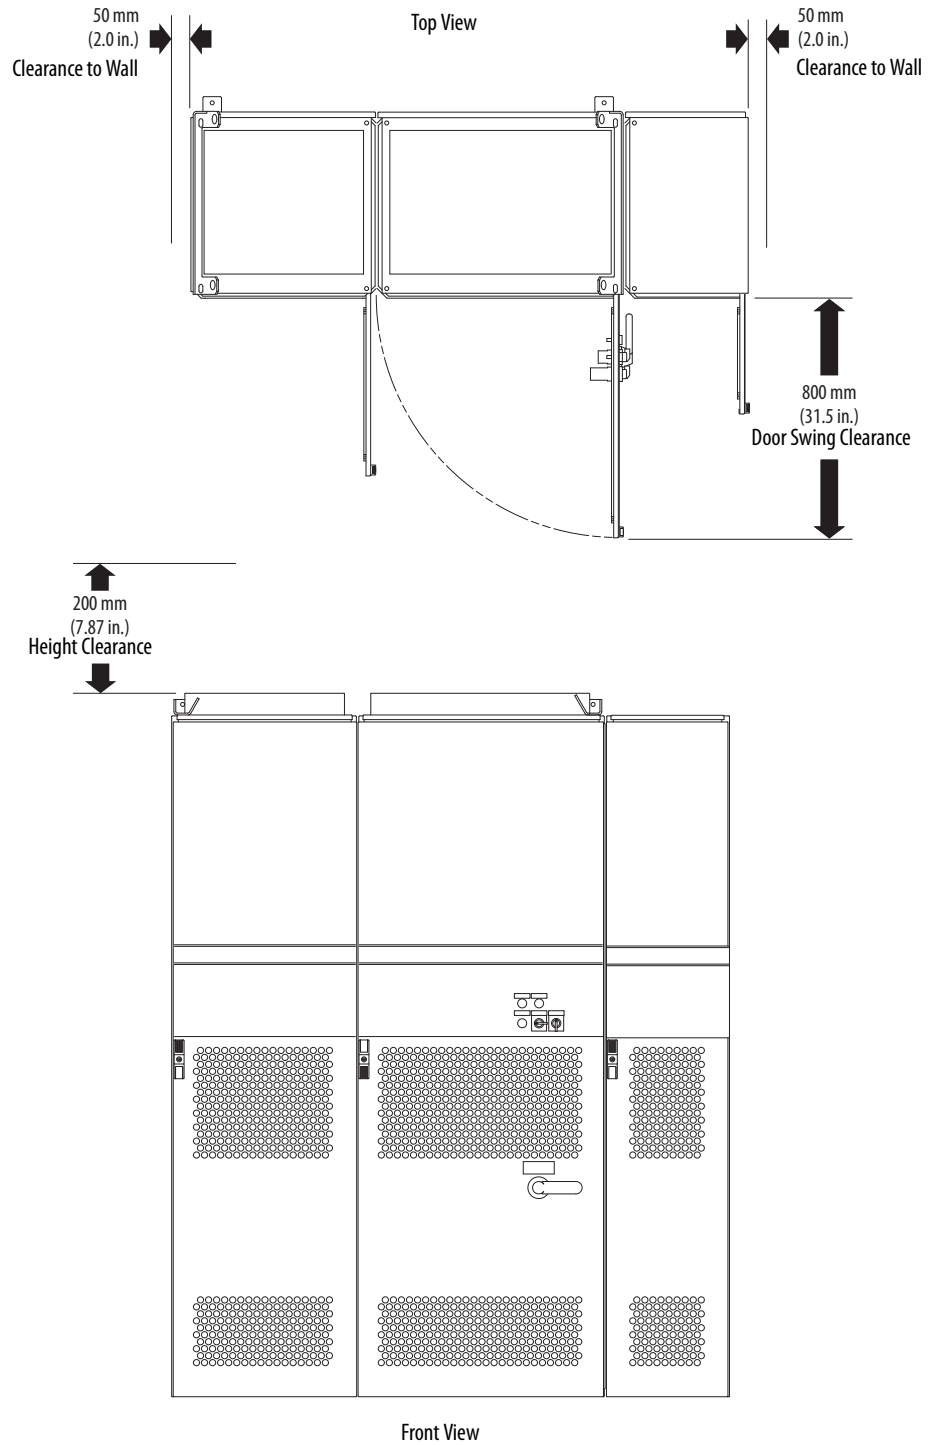

AC Supply Source Considerations

The AFE Frame 10 or Frame 13 in an IP21 Rittal enclosure is suitable for use on a circuit capable of delivering up to a maximum of 100,000 rms symmetrical amperes, 600/690 volts, with recommended fuses or circuit breakers.

The AFE must not be used on undersized or high-impedance supply systems. The supply system kVA must be equal to or greater than the drive-related kW, and the system impedance must be less than 10%. Operation outside these limits can cause instability that results in AFE shutdown.

System Impedance = (PowerFlex 700AFE kVA ÷ Transformer kVA) x Transformer % Impedance

You must consider the kVA of all PowerFlex AFEs on the distribution system and the system impedance of upstream transformers.



ATTENTION: To guard against personal injury and equipment damage that is caused by improper fusing or circuit breaker selection, use only the recommended line fuses or circuit breakers that are specified in [Appendix A](#).

If a residual current detector (RCD) is used as a system ground fault monitor, use only Type B (adjustable) devices to avoid nuisance tripping.

Unbalanced, Ungrounded, or Resistive Grounded Distribution Systems

If phase-to-ground voltage exceeds 125% of normal or the supply system is ungrounded, see Wiring and Grounding Guidelines for Pulse Width Modulated (PWM) AC Drives, publication [DRIVES-IN001](#), for more information.



ATTENTION: The PowerFlex Active Front End is not designed to be used on IT (insulated terra) or corner-grounded power networks above 600V (phase-to-phase voltage). Operation on such a network can cause a hazardous failure of the insulation system of the AFE.



ATTENTION: The LCL filter of the PowerFlex Active Front End contains common mode capacitors that are referenced to ground. These devices **must be disconnected** if the AFE is installed on a resistive grounded distribution system or an ungrounded distribution system. See [Figure 37 on page 70](#) or [Figure 38 on page 70](#) for jumper locations.



ATTENTION: The power structure of the PowerFlex Active Front End in the IP21 Rittal enclosure contains common mode capacitors **that must be disconnected**, regardless of the application in which the AFE is used. For locations of the common mode capacitors and instructions to remove them, see [Frame 10 Power Structure on page 72](#) or [Frame 13 Power Structure on page 73](#).

Input Power Conditioning

These events on the power system that supplies an AFE can cause component damage or shortened product life:

- The power system has power factor correction capacitors that are switched in and out of the system, either by you or by the power company.
- The power source has intermittent voltage spikes in excess of 6000 volts. These spikes can be caused by other equipment on the line or by events such as lightning strikes.
- The power source has frequent interruptions.

Grounding Requirements

The Active Front End Safety Ground-PE must be connected to system ground. Ground impedance must conform to the requirements of national and local industrial safety regulations and/or electrical codes. Check the integrity of all ground connections periodically.

Recommended Grounding Scheme

For installations in which the AFE is within an enclosure, use one safety ground point or ground bus bar connected directly to building steel. All circuits including the AC input ground conductor must be grounded independently and directly to this point or ground bus bar.

Figure 30 - Typical Grounding Example for AFE Frame 10 in IP21 Rittal Enclosure


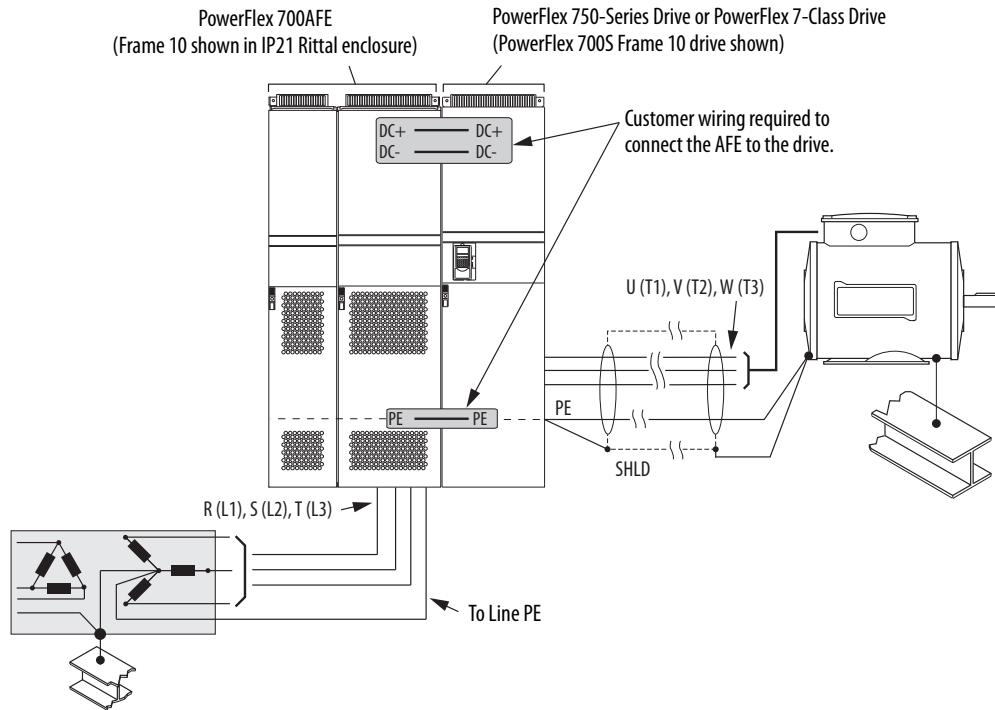


Figure 31 - Typical Grounding Example for AFE Frame 13 in IP21 Rittal Enclosure

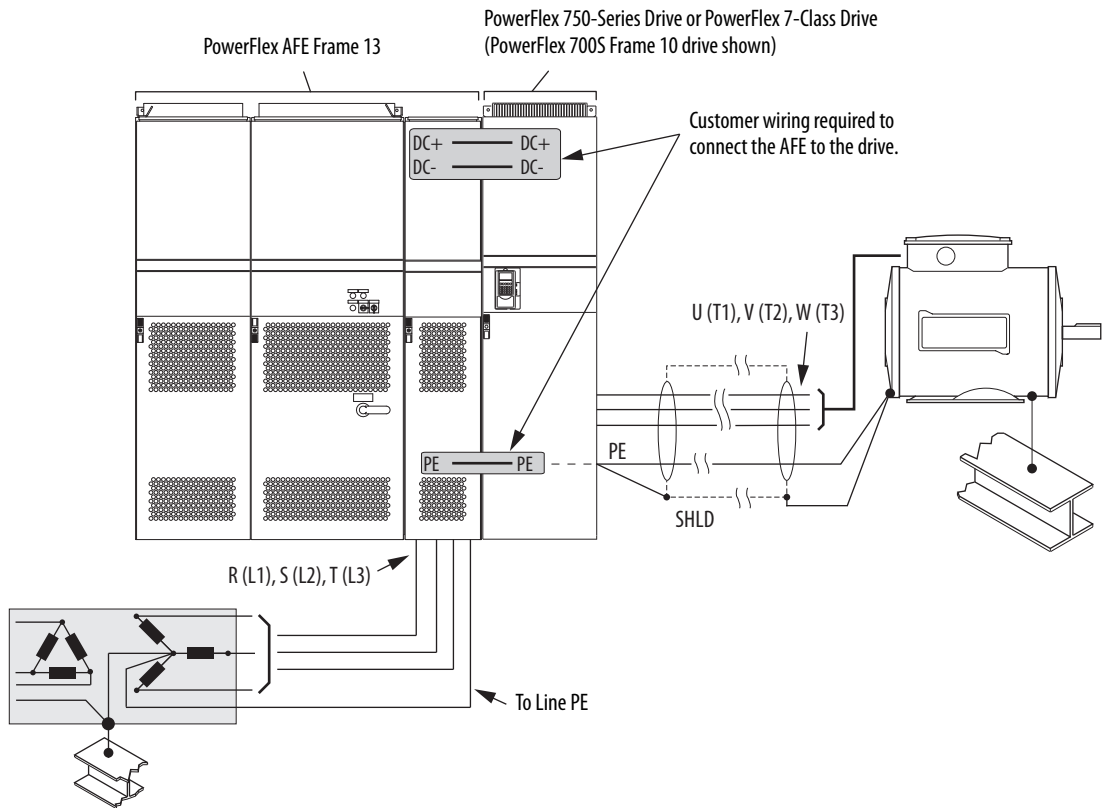

Safety Ground - PE

This ground is the safety ground for the AFE that code requires. This point must be connected to adjacent building steel (girder or joist), a floor ground rod, or bus bar (see [Figure 31](#)). Grounding points must comply with national and local industrial safety regulations and/or electrical codes.

Shield Termination - SHLD

The Shield terminal ([Figure 34](#) or [Figure 35](#)) provides a grounding point for the AFE cable shield. It must be connected to an earth ground by a separate continuous lead. The drive cable shield must be connected to this terminal on the AFE end and the drive frame on the drive end. Use a shield terminating or EMI clamp to connect the shield to this terminal.

Fuses and Circuit Breakers

The IP21 Rittal enclosure for the AFE includes a motor-controlled circuit breaker (MCCB) and DC bus output fusing. The MCCB is used for precharge operation. For details on MCCB and precharge operation, see [page 81](#). For fuse and circuit breaker information, see [Appendix A](#). Local/national electrical codes can determine additional requirements for the installations.

Power Wiring

Most start-up difficulties are the result of incorrect wiring. Verify that the wiring is done as instructed. Read and understand the instructions before you begin to install the AFE.



ATTENTION: The following information is a guide for proper installation. Rockwell Automation does not assume responsibility for the compliance or noncompliance to any code, national, local, or otherwise, for the proper installation of this unit or associated equipment. A risk of personal injury and/or equipment damage exists if codes are ignored during installation.

Power Cable Types Acceptable for 400...690 Volt Installations



ATTENTION: National Codes and standards (NEC, VDE, CSA, BSI, and so forth) and local codes outline provisions for safely installing electrical equipment. Installation must comply with specifications regarding wire types, conductor sizes, branch circuit protection, and disconnect devices. Failure to do so can result in personal injury and/or equipment damage.

Various cable types are acceptable for PowerFlex Active Front End installations. For many installations, unshielded cable is adequate, provided it can be separated from sensitive circuits. As an approximate guide, use a spacing of 0.3 meters (1 ft) for every 10 meters (32.8 ft) of length. In all cases, avoid long parallel runs. Do not use cable with an insulation thickness less than or equal to 15 mils (0.4 mm/0.015 in.). Use only copper wire. Wire gauge requirements and recommendations are based on 75 °C (167 °F). Do not reduce wire gauge when using higher temperature wire.

Unshielded Cable

THHN, THWN, or similar wire is acceptable for PowerFlex Active Front End installation in dry environments provided adequate free air space and/or conduit fill rates limits are provided. **Do not use THHN or similarly coated wire in wet areas.** Any wire that is chosen must have a minimum insulation thickness of 15 mils and cannot have large variations in insulation concentricity.

Shielded Cable

Shielded cable contains the benefits of multi-conductor cable with the added benefit of a copper braided shield that can contain much of the noise that is generated by a typical AC drive. Consider shielded cable in installations with sensitive equipment such as weigh scales, capacitive proximity switches, and other devices affected by electrical noise in the distribution system.

Applications with large numbers of drives in a similar location, imposed EMC regulations, or a high degree of communication and networking are also good candidates for shielded cable.

Consider the general specifications that are dictated by the environment of the installation, including temperature, flexibility, moisture characteristics, and chemical resistance. Also, include a braided shield that is specified by the manufacturer as having coverage of at least 75%. An additional foil shield can improve noise containment.

A good example of recommended cable is Belden 29528 - 29532 (AWG-1 through AWG-410). This cable has three XLPE insulated conductors plus ground with a spiral copper shield that is surrounded by a PVC jacket.

Armored Cable

Cable with continuous aluminum armor is often recommended in drive system applications or specific industries. It offers most of the advantages of standard shielded cable and also combines considerable mechanical strength and resistance to moisture. It can be installed in concealed and exposed manners, and removes the requirement for conduit (EMT) in the installation. It can also be directly buried or embedded in concrete.

Because noise containment is affected by incidental grounding of the armor to building steel when the cable is mounted, we recommend that the armored cable has an overall PVC jacket. See Chapter 2, 'Wire Types' in Wiring and Grounding Guidelines for Pulse Width Modulated (PWM) AC Drives, publication [DRIVES-IN001](#).

Interlocked armor is acceptable for shorter cable runs, but continuous welded armor is preferred.

Best performance is achieved with three spaced ground conductors, but acceptable performance below 200 Hp is provided by use of one ground conductor.

Recommended shielded/armored wire is listed in [Table 11](#).

Table 11 - Recommended Shielded/Armored Wire for AFE in IP21 Rittal Enclosure

Location	Rating/Type	Description
Standard (option 1)	1000V, 90 °C (194 °F) XHHW2/RHW-2 Anixter B29528-B29532 Belden 29528-29532 Or equivalent	<ul style="list-style-type: none"> • Four tinned copper conductors with XLPE insulation. • Copper braid/aluminum foil combination shield and tinned copper drain wire. • PVC jacket.
Standard (option 2)	Tray rated 1000V, 90 °C (194 °F) RHH/RHW-2 Anixter OLFLEX-76xxx03 Or equivalent	<ul style="list-style-type: none"> • Three tinned copper conductors with XLPE insulation. • Corrugated copper tape with three bare copper grounds in contact with shield. • PVC jacket.
Class I & II; Division I & II	Tray rated 1000V, 90 °C (194 °F) RHH/RHW-2 Anixter 7VFD-xxxx or equivalent	<ul style="list-style-type: none"> • Three bare copper conductors with XLPE insulation and impervious corrugated continuously welded aluminum armor. • Black sunlight resistant PVC jacket overall. • Three copper grounds.

Cable Trays and Conduit



ATTENTION: To avoid a possible shock hazard that is caused by induced voltages, unused wires in the conduit must be grounded at both ends. For the same reason, if a drive that shares a conduit is being serviced or installed, all drives that use this conduit must be disabled. Disable the drives to help minimize the possible shock hazard from ‘cross coupled’ motor leads.

If cable trays or large conduits are used, see the guidelines in *Wiring and Grounding Guidelines for Pulse Width Modulated (PWM) AC Drives*, publication [DRIVES-IN001](#).


Select and Verify Control Transformer Voltage

The control transformer in the AFE is used to match the input AC line voltage of the AFE in an IP21 Rittal enclosure to the 230V control voltage.

Verify that the control voltage is set appropriately for the supplied AC line voltage. If necessary, use this procedure to change the control voltage.


1. Locate the X3 terminal block (Figure 32).

Figure 32 - X3 Terminal Block Location for AFE in IP21 Rittal Enclosure

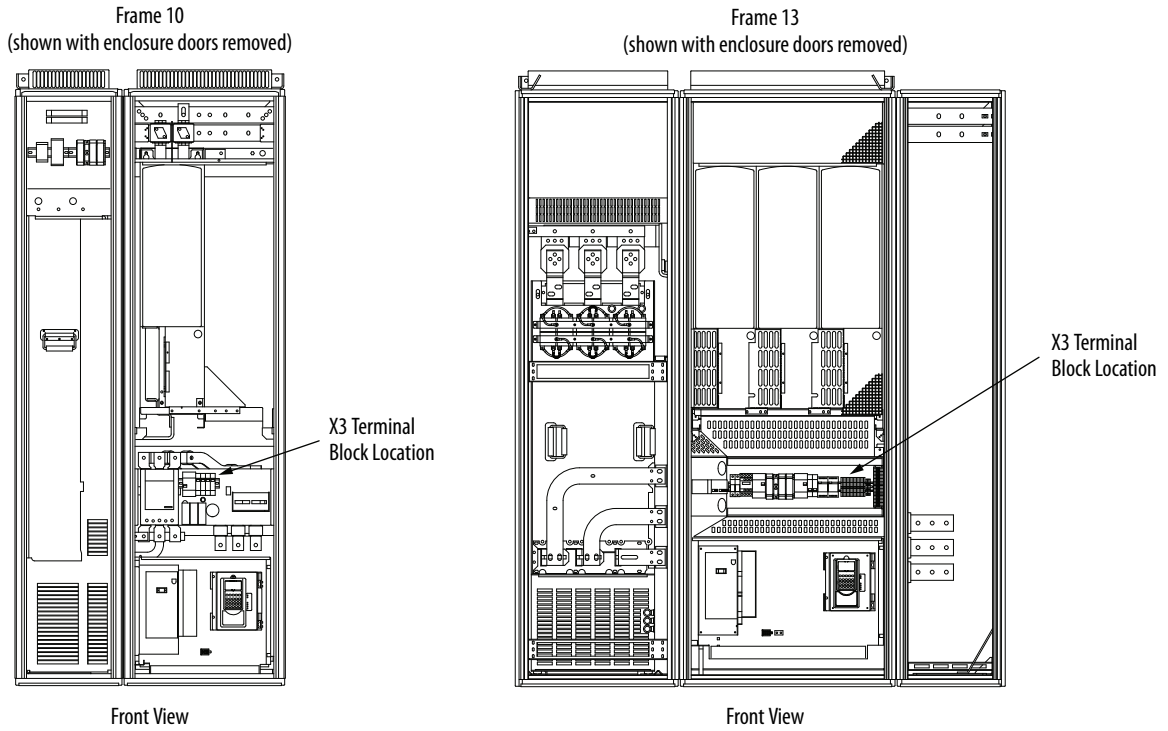

2. To match the AC line voltage, move the wire that is shown in Figure 33 to the appropriate X3 terminal.

Figure 33 - Input Voltage Setting for Control Voltage on Frames 10 and 13 in IP21 Rittal Enclosure

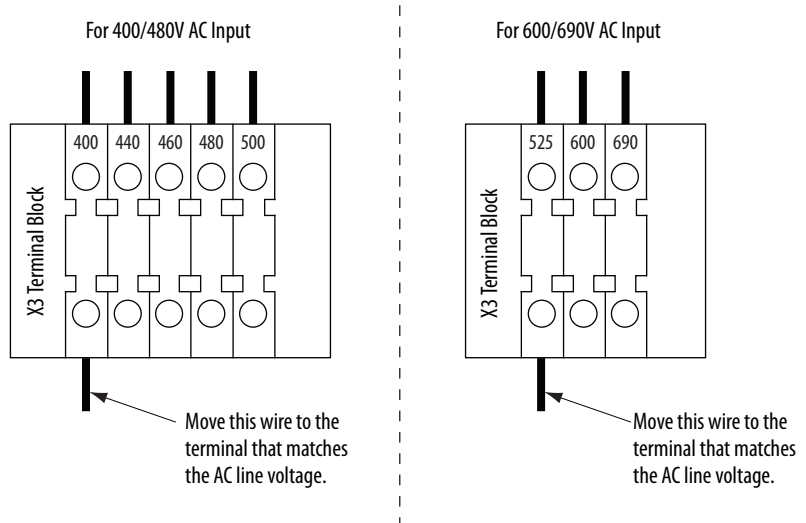

Power Terminals for AFE in IP21 Rittal Enclosure

Figure 34 and Figure 35 show the power terminal locations and specifications for AFE Frames 10 and 13 in an IP21 Rittal enclosure.

Figure 34 - AFE Frame 10 Power Terminal Locations in IP21 Rittal Enclosure

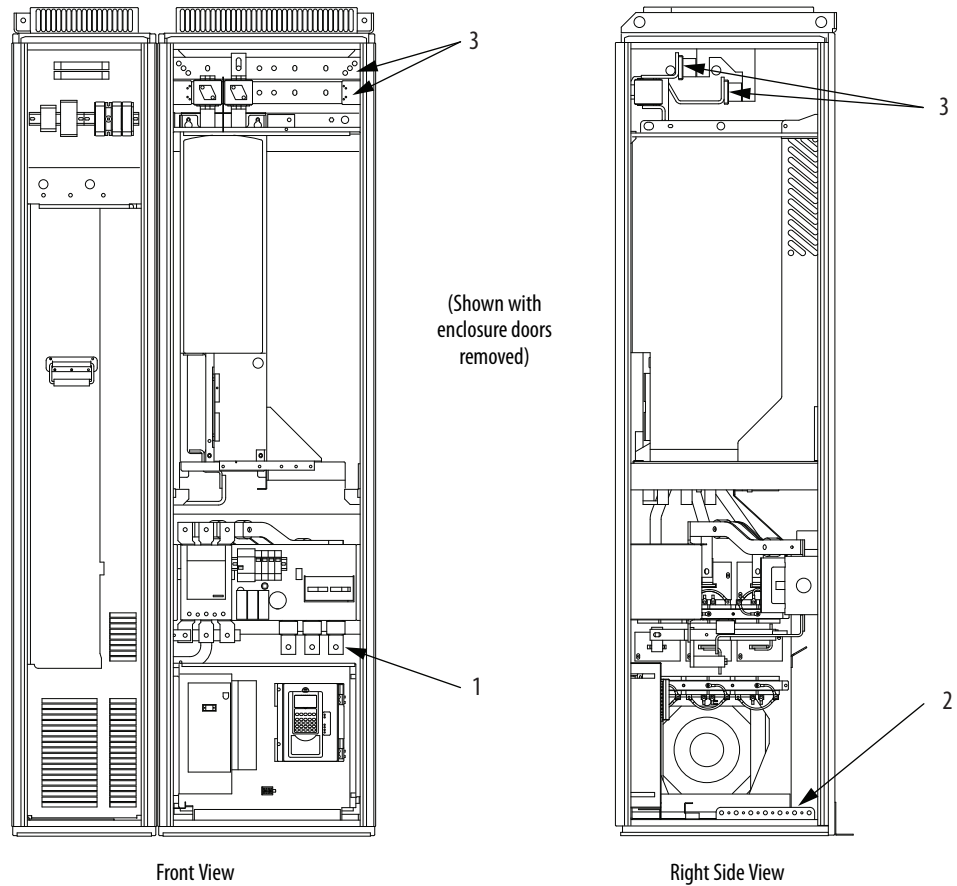


Table 12 - AFE Frame 10 Power Terminal Specifications in IP21 Rittal Enclosure

Item	Name	Frame	Description	Wire Size Range ^{(1) (2)}		Torque	Terminal Bolt Size ^{(3) (4)}
				Max	Min	Recommended	
1	Input power terminals L1, L2, L3 ⁽¹⁾	10	Input power	300 mm ² (600 MCM)	2.1 mm ² (14 AWG)	40 N•m (354 lb•in)	M10
2	SHLD terminal, PE, ground ⁽³⁾	10	Terminating point for wiring shields	300 mm ² (600 MCM)	2.1 mm ² (14 AWG)	40 N•m (354 lb•in)	M10
3	DC bus ⁽³⁾ (DC-, DC+)	10	DC output	300 mm ² (600 MCM)	2.1 mm ² (14 AWG)	70 N•m (620 lb•in)	M12

- (1) Maximum/minimum sizes that the terminals accept. These sizes are not recommendations.
- (2) Do **not** exceed maximum wire size. Parallel connections can be required.
- (3) These connections are bus bar type terminations and require the use of lug type connectors.
- (4) Apply counter-torque to the nut on the other side of terminations when tightening or loosening the terminal bolt to avoid damage to the terminal.

Figure 35 - AFE Frame 13 Power Terminal Locations in IP21 Rittal Enclosure

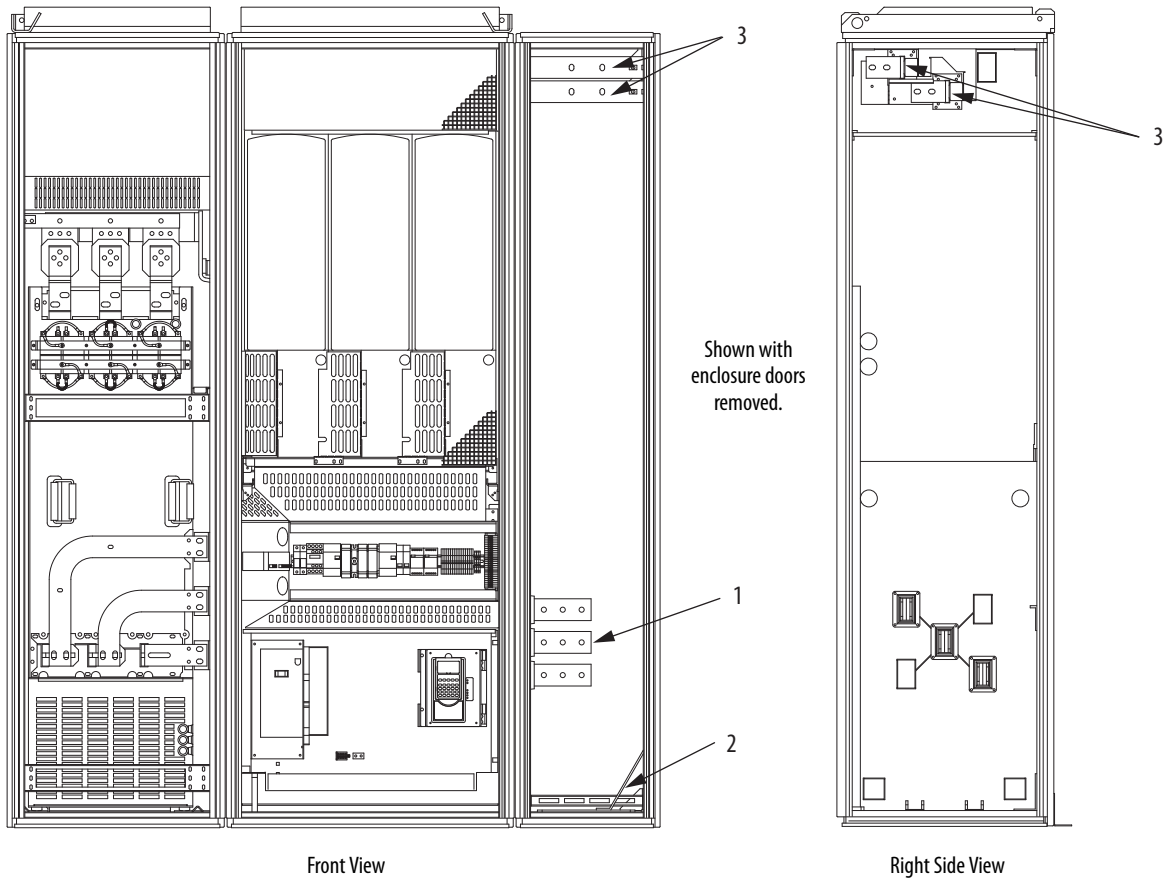


Table 13 - AFE Frame 13 Power Terminal Specifications in IP21 Rittal Enclosure

Item	Name	Frame	Description	Wire Size Range ^{(1) (2)}		Torque	Terminal Bolt Size ^{(3) (4)}
				Maximum	Minimum	Recommended	
1	Input power terminals L1, L2, L3 ⁽¹⁾	13	Input power	300 mm ² (600 MCM)	2.1 mm ² (14 AWG)	70 N•m (620 lb•in)	M12
2	SHLD terminal, PE, ground ⁽³⁾	13	Terminating point for wiring shields	300 mm ² (600 MCM)	2.1 mm ² (14 AWG)	40 N•m (354 lb•in)	M10
3	DC bus ⁽³⁾ (DC-, DC+)	13	DC output	300 mm ² (600 MCM)	2.1 mm ² (14 AWG)	70 N•m (620 lb•in)	M12

- (1) Maximum/minimum sizes that the terminals accept. These sizes are not recommendations.
- (2) Do **not** exceed maximum wire size. Parallel connections can be required.
- (3) These connections are bus bar type terminations and require the use of lug type connectors.
- (4) Apply counter-torque to the nut on the other side of terminations when tightening or loosening the terminal bolt to avoid damage to the terminal.

DC Bus Output Wiring

The length of the DC bus connections between the AFE and the drive or drives must be minimized to keep the bus inductance low for reliable system operation. For more information, see Drives in Common Bus Configurations, publication [DRIVES-AT002](#).

Route the AC Input, Ground (PE), and DC Bus Output Wiring for AFE in IP21 Rittal Enclosure



ATTENTION: To minimize disruption of airflow through the enclosure and avoid overheating within the AFE enclosure, remove only the minimum area that is needed to route the power cables.

In addition, remove only the minimum area from the enclosure within the shaded areas that are shown in [Figure 36](#) for routing the AC input, ground (PE), and DC bus output wiring.


When you remove sections for routing in other areas, airflow is disrupted throughout the enclosure, and causes overheating.

Frame 10

The AC input and ground (PE) wiring for the IP21 Rittal enclosure can be routed through either the bottom of the enclosure, or through the bottom right side of the enclosure (see shaded area in [Figure 36](#)).

The DC bus output wiring for the IP21 Rittal enclosure must be routed through the top right side of the enclosure (see shaded area in [Figure 36](#)).

Figure 36 - Routing Areas for AC Input, Ground, and DC Bus Output Wiring for AFE Frame 10 in IP21 Rittal Enclosure

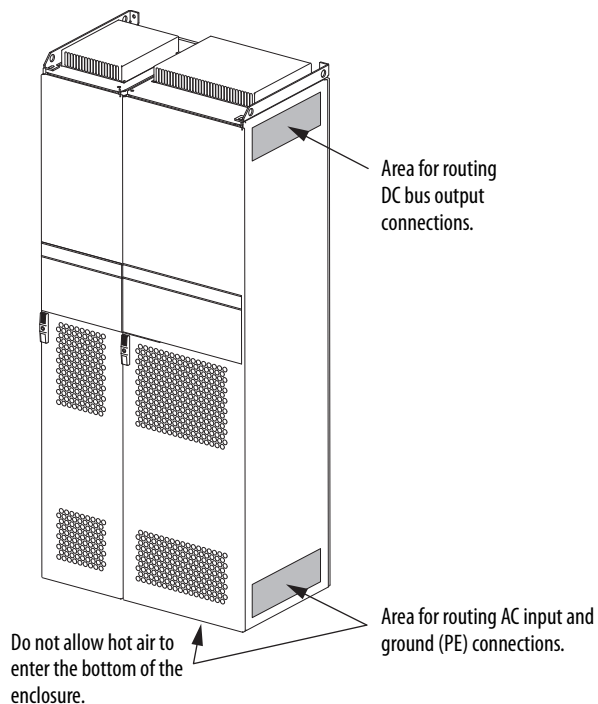

Frame 13

The AC input, ground (PE), and DC bus output are located in the right-most bay (see front view of [Figure 35](#)). The AC input, ground, and DC bus output

wiring can be routed through the top, bottom, or right side of the right-most bay.

Disconnect the Common Mode Capacitors

Frame 10 LCL Filter

The Frame 10 AFE LCL filter contains common mode capacitors that are referenced to ground. To guard against AFE damage, these devices **must be disconnected** if the AFE is installed on a high resistance grounded distribution system, or an ungrounded distribution system where the line-to-ground voltages on any phase exceed 125% of the nominal line-to-line voltage.


To access the common mode capacitors, the LCL filter must be removed from the enclosure. To remove the Frame 10 AFE LCL filter from the IP21 Rittal enclosure, see the instructions in the PowerFlex Active Front End—Frame 10 Hardware Service Manual, publication [20Y-TG001](#).



ATTENTION: To avoid an electric shock hazard, verify that the voltage on the bus capacitors has discharged completely before you remove or install any jumpers. Check the DC bus voltage between the +DC and –DC terminals, between the +DC terminal and the chassis, and between the –DC terminal and the chassis. The voltage must be zero for all three measurements.

To disconnect the common mode capacitors, remove the jumpers that are shown in [Figure 37](#). For more information on ungrounded system installation, see [Wiring and Grounding Guidelines for Pulse Width Modulated \(PWM\) AC Drives](#), publication [DRIVES-AT001](#).

Figure 37 - AFE Frame 10 LCL Filter Common Mode Capacitor Jumper Locations

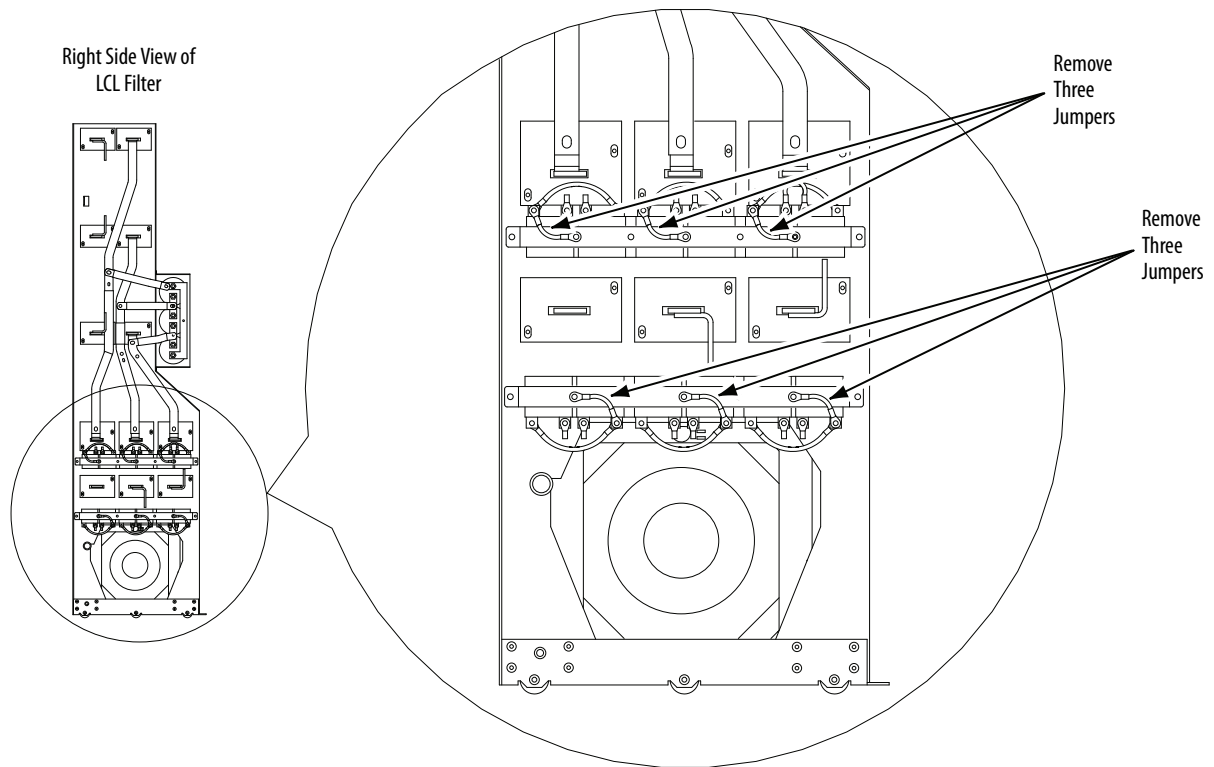

Frame 13 LCL Filter

The Frame 13 AFE LCL filter contains common mode capacitors that are referenced to ground. To guard against AFE damage, these devices **must be disconnected** if the AFE is installed on a high resistance grounded distribution system, or an ungrounded distribution system where the line-to-ground voltages on any phase exceed 125% of the nominal line-to-line voltage.


To remove the AFE Frame 13 LCL filter from the IP21 Rittal enclosure, see the instructions in the PowerFlex Active Front End—Frame 13 Hardware Service Manual, publication [20Y-TG002](#).



ATTENTION: To avoid an electric shock hazard, verify that the voltage on the bus capacitors has discharged completely before you remove or install any jumpers. Check the DC bus voltage between the +DC and –DC terminals, between the +DC terminal and the chassis, and between the –DC terminal and the chassis. The voltage must be zero for all three measurements.

To disconnect the common mode capacitors, remove the upper guard and then remove the jumpers that are shown in [Figure 38](#). For more information on ungrounded system installation, see Wiring and Grounding Guidelines for Pulse Width Modulated (PWM) AC Drives, publication [DRIVES-AT001](#).

Figure 38 - AFE Frame 13 LCL Filter Common Mode Capacitor Jumper Locations

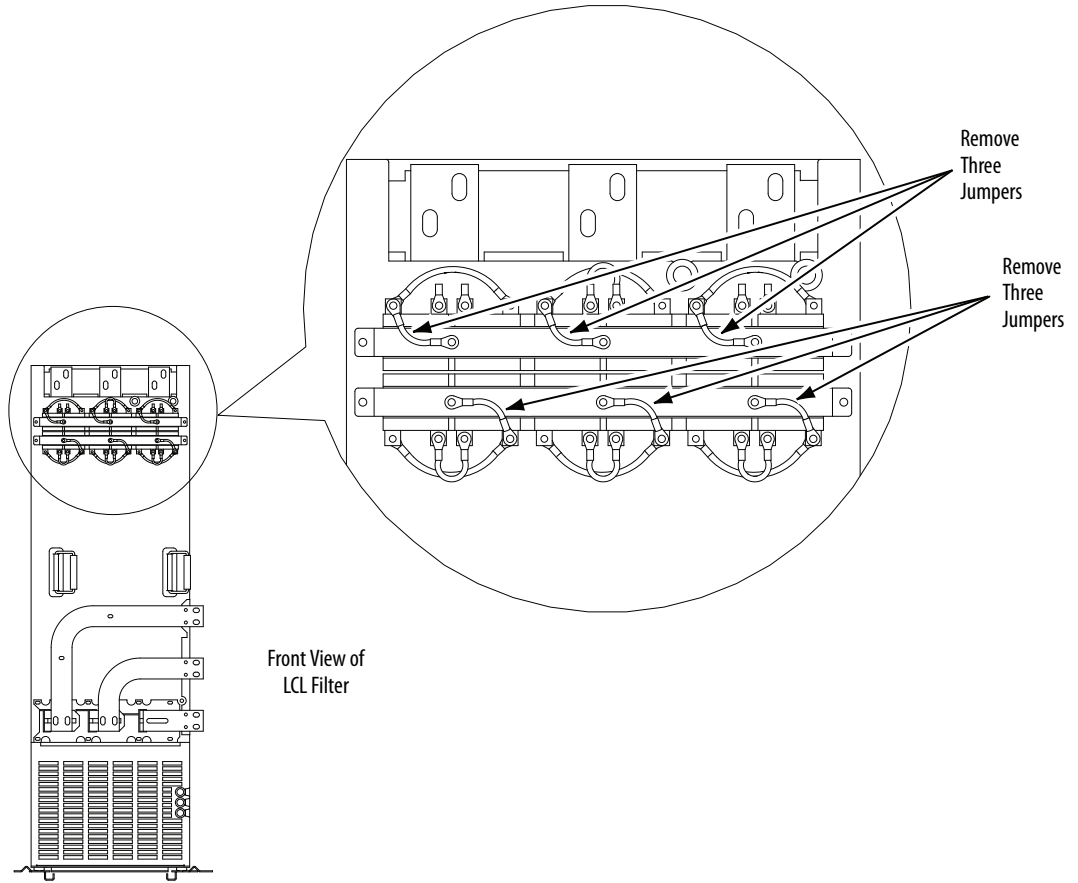

Frame 10 Power Structure

The AFE Frame 10 power structure in the IP21 Rittal enclosure contains **common mode capacitors that must be removed.**

To remove these capacitors from the AFE Frame 10 power structure, follow these steps.

1. Locate the common mode capacitors on the Frame 10 power structure.




Location of Common Mode Capacitors on Frame 10 Power Structure

2. Remove the common mode capacitors.
 - a. Disconnect the two black wires.
 - b. Unscrew and remove the capacitor assembly consisting of two capacitors on a small metal bracket.



Close-up View of Common Mode Capacitor Assembly

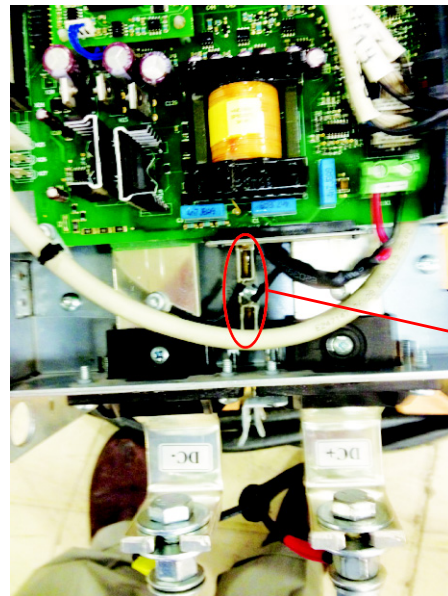


Close-up View of Common Mode Capacitor Assembly

Frame 13 Power Structure

The AFE Frame 13 power structure in the IP21 Rittal enclosure contains **common mode capacitors that must be removed**. These capacitors are on the Phase V (center) module of the power structure.

To remove these capacitors from the AFE Frame 13 power structure, follow these steps.

1. Locate the common mode capacitors on the Phase V module of the Frame 13 power structure.

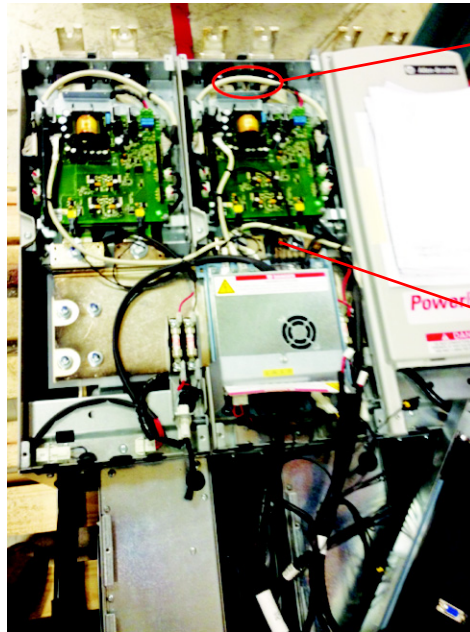

Location of Common Mode Capacitors on Phase V Module of Frame 13 AFE Power Structure


Phase V Module of Frame 13 Power Structure

2. Remove the common mode capacitors.
 - a. Disconnect the two black wires.

- b. Unscrew and remove the capacitor assembly consisting of two capacitors on a small metal bracket.



Close-up View of Common Mode Capacitor Assembly

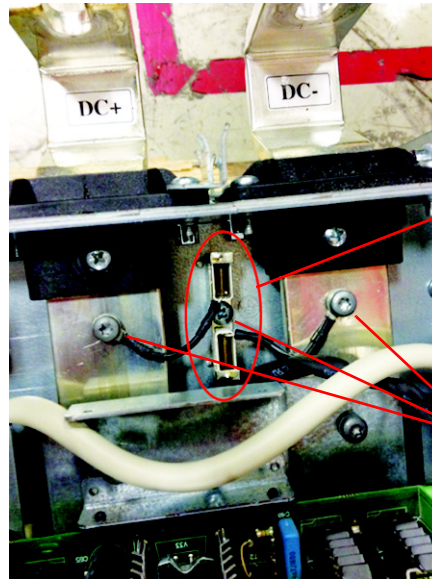

Close-up View of Common Mode Capacitors on Phase V Module of Frame 13 AFE Power Structure

Disconnect Wires and Unscrew Capacitor Assembly

Using the AFE with PowerFlex Drives

When the Active Front End is used with drives that have common mode capacitors (for example, PowerFlex 7-Class or PowerFlex 750-Series drives), the common mode capacitors of these drives **must be disconnected**. See the documentation of the respective drives.

When supplying power to PowerFlex drives of different frame sizes on the same DC bus, additional bus capacitance can be needed. For details, see Drives in Common Bus Configurations, publication [DRIVES-AT002](#).

Control Wiring

The AFE in an IP21 Rittal enclosure is wired at the factory and programmed to operate from the operator switches on the front of the enclosure. See [Table 17](#) and [Figure 40](#) for I/O terminal designations. If customized (or remote) control is required, then you must change the control wiring and correspondent digital I/O parameter setting.

Here are some important points to remember about I/O wiring:

- Always use copper wire.
- Wire with an insulation rating of 600V or greater is recommended.
- Control and signal wires must be separated from power wires by at least 0.3 meters (1 foot).

- When it is unavoidable to cross control and signal wires with power wires, always cross power wires at a 90° angle.

IMPORTANT I/O terminals that are labeled ‘(-)’ or ‘Common’ **are not** referenced to earth ground. They are designed to reduce common mode interference. Grounding these terminals can cause signal noise.



ATTENTION: Inputs must be configured with software and jumpers (see [Analog I/O Configuration on page 79](#)). If you configure an analog input for 0...20 mA operation and drive it from a voltage source, you can cause component damage. Verify proper configuration before you apply input signals.



ATTENTION: It is important to disable the variable frequency drives that are connected to the AFE output when the AFE is not active (not modulating). Connect the 'Inverter Enable' output of the AFE to each variable frequency drive enable input, or enable parameter 132 [Contact Off Cnfg] to force off the main contactor if there is a fault. This action makes sure that once the AFE stops modulating, there is no motoring current flowing through the AFE IGBT diodes. Failure to disable the AFE output can result in component damage or a reduction in product life.

When you enable parameter 132, see [page 109](#) for details. The AFE is shipped with parameter 132 disabled. The disabled parameter does not stop or shut down DC output when a fault occurs.

Signal and Control Wire Types

Table 14 - Recommended Signal Wire for AFE in IP21 Rittal Enclosure


Signal Type	Wire Types	Description	Minimum Insulation Rating
Analog I/O	Belden 8760/9460 (or equivalent)	0.5 mm ² (22 AWG), twisted pair, 100% shield with drain ⁽¹⁾	300V, 75...90 °C (167...194 °F)
	Belden 8770 (or equivalent)	0.5 mm ² (22 AWG), 3-conductor, shielded for remote pot only	
EMC compliance	See CE Conformity on page 82 for details.		

(1) If the wires are short and contained within an enclosure that has no sensitive circuits, the use of shielded wire is not necessary, but is always recommended.

Table 15 - Recommended Control Wire for Digital I/O

Type	Wire Types	Description	Minimum Insulation Rating
Unshielded	Per US NEC or applicable national or local code	—	300V, 60 °C (140 °F)
Shielded	Multi-conductor shielded cable such as Belden 8770 (or equivalent)	0.5 mm ² (22 AWG), 3-conductor, shielded	

Figure 39 - AFE I/O Terminal Blocks and Jumpers

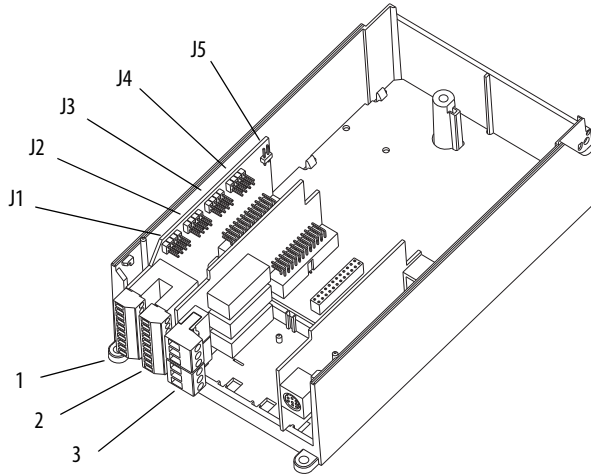

I/O Terminal Blocks


Table 16 - I/O Terminal Block Specifications for AFE in IP21 Rittal Enclosure

No.	Name	Description	Wire Size Range ⁽¹⁾		Torque	
			Max	Min	Max	Recommended
1	Analog I/O	Analog I/O signals	2.5 mm ² (14 AWG)	0.5 mm ² (22 AWG)	0.2 N•m 1.8 lb•in	0.2 N•m 1.8 lb•in
2	Digital inputs	Digital input signals	2.5 mm ² (14 AWG)	0.5 mm ² (22 AWG)	0.2 N•m 1.8 lb•in	0.2 N•m 1.8 lb•in
3	Digital outputs	Digital out relays	2.5 mm ² (14 AWG)	0.5 mm ² (22 AWG)	0.5 N•m 4.5 lb•in	0.5 N•m 4.5 lb•in

(1) Maximum/minimum that the terminal block can accept. These sizes are not recommendations.

I/O Cable Grounding

When installing shielded multi-conductor cable for analog and digital I/O, strip the cable from the terminal plug so you can fix it to the cable clamp for grounding.


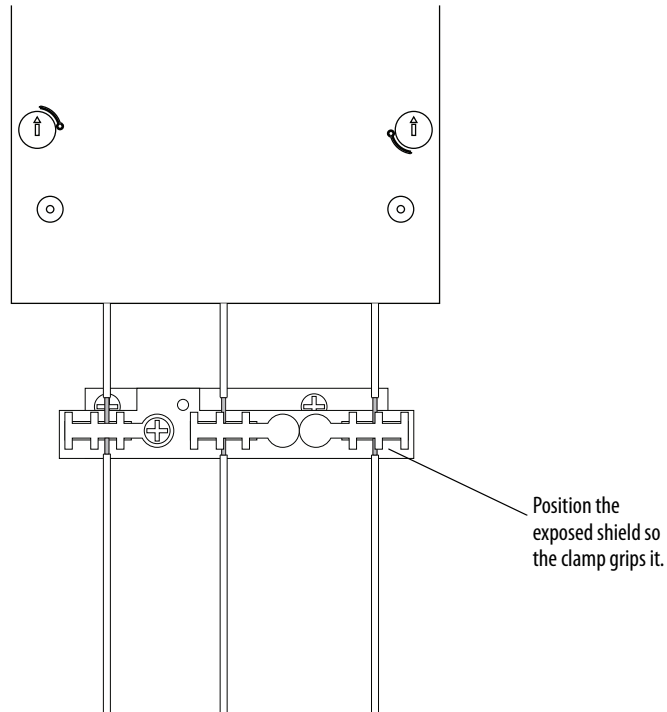


IMPORTANT: This clamp is not designed for strain relief.



ATTENTION: For the AFE in the IP21 Rittal enclosure, digital inputs 1, 3, 4, and 5, and digital outputs 1 and 2, are wired at the factory and programmed to operate from the controls on the front of the enclosure. Digital output 3 is programmable and factory-wired for +24V DC only. Do not change the wiring and programming for those digital inputs and outputs, or it results in malfunction of the system.

Table 17 - I/O Terminal Designations for AFE in IP21 Rittal Enclosure

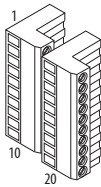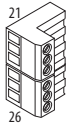	No.	Signal	Default Configuration	Description	
	1	Analog In 1 (-) ⁽¹⁾	(2)	Isolated ⁽³⁾ , bipolar, differential, 9-bit and sign, 88k Ω input impedance. A jumper (see Table 18) selects 0...10V, ±10V, or 4...20 mA. Default: 0...10V (Ri = 200k Ω), 4...20 mA (Ri = 100 Ω).	
	2	Analog In 1 (+) ⁽¹⁾			
	3	Analog In 2 (-) ⁽¹⁾			
	4	Analog In 2 (+) ⁽¹⁾			
	5	-10V Pot Reference	—	2k Ω min, 10 mA max load, 1% accuracy	
	6	Pot Common (GND)		For (+) and (-) 10V pot references	
	7	+10V Pot Reference	—	2k Ω min, 10 mA max load, 1% accuracy	
	8	Analog Out 1 (+)	(2)	Bipolar (current out is not bipolar), 9-bit and sign, 2k Ω min load. A jumper (see Table 18) selects 0...10V, ±10V, or 4...20 mA.	
	9	Analog Out Common			
	10	Analog Out 2 (+)			
	11	Digital In 1	RunCmd	24V DC - Opto isolated (250V)	
	12	Digital In 2	Ext. Reset	Low state: less than 5V DC	
	13	Digital In 3	Enable Mcont	High state: greater than 20V DC, 11.2 mA DC	
	14	Digital In 4	Contact Ack	Enable: Digital Input 6 is jumper selectable for HW Enable.	
	15	Digital In 5	LCL Temp	On-time: < 16.7 ms, Off-Time < 1 ms	
	16	Digital In 6/Hardware Enable, see page 80			
	17	Digital In Common		Allows source or sink operation	
	18				
	19	+24V DC ⁽⁴⁾	—	Unit supplied logic input power	
	20	24V Common ⁽⁴⁾	—	Common for internal power supply	
		21	Digital Out 1 – N.C. ⁽⁵⁾	Contact Ctrl	Max. Resistive Load: 240V AC/30V DC – 1200VA, 150 W Max current: 5 A, Min Load: 10 mA
		22	Digital Out 1 Common		
		23	Digital Out 1 – N.O. ⁽⁵⁾		
		24	Digital Out 2 – N.C. ⁽⁵⁾	Fault	Max. Inductive Load: 240V AC/30V DC – 840VA, 105 W Max current: 3.5 A, Min Load: 10 mA
		25	Digital Out 2/3 Com.		IMPORTANT: See the Attention above this table for more details.
		26	Digital Out 3 – N.O. ^{(5) (6)}	Active	


- (1) **Important:** Input must be configured with a jumper. AFE damage can occur if jumper is not installed properly. See [Analog I/O Configuration on page 79](#).
- (2) These inputs/outputs are dependent on a number of parameters.
- (3) Differential Isolation - External source must be maintained at less than 160V regarding PE. Input provides high common mode immunity.
- (4) 150 mA maximum load. Can be used to provide control power from an external 24V source when main power is not applied.
- (5) Contacts in unpowered state. Any relay that is programmed as Fault or Alarm energizes (pick up) when power is applied to the AFE, and de-energizes (drop out) when a fault or alarm exists. Relays selected for other functions energize only when that condition exists and de-energizes when the condition is removed.
- (6) When this output is configured as active, it can be wired to the Enable input of the connected drives to prevent the AFE from supplying power when the AFE is not running.

Typical I/O Wiring

The IP21 Rittal enclosure for the AFE is wired at the factory and programmed to operate from the operator switches on the front of the enclosure. The AFE in the IP21 Rittal enclosure has a motor-controlled circuit breaker (MCCB). The AFE is configured to run when precharge is complete, the MCCB is

closed, and no faults are present. The [Figure 40](#) shows the factory-installed wiring.

Figure 40 - Factory-installed Wiring Diagram for AFE in IP21 Rittal Enclosure

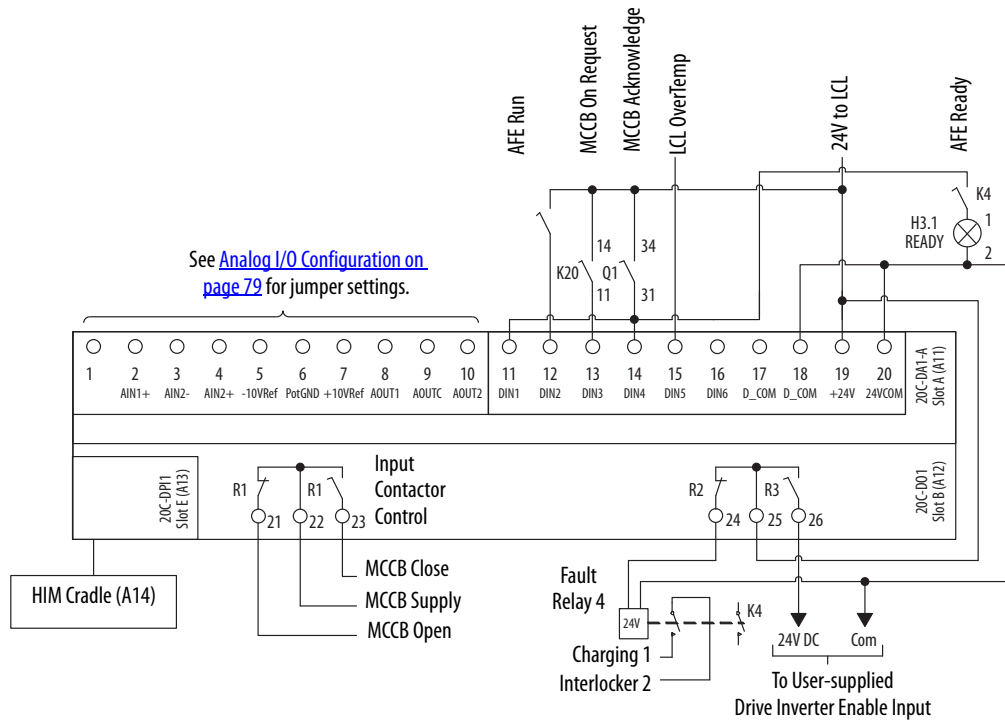

Analog I/O Configuration

IMPORTANT Analog I/O must be configured through programming, and the jumpers shown in [Table 18](#). See [Figure 39](#) for jumper locations and [Table 18](#) for I/O jumper configurations.

Table 18 - I/O Configuration for AFE in IP21 Rittal Enclosure

Signal	Jumper	Setting		
Analog inputs	J1 (analog in 1) J2 (analog in 2)	0...20 mA	0...10V	±10V
Analog outputs	J3 (analog out 1) J4 (analog out 2)	0...20 mA	0...10V	±10V

Hardware Enable Circuitry



ATTENTION: For the AFE in the IP21 Rittal enclosure, digital inputs 1, 3, 4, and 5, and digital outputs 1 and 2, are wired at the factory and programmed to operate from the controls on the front of the enclosure. Do not change the wiring and programming for those digital inputs and outputs, or it results in malfunction of the system.

You can program a digital input as an Enable input. The AFE software interprets the status of this input. If the application requires the AFE to be disabled without software interpretation, a ‘dedicated’ hardware enable configuration can be used. Remove jumper J5 (Figure 39) and wire the enable input to Digital In 6 (see Table 19). Verify that [Digital In6 Sel], parameter 226 is set to ‘1’ (Enable).

Table 19 - Hardware Enable Configuration for AFE in IP21 Rittal Enclosure

Signal	Jumper	Setting	
Hardware Enable	J5	Hardware Enable	Input Programmable (no hardware enable)

Analog I/O Wiring Examples for AFE in IP21 Rittal Enclosure

Input/Output	Connection Example	Required Parameter Changes
Potentiometer unipolar DC volt reference 10k Ω Pot. recommended (2k Ω min)		<ul style="list-style-type: none"> Configure input for voltage: Parameter 200 and set appropriate jumper per Table 18. Adjust scaling: Parameters 80/81 and 204/205 View Results: Parameter 018
Analog voltage input unipolar DC volt reference 0...10V input		<ul style="list-style-type: none"> Configure input for voltage: Parameter 200 and set appropriate jumper per Table 18. Adjust scaling: Parameters 80/81 and 204/205 View results: Parameter 018
Analog current input unipolar DC volt reference 4...20 mA input		<ul style="list-style-type: none"> Configure input for current: Parameter 200 and set appropriate jumper per Table 18. Adjust scaling: Parameters 80/81 and 204/205 View results: Parameter 018.
Analog output \pm 10V, 4...20 mA bipolar +10V unipolar (shown)		<ul style="list-style-type: none"> Configure with Parameter 207 and set appropriate jumper per Table 18. Select source value: Parameter 209 - [Analog Out1 Sel] Adjust scaling: Parameters 210/211

Precharging the AFE

This section contains important information about AFE precharging.

Introduction

An AFE in the IP21 Rittal enclosure contains an internal precharging circuit. The precharging unit is used to charge the DC bus capacitors. The charging time depends on the capacitance of the intermediate circuit and the resistance of the charging resistors. [Table 20](#) shows the technical specifications for the precharge in the AFE enclosure. For correct operation of the precharging circuit, the input circuit breaker and the precharging circuit contactor must be controlled by the AFE.

Table 20 - Total DC Bus Capacitance Limits for Precharging Circuit of AFE in IP21 Rittal Enclosure

Frame Size	Resistance	Capacitance, min ⁽¹⁾	Capacitance, max ⁽²⁾
10	2 x 20 Ω	9900 μF	70,000 μF
13	2 x 11 Ω	29,700 μF	128,000 μF

(1) The minimum capacitance is built into the AFE.

(2) The maximum capacitance is the capacitance of the AFE plus the external capacitance.



ATTENTION: If the maximum capacitance is exceeded, component damage in AFE occurs.

Important Guidelines

Read and understand these guidelines:

- If drives **without** internal precharge are used and a disconnect is installed between the input of the drive and the DC bus, you must use an external precharge circuit between the disconnect and the DC input of the drive.
- If drives **with** internal precharge are used with a disconnect switch to the common bus, you must connect an auxiliary contact on the disconnect to a digital input of the drive. The corresponding input must be set to the 'Precharge Enable' option. This option provides the proper precharge interlock, guarding against possible damage to the drive when connected to a common DC bus.
- The precharge status of the AFE must be interlocked with the connected drives, such that the drives are disabled (not running) when the AFE is in a precharge state.

CE Conformity

Conformity with the Low Voltage (LV) Directive and Electromagnetic Compatibility (EMC) Directive has been demonstrated by using harmonized European Norm (EN) standards published in the Official Journal of the European Communities. PowerFlex Active Front End units comply with the EN standards listed here when installed according to this User Manual and the PowerFlex drive Reference Manual.

Declarations of Conformity are available online at this link:

<http://www.rockwellautomation.com/certification/overview.page>

Low Voltage Directive (2006/95/EC)

EN61800-5-1 Adjustable speed electrical power drive systems Part 5-1: Safety requirements – Electrical, thermal and energy.

EMC Directive (2004/108/EC)

EN61800-3 Adjustable speed electrical power drive systems Part 3: EMC product standard including specific test methods.

General Notes

- The AFE can cause radio frequency interference if used in a residential or domestic environment. You are required to take measures to help prevent interference, and follow the essential requirements for CE compliance listed here, if necessary.
- Conformity of the AFE with CE EMC requirements does not guarantee an entire machine or installation complies with CE EMC requirements. Many factors can influence total machine/installation compliance.

Essential Requirements for CE Compliance

Conditions 1...6 listed here must be satisfied for the PowerFlex Active Front End to meet the requirements of EN61800-3.

1. Use a standard PowerFlex Active Front End CE-compatible unit.
2. Review important precautions and attention statements throughout this document before installing the Active Front End.
3. Grounding as described on [page 59](#).

4. Control (I/O) and signal wiring must be braided, shielded cable with a coverage of 75% or better, metal conduit, or have shielding/cover with equivalent attenuation.
5. All shielded cables must terminate with proper shielded connector.
6. Motor cables of DC input drives that are used with the AFE must be shielded cable wire with a coverage of 75% or more, or must be inside metal conduit or have shielding/cover with equivalent attenuation.

Notes:

Startup

This chapter describes how to start up the Active Front End. For a brief description of the HIM, see [Appendix B](#).

Topic	Page
AFE in IP20 2500 MCC Style Enclosure	85
AFE in IP21 Rittal Enclosure	90



ATTENTION: Power must be applied to the Active Front End to perform the following start-up procedure. Some of the voltages present are at incoming line potential. To avoid electric shock hazard or damage to equipment, only qualified service personnel must perform the following procedure. Thoroughly read and understand the procedure before beginning. If an event does not occur while performing this procedure, **do not proceed. Remove power**, including user-supplied control voltages. User-supplied voltages can exist even when main AC power is not applied to the AFE. Correct the malfunction before continuing.

The basic start-up procedure must be performed when starting a new AFE to verify the condition of the unit, and to configure essential parameters for operating the AFE.

Names of the switches, push buttons, and status indicators are different for an AFE in an IP20 2500 MCC Style enclosure and an AFE in an IP21 Rittal enclosure. See the appropriate subsection for your enclosure.

AFE in IP20 2500 MCC Style Enclosure

This procedure requires that a HIM is installed. If an operator interface is not available, remote devices must be used to start up the AFE.

Startup Procedure

Before Applying Power to the AFE

1. Verify that the input circuit breaker is off.
2. Confirm that all wiring to the AFE (AC Input, ground, DC bus, and I/O) is connected to the correct AFE terminals and is secure.
3. Verify that AC line power at the disconnect device is within the rated value of the AFE.

4. Verify that the control power voltage is correct.
5. When DC disconnects are used for each inverter, verify that the disconnect levers for all inverters are set to off.
6. Set the REM-MAN-AUTO switch to MAN.
7. Set the OFF-ON-START switch to OFF.

Programming the AFE


1. Turn the AFE circuit breaker handle to on.
2. Set parameter 091 [Reset To Defaults] to the appropriate setting for your installation.

<p>091 [Reset to Defaults]</p> <p> Resets parameters to default configurations except parameters 093 [Language] and 090 [Param Access Lvl].</p> <p>0 (ready) = A new value can be entered.</p> <p>1 (factory) = Resets parameters to default configurations.</p> <p>2 (low voltage) = Resets parameters to default configurations and configures parameters for a:</p> <ul style="list-style-type: none"> - 400/480V AFE unit for 400V operation. - 600/690V AFE unit for 600V operation. <p>3 (high voltage) = Resets parameters to default configurations and configures parameters for a:</p> <ul style="list-style-type: none"> - 400/480V AFE unit for 480V operation. - 600/690V AFE unit for 690V operation. <p>IMPORTANT: The DC bus voltage must be present to set the voltage class.</p>	<table border="0"> <tr> <td>Default:</td> <td>0</td> <td>Ready</td> </tr> <tr> <td>Options:</td> <td>0</td> <td>Ready</td> </tr> <tr> <td></td> <td>1</td> <td>Factory</td> </tr> <tr> <td></td> <td>2</td> <td>Low voltage</td> </tr> <tr> <td></td> <td>3</td> <td>High voltage</td> </tr> </table>	Default:	0	Ready	Options:	0	Ready		1	Factory		2	Low voltage		3	High voltage
Default:	0	Ready														
Options:	0	Ready														
	1	Factory														
	2	Low voltage														
	3	High voltage														

3. Use the HIM to enter the Assisted Start-up procedure.

Step	Example LCD Display
<p>a. In the Main Menu, use the or key to scroll to 'Start Up'.</p> <p>b. Press the (Enter) key.</p>	<div style="border: 1px solid black; padding: 5px; font-family: monospace;"> <p>F-> Stopped Auto </p> <p style="text-align: center;">0.0 Volt</p> <p>Main Menu:</p> <p>Memory Storage</p> <p style="background-color: black; color: white;">Start Up</p> <p>Preferences</p> </div>

Figure 41 - Active Front End Start-up Procedure Menu

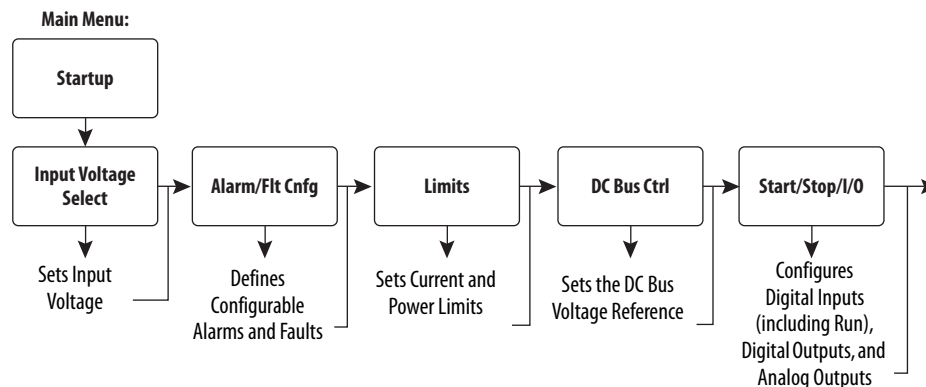

4. Enter the Input Voltage Selection in the Start-up Routine.
Select the appropriate AC input voltage for your installation (480, for example). To accept each default setting, press Enter.
5. Enter the Alarm/Flt Cnfg selection.
The Alarm/Flt Cnfg sets parameters 120 [Fault Config] and 135 [Alarm Config]. For basic applications, the default settings can be used. To accept each default setting, press Enter.
6. Enter the Limits section.
For basic applications, the default settings for the parameters 75 [Motor Power Lmt], 76 [Regen Power Lmt], and 77 [Current Lmt Val] can be used. By default, [Regen Power Lmt] and [Current Lmt Val] are set to let maximum peak power flow from the DC bus to the AC line, and helps prevent DC bus overvoltage faults on the inverters. To accept each default setting, press Enter.
7. Enter the DC Bus Ctrl section of the Start-up routine.
By default, the DC bus voltage reference is set to come from parameter 61 [DC Volt Ref]. With this setting, the DC Volt Ref is calculated based on the selected AC input voltage. For basic applications, this setting for the DC bus voltage reference is sufficient. To accept each default setting, press Enter.
8. Enter the Start/Stop/IO section.
Parameters 221...225 [Digital In 1...5 Sel] and parameters 228, 229, and 233 [Digital Out 1...3 Sel] are set to run the AFE from the operator switches on the AFE door (see [Figure 23 on page 45](#) for the typical I/O wiring diagram). To run the AFE through a network communication adapter, change digital input 1 from 'Run' to 'Not Used', and send a Start command through the communication adapter. (For DPI™ communication details, see [DPI Communication Configurations on page 152](#).) To accept each default setting, press Enter. Analog outputs can also be programmed through this procedure if desired.
9. Disable the AFE output when the AFE is not active (not modulating).
Connect the 'Inverter Enable' output of the AFE to the variable frequency drive enable input, or enable parameter 132 [Contact Off Cnfg] to force off the main contactor if there is a fault. This configuration makes sure that once the AFE stops modulating, there is no motoring current flowing through the AFE IGBT diodes. Failure to disable the AFE output can result in component damage or a reduction in product life.

When enabling parameter 132, see [page 109](#) for details. The AFE is shipped with parameter 132 disabled. This disabled parameter does not stop or shut down DC output when a fault occurs.
10. To complete the Assisted Start-up procedure, select Done/Exit.


Status Indicators

For information on AFE status indicators, see [AFE Status on page 125](#).

Control Devices

[Figure 42](#) shows the operators or control devices (switches, push buttons, and status indicators) on an IP20 2500 MCC Style enclosure.

Figure 42 - Control Devices for AFE in IP20 2500 MCC Style Enclosure

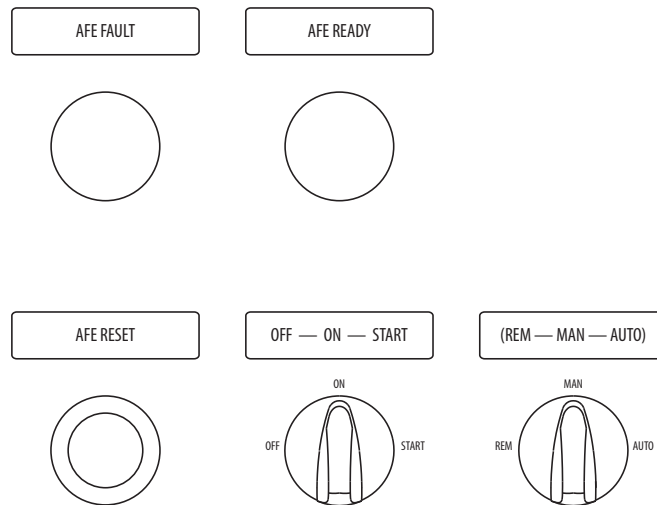

The AFE READY status indicator lights up when precharge is completed, the input contactor K1 is closed, AC power is connected to the AFE, and no faults are active. The AFE READY status indicator operates independent of the control method.

The AFE FAULT status indicator lights to indicate that the AFE is in a fault state.

In an overcurrent situation, the fault that caused the input circuit breaker (Q0) to trip must be identified and fixed before resetting the breaker.


Modes of Operation

There are three different modes in which the contactor and precharge can be controlled. The desired control is selected with the REM-AUTO-MAN selector switch.

1. **AUTO** – Automatic operation that precharges and closes the contactor when the supply voltage is energized.
 - a. Set the REM-AUTO-MAN switch to AUTO.
 - b. Set the OFF-ON-START switch to ON.

The precharging of the units starts when input power is present. When the DC bus voltage reaches its nominal value, the contactor closes.

To stop the AFE, turn the OFF-ON-START switch to OFF.


IMPORTANT Pressing the  (Stop) key on the HIM only stops the AFE output – it does not open the input contactor to stop the AFE. When a voltage drop or a blackout occurs in the supplying network, the unit precharges automatically and closes the input contactor when the main supply voltage returns.

2. **MAN** – Manual operation by the OFF-ON-START switch on the enclosure door.
 - a. Set the REM-AUTO-MAN switch to MAN.
 - b. Turn the OFF-ON-START switch to START and let it automatically return to ON.

The precharging takes about 5...10 seconds depending on the connected DC bus capacitance. When the DC bus voltage has reached its nominal value, the AFE control closes the contactor.

The precharging can be aborted by turning the switch to OFF.


To stop the AFE, turn the OFF-ON-START switch to OFF.

IMPORTANT Pressing the  (Stop) key on the HIM only stops the AFE output—it does not open the input contactor to stop the AFE. When a voltage drop or a blackout occurs in the supplying network, the input contactor opens. To turn on the AFE, turn the OFF-ON-START switch to START and let it automatically return to ON.

3. **REM** – Remote operation with signals to the control terminals.
 - a. Set the REM-AUTO-MAN switch to REM.
 - b. Connect a normally closed (NC) contact to terminals X3:58 and X3:61.

This contact has to be in the NC-state for the AFE to precharge and run. A remote pulse of 0.4...1.0 seconds duration, connected to terminals X3:57 and X3:60, starts the precharging of the AFE. When the DC voltage has reached its nominal value, the AFE unit automatically closes the input contactor.

To stop the AFE, turn the OFF-ON-START switch to OFF.

IMPORTANT Pressing the  (Stop) key on the HIM only stops the AFE output—it does not open the input contactor to stop the AFE. When a voltage drop or a blackout occurs in the supplying network, the input contactor opens. When the supply is restored, the precharging must be reinitiated. To turn on the AFE, turn the OFF-ON-START switch to START and let it automatically return to ON.

AFE in IP21 Rittal Enclosure

This procedure requires that a HIM is installed. If an operator interface is not available, remote devices must be used to start up the AFE.

Startup Procedure

Before Applying Power to the AFE




1. Verify that the disconnect lever is pushed to off.
2. Confirm that all wiring to the AFE (AC Input, ground, DC bus, and I/O) is connected to the correct AFE terminals and is secure.
3. Verify that AC line power at the disconnect device is within the rated value of the AFE.
4. Verify that the control power voltage is correct.
5. When DC disconnects are used for each inverter, verify that the disconnect levers for all inverters are set to off.
6. Set the MCCB CONTROL switch to MAN.
7. Set the 0-1-START switch to 0 (off).

Programming the AFE

1. Push the AFE disconnect lever to on.
2. Set parameter 091 [Reset To Defaults] to the appropriate setting for your installation.

091	<p>[Reset to Defaults]</p> <p>Resets parameters to default configurations except parameters 093 [Language] and 090 [Param Access Lvl].</p> <p>0 (ready) = A new value can be entered.</p> <p>1 (factory) = Resets parameters to default configurations.</p> <p>2 (low voltage) = Resets parameters to default configurations and configures parameters for a:</p> <ul style="list-style-type: none"> - 400/480V AFE unit for 400V operation. - 600/690V AFE unit for 600V operation. <p>3 (high voltage) = Resets parameters to default configurations and configures parameters for a:</p> <ul style="list-style-type: none"> - 400/480V AFE unit for 480V operation. - 600/690V AFE unit for 690V operation. <p>IMPORTANT: The DC bus voltage must be present to set the voltage class.</p>	<p>Default: 0 Ready</p> <p>Options: 0 Ready</p> <p style="padding-left: 20px;">1 Factory</p> <p style="padding-left: 20px;">2 Low voltage</p> <p style="padding-left: 20px;">3 High voltage</p>
-----	---	---

3. Use the HIM to enter the Assisted Start-up procedure.

Step	Example LCD Display
<p>a. In the Main Menu, use the  or  key to scroll to 'Start Up'.</p> <p>b. Press the  (Enter) key.</p>	<div style="border: 1px solid black; padding: 5px;"> <p>F-> Stopped Auto </p> <p style="text-align: center; font-size: 1.2em;">0.0 Volt</p> <p>Main Menu:</p> <p>Memory Storage</p> <p style="background-color: black; color: white; padding: 2px;">Start Up</p> <p>Preferences</p> </div>

See [Figure 41](#) for the Active Front End start-up procedure.

4. Enter the Input Voltage Selection in the start-up routine.

Select the appropriate AC input voltage for your installation (480, for example). To accept each default setting, press Enter.

5. Enter the Alarm/Flt Cnfg selection.

The Alarm/Flt Cnfg sets parameters 120 [Fault Config] and 135 [Alarm Config]. For basic applications, the default settings can be used. To accept each default setting, press Enter.

6. Enter the Limits section.

For basic applications, the default settings for the parameters 75 [Motor Power Lmt], 76 [Regen Power Lmt], and 77 [Current Lmt Val] can be used. By default, [Regen Power Lmt] and [Current Lmt Val] are set to let maximum peak power flow from the DC bus to the AC line. This power flow helps to prevent DC bus overvoltage faults on the inverters. To accept each default setting, press Enter.

7. Enter the DC Bus Ctrl section of the Start-up routine.

By default, the DC bus voltage reference is set to come from parameter 61 [DC Volt Ref]. With this setting, the DC Volt Ref is calculated based on the selected AC input voltage. For basic applications, this setting for the DC bus voltage reference is sufficient. To accept each default setting, press Enter.

8. Enter the Start/Stop/IO section.

Parameters 221...225 [Digital In 1...5 Sel] and parameters 228, 229, and 233 [Digital Out 1...3 Sel] are set to run the AFE from the operator switches on the AFE door (see [Figure 40 on page 79](#) for the typical I/O wiring diagram). To run the AFE through a network communication adapter, change digital input 1 from 'Run' to 'Not Used', and send a Start command through the communication adapter. (For DPI communication details, see [DPI Communication Configurations on page 152](#).) To accept each default setting, press Enter. Analog outputs can also be programmed through this procedure if desired.

9. Disable the AFE output when the AFE is not active (not modulating).

Connect the 'Inverter Enable' output of the AFE to the variable frequency drive enable input, or enable parameter 132 [Contact Off Cnfg] to force off the main contactor if there is a fault. This configuration makes sure that once the AFE stops modulating, there is no motoring current flowing through the AFE IGBT diodes. Failure to disable the AFE output can result in component damage or a reduction in product life.

When enabling parameter 132, see [page 109](#) for details. The AFE is shipped with parameter 132 disabled. This disabled parameter does not stop or shut down DC output when a fault occurs.

10. To complete the Assisted Start-up procedure, select Done/Exit.


Status Indicators

For information on AFE status indicators, see [AFE Status on page 125](#).

Control Devices

[Figure 43](#) shows the operators or control devices (switches, push buttons, and status indicators) on an IP21 Rittal enclosure.

Figure 43 - Control Devices for AFE in IP21 Rittal Enclosure

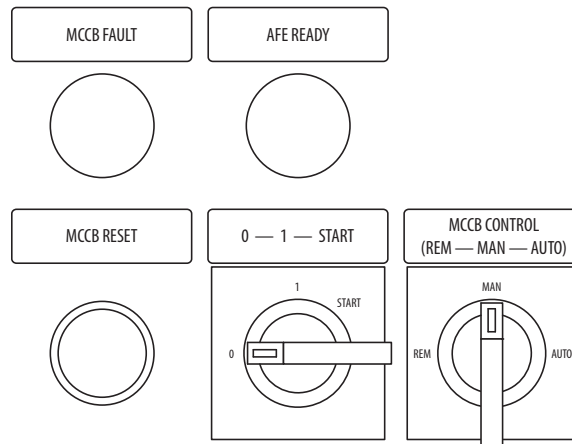

The AFE READY status indicator lights up when precharge is completed, the MCCB is closed, AC power is connected to the AFE, and no faults are active. The AFE READY status indicator operates independent of the control method.

The MCCB FAULT status indicator lights to indicate that the circuit breakers are in a tripped state.

In an overcurrent situation, the fault that caused the circuit breaker to trip must be identified and fixed before resetting the circuit breakers. The MCCB can be reset only by pressing the MCCB RESET push button when the MCCB CONTROL switch is in MAN.


MCCB (Motor-controlled Circuit Breaker) and Modes of Operation

There are three different modes in which the MCCB and precharge can be controlled. The desired control is selected with the MCCB CONTROL selector switch.

1. **AUTO** – Automatic operation that automatically precharges and closes the MCCB when the supply voltage is energized.
 - a. Set the MCCB CONTROL switch to AUTO.
 - b. Set the 0-1-START switch to 1 (on).

The precharging of the unit automatically starts when input power is present. When the DC Bus Voltage reaches its nominal value, the circuit breaker automatically closes.

To stop the AFE, turn the 0-1-START switch to 0 (off).

IMPORTANT Pressing the  (Stop) key on the HIM only stops the AFE output—it does not open the MCCB to stop the AFE.

When a voltage drop or a blackout occurs in the supplying network, the unit precharges automatically and closes the circuit breakers when the main supply voltage returns.


2. **MAN** – Manual operation by the 0-1-START switch on the enclosure door.

- a. Set the MCCB CONTROL switch to MAN.
- b. Turn the 0-1-START switch to START and let it automatically return to 1.

The precharging takes about 5...10 seconds depending on the connected DC bus capacitance. When the DC bus voltage has reached its nominal value, the AFE control automatically closes the circuit breaker.

The precharging can be aborted by turning the switch to 0 (off).

To stop the AFE, turn the 0-1-START switch to 0 (off).

IMPORTANT Pressing the  (Stop) key on the HIM only stops the AFE output—it does not open the MCCB to stop the AFE.

When a voltage drop or a blackout occurs in the supplying network, the under voltage release coil opens the circuit breaker. To turn on the AFE, turn the 0-1-START switch to START and let it automatically return to 1 (on).


3. **REM** – Remote operation with signals to the control terminals.

- a. Set the MCCB CONTROL switch to REM.
- b. Connect a normally closed (NC) contact to terminals X1:58 and X1:61.

This contact has to be in the NC-state for the AFE to precharge and run. A remote pulse of 0.4...1.0 seconds duration, connected to terminals X1:57 and X1:60, starts the precharging of the AFE. When the DC voltage has reached its nominal value, the AFE unit automatically closes the circuit breakers.

To stop the AFE, turn the 0-1-START switch to 0 (off).

IMPORTANT

Pressing the  (Stop) key on the HIM only stops the AFE output – it does not open the MCCB to stop the AFE.

When a voltage drop or a blackout occurs in the supplying network, the undervoltage release coil opens the circuit breaker. When the supply is restored, the precharging and MCCB closing must be reinitiated. To turn on the AFE, turn the 0-1-START switch to START and let it automatically return to 1 (on).

Programming and Parameters

This chapter provides a complete listing and description of the PowerFlex® Active Front End parameters. The parameters can be programmed (viewed or edited) by using a HIM. Alternatively, programming can be performed using a personal computer with a configuration tool such as Connected Components Workbench™ software, DriveExecutive™ software, or DriveExplorer™ software.

Topic	Page
About Parameters	95
How AFE Parameters are Organized	96
Monitor File	99
Dynamic Control File	101
Utility File	105
Communication File	111
Inputs and Outputs File	113
Parameter Cross Reference – by Name	117
Parameter Cross Reference – by Number	120

About Parameters

To configure the AFE to operate in a specific way, certain AFE parameters have to be configured appropriately. There are three types of parameters:

- **Numeric Parameters**

These parameters have a numeric value (such as 1V AC).

- **ENUM Parameters**

These parameters allow a selection from two or more items. The HIM displays a text message for each item.



- **Bit Parameters**

These parameters have individual bits associated with features or conditions. If the bit is 0, the feature is off or the condition is false. If the bit is 1, the feature is on or the condition is true.

The following example table shows how each parameter type is presented in this manual.

Example Parameter Tables

File	Group	No.	Parameter Name and Description	Values																																																			
DYNAMIC CONTROL	Control Modes	040	[Nom Input Volt] Sets the incoming supply voltage level that is used to calculate the DC voltage level for charging control.	Default: Based on Unit Rating Min/Max: Based on Unit Rating Units: 1V AC																																																			
		046	[Start/Stop Mode] Selects the operating mode for the regenerative unit. 0 (Normal) = The converter starts only with a Run request. 1 (Auto) = The converter starts regenerative operation automatically whenever the DC voltage is higher than the DC voltage reference and stops when there is no regeneration. The converter starts by a Run or Start command. To avoid starting, a digital input can be configured to 'enable'. Auto mode selection is allowed only if an external motoring bus supply is installed.	Default: 0 Normal Options: 0 Normal 1 Auto																																																			
COMMUNICATION	Masks and Owners	154	[Logic Mask] Determines which communication adapters can control the unit. If the bit for an adapter is set to '0', the adapter has no control functions except for stop.	<table border="1"> <thead> <tr> <th>Bit Definition</th> <th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th>DPI Port 5</th><th>DPI Port 4</th><th>DPI Port 3</th><th>DPI Port 2</th><th>DPI Port 1</th><th>Digital In</th> </tr> </thead> <tbody> <tr> <td>Default</td> <td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>1</td><td>1</td><td>1</td><td>1</td><td>1</td><td>1</td> </tr> <tr> <td>Bit</td> <td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td> </tr> </tbody> </table> <p>0 = Control Permitted 1 = Control Masked x = Reserved</p>	Bit Definition											DPI Port 5	DPI Port 4	DPI Port 3	DPI Port 2	DPI Port 1	Digital In	Default	x	x	x	x	x	x	x	x	x	x	1	1	1	1	1	1	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Bit Definition											DPI Port 5	DPI Port 4	DPI Port 3	DPI Port 2	DPI Port 1	Digital In																																							
Default	x	x	x	x	x	x	x	x	x	x	1	1	1	1	1	1																																							
Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																							

Description	
File – Lists the major parameter file category.	
Group – Lists the parameter group within a file.	
No. – Parameter number.  = Parameter value cannot be changed until the AFE is stopped.  = 32-bit parameter.	
Parameter Name and Description – Parameter name as it appears on a HIM, with a brief description of the parameter function.	
Values – Defines the various operating characteristics of the parameter. Three parameter types exist.	
ENUM	Default: Lists the value assigned at the factory. Read Only = no default. Options: Displays the available programming selections.
Bit	Bit: Lists the bit place holder and definition for each bit.
Numeric	Default: Lists the value assigned at the factory. Read Only = no default. Min/Max: The range (lowest and highest setting) possible for the parameter. Units: Unit of measure and resolution as shown on the HIM.

How AFE Parameters are Organized





The HIM displays parameters in a File-Group-Parameter or Numbered List view order. To switch display mode, access the Main Menu, press the **ALT** key, and release it, and while the cursor is on the parameter selection, press the **Sel** key. In addition, parameter 090 [Param Access Lvl] can be set to display basic parameters (basic view) or all parameters (advanced view).

File-Group-Parameter Order

This organization groups parameters that are used for similar functions. The parameters are organized into files. Each file is divided into groups, and each group contains a set of parameters related to a specific purpose. By default, the HIM displays parameters by File-Group-Parameter view.






Basic Parameter View

Parameter 090 [Param Access Lvl] set to option '0' (Basic).

File	Group	Parameters					
	Metering	Input Voltage	001	Active Current	004	Input Current S	007
		AC Line Freq	002	Reactive Current	005	Input Current T	008
		Total Current	003	Input Current R	006	DC Bus Volt	011
	Converter Data	Rated kW	030	Rated Amps	032		
		Rated Volts	031	Control SW Ver	033		
	Control Modes	Nom Input Volt	040				
		Start/Stop Mode	046				
	Voltage Loop	DC Volt Ref Sel	060				
		DC Volt Ref	061				
	Limits	Motor Power Lmt	075	Current Lmt Val	077	DC Bus Hi Alarm	079
		Regen Power Lmt	076	DC Bus Lo Alarm	078		
	Converter Memory	Param Access Lvl	090	Voltage Class	094		
		Reset to Defaults	091				
		Language	093				
	Diagnostics	Start Inhibits	100				
		Dig In Status	102				
		Dig Out Status	103				
	Faults	Fault Config	120				
	Alarms	Alarm Config	135				
		Analog Inputs	Anlg In Config	200	Analog In 2 Hi	204	
			Analog In 1 Hi	201	Analog In 2 Lo	205	
			Analog In 1 Lo	202			
Analog Outputs		Analog Out1 Sel	209	Analog Out2 Sel	212		
		Analog Out1 Hi	210	Analog Out2 Hi	213		
		Analog Out1 Lo	211	Analog Out2 Lo	214		
Digital Inputs		Digital In1 Sel	221	Digital In4 Sel	224		
		Digital In2 Sel	222	Digital In5 Sel	225		
		Digital In3 Sel	223	Digital In6 Sel	226		
Digital Outputs		Digital Out1 Sel	228	Digital Out3 Sel	233		
		Digital Out2 Sel	229	Dig Out3 Invert	234		
		Dig Out2 Invert	230				

Advanced Parameter View

Parameter 090 [Param Access Lvl] set to option '1' (Advanced).




File	Group	Parameters						
	Metering	Input Voltage	001	I Imbalance	009	Heatsink Temp	017	
		AC Line Freq	002	Ground Current	010	Cmd DC Volt	018	
		Total Current	003	DC Bus Volt	011	Motoring MWh	019	
		Active Current	004	DC Bus Current	012	Regen MWh	020	
		Reactive Current	005	AC Line kW	013	Elapsed Run Time	021	
		Input Current R	006	AC Line kVar	014	Analog In1 Value	022	
		Input Current S	007	AC Line kVA	015	Analog In2 Value	023	
		Input Current T	008	Power Factor	016			
	Converter Data	Rated kW	030	Rated Amps	032			
		Rated Volts	031	Control SW Ver	033			
	Control Modes	Nom Input Volt	040	RatedLineCurrent	045	Auto Stop Level	049	
		PWM Frequency	041	Start/Stop Mode	046	Contact On Delay	050	
		Modulation Type	042	Restart Delay	047	Control Options	051	
		Modulation Index	043	Stop Delay	048			
	Restart Modes	AutoRstrt Config	052	Auto Rstrt Tries	053	Auto Rstrt Delay	054	
	Voltage Loop	DC Volt Ref Sel	060	DC Volt Kp	062			
		DC Volt Ref	061	DC Volt Ki	063			
	Current Loop	Active I Ref	064	Active I Ki	067	Reactive I Sel	070	
		Reactive I Ref	065	Reactive I Kp	068			
		Active I Kp	066	Reactive I Ki	069			
	Limits	Motor Power Lmt	075	DC Bus Lo Alarm	078	DC Ref Hi Lmt	081	
		Regen Power Lmt	076	DC Bus Hi Alarm	079	Ground I Lvl	082	
		Current Lmt Val	077	DC Ref Lo Lmt	080			
	Parallel Mode	Drop	085	PWM Synch	086	Start Up Delay	087	
		Converter Memory	Param Access Lvl	090	Reset Meters	092	Voltage Class	094
Reset To Defaults			091	Language	093			
Diagnostics		Cnvrtr Status 1	095	Dig Out Status	103	Alarm 2 @ Fault	111	
		Cnvrtr Status 2	096	Fault Frequency	104	Testpoint 1 Sel	112	
		Cnvrtr Alarm 1	097	Fault Total Curr	105	Testpoint 1 Data	113	
		Cnvrtr Alarm 2	098	Fault Bus Volts	106	Testpoint 2 Sel	114	
		DC Ref Source	099	Fault Temp	107	Testpoint 2 Data	115	
		Start Inhibits	100	Status 1 @ Fault	108	Cnvrtr OL Count	116	
		Last Stop Source	101	Status 2 @ Fault	109			
		Dig In Status	102	Alarm 1 @ Fault	110			
		Faults	Fault Config	120	Fault 2 Code	125	Fault 3 Time	130
			Fault Clear	121	Fault 3 Code	126	Fault 4 Time	131
Fault Clear Mode			122	Fault 4 Code	127	Contact Off Cnfg	132	
Power Up Marker			123	Fault 1 Time	128	Cnvrtr OL Factor	133	
Fault 1 Code			124	Fault 2 Time	129			
Alarms		Alarm Config	135	Alarm 1 Code	137	Alarm 3 Code	139	
		Alarm Clear	136	Alarm 2 Code	138	Alarm 4 Code	140	
		Comm Control	DPI Baud Rate	150	DPI Port Sel	152		
	Cnvrtr LogicRslt		151	DPI Port Value	153			
	Masks and Owners	Logic Mask	154	Stop Owner	156	Fault Clr Owner	158	
		Fault Clr Mask	155	Start Owner	157			
	Datalinks	Data In A1	170	Data In D1	176	Data Out C1	184	
		Data In A2	171	Data In D2	177	Data Out C2	185	
		Data In B1	172	Data Out A1	180	Data Out D1	186	
		Data In B2	173	Data Out A2	181	Data Out D2	187	
		Data In C1	174	Data Out B1	182			
		Data In C2	175	Data Out B2	183			
		Analog Inputs	Anlg In Config	200	Analog In 1 Loss	203	Analog In 2 Loss	206
			Analog In 1 Hi	201	Analog In 2 Hi	204		
Analog In 1 Lo			202	Analog In 2 Lo	205			
Analog Outputs		Anlg Out Config	207	Analog Out1 Lo	211	Anlg Out1 Scale	215	
		Anlg Out Absolut	208	Analog Out2 Sel	212	Anlg Out2 Scale	216	
		Analog Out1 Sel	209	Analog Out2 Hi	213	Anlg Out1 Setpt	217	
		Analog Out1 Hi	210	Analog Out2 Lo	214	Anlg Out2 Setpt	218	
Digital Inputs		Digital In1 Sel	221	Digital In3 Sel	223	Digital In5 Sel	225	
		Digital In2 Sel	222	Digital In4 Sel	224	Digital In6 Sel	226	
Digital Outputs		Dig Out Setpt	227	Dig Out2 OnTime	231	Dig Out3 OnTime	235	
		Digital Out1 Sel	228	Dig Out2 OffTime	232	Dig Out3 OffTime	236	
		Digital Out2 Sel	229	Digital Out3 Sel	233			
		Dig Out2 Invert	230	Dig Out3 Invert	234			

Monitor File

File	Group	No.	Parameter Name and Description	Values
MONITOR	Metering	001	[Input Voltage] Displays the incoming supply voltage, only when the AFE is in the Run state.	Default: Read Only Min/Max: 0.0/1000.0V AC Units: 0.1V AC
		002	[AC Line Freq] Displays the supply frequency. The sign indicates the phase order, only when the AFE is in the Run state.	Default: Read Only Min/Max: -63.0/63.0 Hz Units: 0.1 Hz
		003 ▽ ³²	[Total Current] Displays the total AC input current present at L1, L2, and L3 inputs.	Default: Read Only Min/Max: 0.0/[Rated Amps] x 2 Units: 0.1 Amps
		004 ▽ ³²	[Active Current] Displays the amount of AC input current that is in phase with the AC input fundamental voltage component. Positive value indicates motoring; negative value indicates regeneration.	Default: Read Only Min/Max: +/- [Rated Amps] x 2 Units: 0.1 Amps
		005 ▽ ³²	[Reactive Current] Displays the amount of AC input current that is out of phase with the AC input fundamental voltage component. Positive value indicates inductive current; negative value indicates capacitive current.	Default: Read Only Min/Max: +/- [Rated Amps] x 2 Units: 0.1 Amps
		006 007 008	[Input Current R] [Input Current S] [Input Current T] Displays the RMS value of the L1, L2, and L3 phase AC input current.	Default: Read Only Min/Max: 0.0/6553.5 Amps Units: 0.1 Amps
		009	[I Imbalance] Displays the current imbalance calculated between phases L1, L2, and L3. The RMS current for each phase is calculated by summing the instantaneous current squared as sampled at the PWM peak and valley, and then taking the square root of the sum every AC line cycle. The imbalance is then evaluated every AC line cycle by first finding the largest, smallest, and average phase current. Two equations are then used to calculate the value displayed: Based_on_Largest = (Largest - Average) x 100 / Average Based_on_Smallest = (Smallest - Average) x 100 / Average The equation that gives the higher value is used for the display.	Default: Read Only Min/Max: 0.0/100.0% Units: 0.1%
		010	[Ground Current] Displays the ground current measured by summing the three input phase currents.	Default: Read Only Min/Max: 0.0/[Rated Amps] x 2 Units: 0.1 Amps
		011	[DC Bus Volt] Displays the filtered DC bus voltage. The filter time constant is 32 milliseconds.	Default: Read Only Min/Max: 0.0/Based on Unit Rating Units: 0.1V DC
		012 ▽ ³²	[DC Bus Current] Displays the DC bus current. Positive value indicates motoring; negative value indicates regeneration.	Default: Read Only Min/Max: +/- Based on Unit Rating Units: 0.1 Amps
		013 ▽ ³²	[AC Line kW] Displays the real power on the AC side. Positive value indicates motoring; negative value indicates regeneration.	Default: Read Only Min/Max: +/- Based on Unit Rating Units: 0.1 kW
		014 ▽ ³²	[AC Line kVar] Displays the reactive power on the AC line.	Default: Read Only Min/Max: +/- Based on Unit Rating Units: 0.1 kVar
		015 ▽ ³²	[AC Line kVA] Displays the apparent power on the AC line.	Default: Read Only Min/Max: 0.0/Based on Unit Rating Units: 0.1 kVA
		016	[Power Factor] Displays the power factor. Positive value indicates motoring power; negative sign indicates regenerative power.	Default: Read Only Min/Max: +/-1.00 Units: 0.01
		017	[Heatsink Temp] Displays the measured heatsink temperature.	Default: Read Only Min/Max: 0/200 °C Units: 1 °C

File	Group	No.	Parameter Name and Description	Values
MONITOR	Metering	018	[Cmd DC Volt] Displays the commanded DC bus voltage reference.	Default: Read Only Min/Max: 0.0/1500.0V DC Units: 0.1V DC
		019	[Motoring MWh] Displays the accumulated motoring MWh. This parameter can be reset with parameter 092 [Reset Meters].	Default: Read Only Min/Max: 0.0/429496729.5 MWh Units: 0.1 MWh
		020	[Regen MWh] Displays the accumulated regenerative MWh fed back to the AC line. This parameter can be reset with parameter 092 [Reset Meters].	Default: Read Only Min/Max: 0.0/429496729.5 MWh Units: 0.1 MWh
		021	[Elapsed Run Time] Displays the accumulated amount of time that the AFE has been in Run. This parameter can be reset with parameter 092 [Reset Meters].	Default: Read Only Min/Max: 0.0/214748364.0 Hr Units: 0.1 Hr
		022 023	[Analog In1 Value] [Analog In2 Value] Displays the value of the signal at the analog inputs.	Default: Read Only Min/Max: 0.000/20.000 mA or -/+10.000V Units: 0.001 mA or 0.001V
	Converter Data	030	[Rated kW] Displays the nominal power rating of the AFE.	Default: Read Only Min/Max: 0.00/3000.00 kW Units: 0.01 kW
		031	[Rated Volts] Displays the nominal input voltage class (400V, 480V, 600V, or 690V) of the AFE.	Default: Read Only Min/Max: 0.0/1000.0V AC Units: 0.1V AC
		032	[Rated Amps] Displays the nominal AC input current rating of the AFE.	Default: Read Only Min/Max: 0.0/6553.5 Amps Units: 0.1 Amps
		033	[Control SW Ver] Displays the software version of the main control board of the AFE.	Default: Read Only Min/Max: 0.000/255.255 Units: 0.001

Dynamic Control File


File	Group	No.	Parameter Name and Description	Values
DYNAMIC CONTROL	Control Modes	040	[Nom Input Volt]  Sets the incoming supply voltage level. It is used to calculate the DC voltage level for charging control.	Default: Based on Unit Rating Min/Max: Based on Unit Rating Units: 1V AC
		041	[PWM Frequency] Sets the carrier frequency for the PWM output. This frequency is fixed to 3.6 kHz, and cannot be changed due to the LCL filter.	Default: 3.6 kHz Min/Max: 3.0/16.0 kHz Units: 0.1 kHz
		042	[Modulation Type]  Selects the modulation type. 0 (HW Modulator) = ASIC modulator with the classical third harmonic injection. The current distortion is lower and spectrum is slightly better compared to the Software Modulator. 1 (Software 1) = Symmetric vector modulator with symmetrical zero vectors. Current distortion is less than with software modulator 2 if boosting is used. 2 (Software 2) = Symmetric BusClamp, in which one switch always conducts 60° either to negative or positive DC-rail. Switching losses are reduced compared to the modulation type 0 and 1, and spectrum is narrow. 3 (Software 3) = Unsymmetrical BusClamp, in which one switch always conducts 120° to negative DC-rail to reduce switching losses. Drawback is that upper and lower switches are unevenly loaded and spectrum is wide. We recommend using the Software 2 setting. For AFE parallel operation, the Software 3 setting in all AFEs must be used.	Default: 2 Software 2 Options: 0 HW Modulator 1 Software 1 2 Software 2 3 Software 3
		043	[Modulation Index] Sets the modulation index limit. The default setting of modulation index is 100%. To get the maximum 1 minute overload current (ND/HD), adjust the modulation index from 100% to 120%. However, this adjustment affects the modulated output voltage and current waveform (THD) during overload operation.	Default: 100% Min/Max: 20/200% Units: 1%
		045	[RatedLineCurrent] Sets the rated current of the supply transformer. This parameter can be set if the AFE is oversized compared to the supply or feeding transformer capacity.	Default: Unit Current Min/Max: 0.0/6553.5 Amps Units: 1.0 Amps
		046	[Start/Stop Mode]  Selects the operating mode for the AFE. 0 (Normal) = The AFE starts only with the Run request by a RUN or START command. 1 (Auto) = The AFE starts regenerative operation automatically whenever the DC bus voltage is higher than the DC voltage reference, and stops when there is no regeneration. To avoid starting, a digital input can be configured to 'Enable', and turning off the digital input stops the automatic starting.	Default: 0 Normal Options: 0 Normal 1 Auto
		047	[Restart Delay] Sets the minimum time between a previous stop command and the next start request to start the AFE. This parameter takes effect only if parameter 46 [Start/Stop Mode] is set to '0' (Normal).	Default: 220 ms Min/Max: 0/32000 ms Units: 1 ms
		048	[Stop Delay] Sets the off time delay between the removal of a Run request and stopping the modulation. This parameter takes effect only if parameter 046 [Start/Stop Mode] is set to '1' (Auto). The converter stops modulating after [Stop Delay] when the converter changes from regenerative to motoring mode and the DC bus voltage is at least 3% below the DC voltage reference.	Default: 100 ms Min/Max: 0/32000 ms Units: 1 ms
		049	[Auto Stop Level] Sets the active current level for the Auto operation mode when parameter 046 [Start/Stop Mode] is set to '1' (Auto). When the active current value is higher than this value, the regeneration stops.	Default: -3.0% Min/Max: -100.0/100.0% Units: 1.0%
		050	[Contact On Delay] Sets the Main contactor on delay time (the delay from Main contactor acknowledge to modulation start).	Default: 0.40 secs Min/Max: 0.00/10.00 secs Units: 0.01 secs

File	Group	No.	Parameter Name and Description	Values																																																																																				
DYNAMIC CONTROL	Control Modes	051	<p>[Control Options] A set of bits to select AFE control options to disable different harmonic compensation.</p> <table border="1"> <thead> <tr> <th>Bit Definition</th> <th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th> </tr> <tr> <td></td> <td></td><td></td><td></td><td>DC Ref Follow</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>5th Comp Off</td><td></td> </tr> </thead> <tbody> <tr> <td>Default</td> <td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td> </tr> <tr> <td>Bit</td> <td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td><td></td><td></td><td></td><td></td> </tr> </tbody> </table> <p>1 = Condition True 0 = Condition False x = Reserved</p> <ul style="list-style-type: none"> • Bit 5 (5th Comp Off) – Disables 5th harmonic elimination when Bit 5 = 1. • Bit 12 (DC Ref Follow) – Allows the DC Voltage Reference to follow the AC Input Voltage if the input voltage is rising when Bit 12 = 1. In this case, the DC Bus Voltage Ref = P1 [Input Voltage] x P61 [DC Volt Ref] P40 [Nom Input Voltage]. However, the following limits apply to tracking the DC voltage Reference: Low Limit: Parameter 1 [Input Voltage] x 1.35 x 1.05 for all units High Limit: Parameter 40 [Nom Input Voltage] x 1.35 x 1.30 for 400V/480V units Parameter 40 [Nom Input Voltage] x 1.35 x 1.15 for 600V/690V units 	Bit Definition																									DC Ref Follow															5th Comp Off		Default	x	x	x	x	x	x	x	x	x	x	x	x	1	x	x	x	x	x	x	x	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0					
		Bit Definition																																																																																						
						DC Ref Follow															5th Comp Off																																																																			
		Default	x	x	x	x	x	x	x	x	x	x	x	x	1	x	x	x	x	x	x	x																																																																		
	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																																																							
	Restart Modes	052	<p>[AutoRstrt Config] Selects the faults cleared by the auto restart function. Parameter 053 [AutoRstrt Tries] sets the attempt numbers.</p> <table border="1"> <thead> <tr> <th>Bit Definition</th> <th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th> </tr> <tr> <td></td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>LCL OverTemp</td><td>HeatsinkUndTip</td><td>Ang In Loss</td><td>Ground Fault</td><td>AC OverCurr</td><td>IGBTOverTemp</td><td>DC OverVolt</td><td>DC UnderVolt</td><td>Auxiliary In</td><td></td><td></td><td></td> </tr> </thead> <tbody> <tr> <td>Default</td> <td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>1</td><td>0</td><td>1</td><td>0</td><td>1</td><td></td><td></td><td></td> </tr> <tr> <td>Bit</td> <td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td><td></td><td></td><td></td><td></td> </tr> </tbody> </table> <p>1 = Condition True 0 = Condition False x = Reserved</p>	Bit Definition																														LCL OverTemp	HeatsinkUndTip	Ang In Loss	Ground Fault	AC OverCurr	IGBTOverTemp	DC OverVolt	DC UnderVolt	Auxiliary In				Default	x	x	x	x	x	x	x	0	0	0	0	0	1	0	1	0	1				Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0					
		Bit Definition																																																																																						
											LCL OverTemp	HeatsinkUndTip	Ang In Loss	Ground Fault	AC OverCurr	IGBTOverTemp	DC OverVolt	DC UnderVolt	Auxiliary In																																																																					
	Default	x	x	x	x	x	x	x	0	0	0	0	0	1	0	1	0	1																																																																						
	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																																																							
053	<p>[Auto Rstrt Tries] Sets the maximum number of times the AFE attempts to reset a configured fault and restart. 0 = No automatic restarting after fault trip.</p>	Default: 0 Min/Max: 0/10 Units: None																																																																																						
054	<p>[Auto Rstrt Delay] Sets the time between restart attempts when parameter 053 [Auto Rstrt Tries] is set to a value other than zero.</p>	Default: 1.0 sec Min/Max: 0.5/30.0 sec Units: 0.1 sec																																																																																						
Voltage Loop	060	<p>[DC Volt Ref Sel] Selects the source of the DC bus voltage reference to the AFE.</p>	Default: 0 DC Volt Ref Options: 0 DC Volt Ref 1 Analog In1 2 Analog In2 3 DPI Port 1 4 DPI Port 2 5 DPI Port 3 6 DPI Port 4 7 DPI Port 5																																																																																					
	061	<p>[DC Volt Ref] Sets the DC voltage reference. Used when parameter 060 [DC Volt Ref Sel] is set to '0' (DC Volt Ref).</p>	Default: Parameter 031 [Rated Volts] x 1.35 x 1.1 Min: [Rated Volts] x 1.35 x 1.05 Max: [Rated Volts] x 1.35 x 1.3 (for 400/480V units) Units: [Rated Volts] x 1.35 x 1.15 (for 600/690V units) 0.1V DC																																																																																					
	062	<p>[DC Volt Kp] Sets the proportional gain for the bus regulator to adjust regulator response.</p>	Default: 200 Min/Max: 0/10000 Units: None																																																																																					
	063	<p>[DC Volt Ki] Sets the voltage loop integral gain for responsiveness of the bus regulator.</p>	Default: 0.0040 sec Min/Max: 0.0000/6.0000 sec Units: 0.0001 sec																																																																																					


File	Group	No.	Parameter Name and Description	Values
DYNAMIC CONTROL	Current Loop	064	[Active I Ref] Displays the active current reference.	Default: Read Only Min/Max: +/- 3200.0 Amp Units: 0.1 Amp
		065	[Reactive I Ref] If selected by [Reactive I Sel], this parameter sets the reference for the reactive current. This parameter can be used for power factor correction of the power system. Positive value gives inductive current; negative value gives capacitive current. The maximum reactive current is limited by the following formula: $\text{Maximum Reactive I Ref} = \sqrt{P032 [\text{Rated Amps}]^2 - P004 [\text{Active Current}]^2}$	Default: 0.0 Amp Min/Max: +/- Based on parameter 032 [Rated Amps] Units: 0.1 Amp
		066	[Active I Kp] Sets the active current controller gain.	Default: 400 Min/Max: 0/4000 Units: None
		067	[Active I Ki] Sets the integral gain of the active current controller.	Default: 0.0266 sec Min/Max: 0.0000/6.0000 sec Units: 0.0001 sec
		068	[Reactive I Kp] Sets the synchronization controller gain.	Default: 2000 Min/Max: 0/32000 Units: None
		069	[Reactive I Ki] Sets the integral of the synchronization controller.	Default: 0.040 sec Min/Max: 0.000/20.000 sec Units: 0.001 sec
		070	[Reactive I Sel] Selects the source from which the reactive current is taken.	Default: 0 React I Ref Options: 0 React I Ref 1 Analog In1 2 Analog In2
	Limits	075	[Motor Power Lmt] Sets the limit for motoring power on the AC line.	Default: 300.0% Min/Max: 0.1/300.0% Units: 0.1%
		076	[Regen Power Lmt] Sets the limit for regenerative power allowed to the AC line.	Default: -300.0% Min/Max: -0.1/-300.0% Units: 0.1%
		077	[Current Lmt Val] Sets the current limit value.	Default: 1.5 x [Rated Amps] Min/Max: 0.0/Based on Unit Rating Units: 0.1 Amps
		078	[DC Bus Lo Alarm] Sets the lowest acceptable DC bus voltage for the application. A warning is indicated if the DC bus voltage falls below the value of this parameter.	Default: Based on Unit Rating Min/Max: 0.0/2000.0V DC Units: 0.1V DC
		079	[DC Bus Hi Alarm] Sets the highest acceptable DC bus voltage for the application. A warning is indicated if the DC bus voltage exceeds the value of this parameter.	Default: Based on Unit Rating Min/Max: 0.0/2000.0V DC Units: 0.1V DC
		080	[DC Ref Lo Lmt] Displays the limit value of the DC bus reference low limitation, which is calculated based on the voltage class x 1.35 x 1.05.	Default: Read Only Min/Max: 0.0/1500.0V DC Units: 0.1V DC
		081	[DC Ref Hi Lmt] Displays the limit value of the DC bus reference high limitation. This limit is calculated based on the voltage class x 1.35 x 1.3 (for 400/480V units) or voltage class x 1.35 x 1.15 (for 600/690V units).	Default: Read Only Min/Max: 0.0/1500.0V DC Units: 0.1V DC
082		[Ground I Lvl] Sets the limit value of ground current in % of the unit rating before a ground current alarm or fault is activated. For AFE parallel operation, the values in all AFEs must be set to 100%.	Default: 50.0% Min/Max: 0.0/100.0% Units: 0.1% (Based on unit rating)	

File	Group	No.	Parameter Name and Description	Values
DYNAMIC CONTROL	Parallel Mode	085	[Droop] Sets the droop as % of active current reference for current balancing when AFEs are used in parallel independent mode. It affects DC bus voltage if enabled. Recommended value for parallel AFEs is 5%.	Default: 0.00% Min/Max: 0.00/100.00% Units: 0.01%
		086	[PWM Synch] Sets synchronization to reduce the circulating current between parallel connected AFEs when they are connected to the same DC bus and are fed from the same incoming power source without an isolation transformer. In this case, parameter 085 [Droop] must be set to 5% in all AFEs, and this parameter 086 [PWM Synch] must be set to '1' (Enabled).	Default: 0 Disabled Options: 0 Disabled 1 Enabled
		087	[Start Up Delay] Sets a starting delay when Run command is given. When programming different delay to parallel AFEs, the AFEs start in sequence.	Default: 0.00 sec Min/Max: 0.00/300.00 sec Units: 0.01 sec

Utility File

File	Group	No.	Parameter Name and Description	Values																																																																																								
UTILITY	Converter Memory	090	[Param Access Lvl] Selects the parameter display level. 0 (Basic) = Reduced parameter set. 1 (Advanced) = Full parameter set.	Default: 0 Basic Options: 0 Basic 1 Advanced																																																																																								
		091	 [Reset to Defaults] Resets parameters to factory defaults except parameters 093 [Language] and 090 [Param Access Lvl]. 0 (Ready) = A new value can be entered. 1 (Factory) = Resets parameters to factory defaults. 2 (Low Voltage) = Resets parameters to factory defaults and configures parameters for a: - 400/480V AFE unit for 400V operation. - 600/690V AFE unit for 600V operation. 3 (High Voltage) = Resets parameters to factory defaults and configures parameters for a: - 400/480V AFE unit for 480V operation. - 600/690V AFE unit for 690V operation. IMPORTANT: The DC bus voltage must be present to set the voltage class.	Default: 0 Ready Options: 0 Ready 1 Factory 2 Low Voltage 3 High Voltage																																																																																								
		092	[Reset Meters] Resets these selected meters (Motoring MWh, Regen MWh, and Elapsed Time) to zero.	Default: 0 Ready Options: 0 Ready 1 Motoring MWh 2 Regen MWh 3 Elapsed Time																																																																																								
		093	[Language] Limited to English language only.	Default: 0 Not Selected Options: 0 Not Selected 1 English																																																																																								
		094	[Voltage Class] Displays the last 'Reset To Defaults' operation.	Default: Read Only Options: 0 = Low Voltage 1 = High Voltage																																																																																								
UTILITY	Diagnostics	095	[Cnvtr Status 1] Displays the present operating condition of the AFE.	Read Only <table border="1" data-bbox="300 1176 909 1344"> <thead> <tr> <th>Bit Definition</th> <th>DCVltRefD2</th> <th>DCVltRefD1</th> <th>DCVltRefD0</th> <th>Cmd Delayed</th> <th>Regen CurLim</th> <th>Mot CurLim</th> <th>At Reference</th> <th>Faulted</th> <th>Alarm</th> <th>Droop Active</th> <th>In Precharge</th> <th>Regenerating</th> <th>Motoring</th> <th>Active</th> <th>Ready</th> </tr> </thead> <tbody> <tr> <td>Default</td> <td>x</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>Bit</td> <td>15</td> <td>14</td> <td>13</td> <td>12</td> <td>11</td> <td>10</td> <td>9</td> <td>8</td> <td>7</td> <td>6</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> <td>0</td> </tr> </tbody> </table> <ul style="list-style-type: none"> • Bit 0 (Ready) indicates all inhibits are cleared. • Bit 1 (Active) indicates that the AFE is modulating. • Bit 2 (Motoring) indicates that the AFE is running in Motoring mode. • Bit 3 (Regenerating) indicates that the AFE is regenerating power to the AC line. • Bit 4 (In Precharge) indicates that the AFE is in precharging status. • Bit 5 (Droop Active) indicates that the droop function for AFE paralleling is activated. • Bit 6 (Alarm) indicates that the AFE has detected an alarm. • Bit 7 (Faulted) indicates that the AFE has detected a fault. • Bit 8 (At Reference) indicates that the DC bus voltage is at the command value. • Bit 9 (Mot CurLim) indicates that the AFE exceeds the current limit in Motoring mode. • Bit 10 (Regen CurLim) indicates that the AFE exceeds the current limit in regenerative mode. • Bit 11 (Cmd Delayed) indicates pending start command. • Bits 12...14 indicate the DC bus voltage reference selection. <table border="1" data-bbox="1218 1165 1429 1428"> <thead> <tr> <th colspan="3">Bits</th> <th rowspan="2">Description</th> </tr> <tr> <th>14</th> <th>13</th> <th>12</th> </tr> </thead> <tbody> <tr><td>0</td><td>0</td><td>0</td><td>DC Volt Ref</td></tr> <tr><td>0</td><td>0</td><td>1</td><td>Analog In1</td></tr> <tr><td>0</td><td>1</td><td>0</td><td>Analog In2</td></tr> <tr><td>0</td><td>1</td><td>1</td><td>DPI Port 1</td></tr> <tr><td>1</td><td>0</td><td>0</td><td>DPI Port 2</td></tr> <tr><td>1</td><td>0</td><td>1</td><td>DPI Port 3</td></tr> <tr><td>1</td><td>1</td><td>0</td><td>DPI Port 4</td></tr> <tr><td>1</td><td>1</td><td>1</td><td>DPI Port 5</td></tr> </tbody> </table> <p>1 = Condition True 0 = Condition False x = Reserved</p>	Bit Definition	DCVltRefD2	DCVltRefD1	DCVltRefD0	Cmd Delayed	Regen CurLim	Mot CurLim	At Reference	Faulted	Alarm	Droop Active	In Precharge	Regenerating	Motoring	Active	Ready	Default	x	0	0	0	0	0	0	0	0	0	0	0	0	0	0	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	Bits			Description	14	13	12	0	0	0	DC Volt Ref	0	0	1	Analog In1	0	1	0	Analog In2	0	1	1	DPI Port 1	1	0	0	DPI Port 2	1	0	1	DPI Port 3	1	1	0	DPI Port 4	1	1	1	DPI Port 5
Bit Definition	DCVltRefD2	DCVltRefD1	DCVltRefD0	Cmd Delayed	Regen CurLim	Mot CurLim	At Reference	Faulted	Alarm	Droop Active	In Precharge	Regenerating	Motoring	Active	Ready																																																																													
Default	x	0	0	0	0	0	0	0	0	0	0	0	0	0	0																																																																													
Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																																																												
Bits			Description																																																																																									
14	13	12																																																																																										
0	0	0	DC Volt Ref																																																																																									
0	0	1	Analog In1																																																																																									
0	1	0	Analog In2																																																																																									
0	1	1	DPI Port 1																																																																																									
1	0	0	DPI Port 2																																																																																									
1	0	1	DPI Port 3																																																																																									
1	1	0	DPI Port 4																																																																																									
1	1	1	DPI Port 5																																																																																									

File	Group	No.	Parameter Name and Description	Values																																																									
UTILITY	Diagnostics	096	<p>[Cnvrtr Status 2] Displays the present operating condition of the AFE and active source.</p> <table border="1"> <thead> <tr> <th>Bit Definition</th> <th></th> <th></th> <th></th> <th>DPI at 500k</th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th>ModIndexLim</th> <th>Active</th> <th>Ready</th> </tr> </thead> <tbody> <tr> <td>Default</td> <td>x</td> <td>x</td> <td>0</td> <td>x</td> <td>x</td> <td>x</td> <td>0</td> <td>0</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>0</td> <td>0</td> <td>0</td> <td></td> </tr> <tr> <td>Bit</td> <td>15</td> <td>14</td> <td>13</td> <td>12</td> <td>11</td> <td>10</td> <td>9</td> <td>8</td> <td>7</td> <td>6</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> <td>0</td> <td></td> <td></td> </tr> </tbody> </table> <p>1 = Condition True 0 = Condition False x = Reserved</p> <ul style="list-style-type: none"> • Bit 0 (Ready) indicates all inhibits are cleared. • Bit 1 (Active) indicates that the AFE is modulating. • Bit 2 (ModIndexLim) indicates that the AFE reached the modulation index limitation. • Bit 8 (AutoRst Ctdn) indicates that the auto restart timer is counting down. • Bit 9 (AutoRst Act) indicates that the auto restart function is activated. • Bit 13 (DPI at 500k) indicates DPI communication with 500k of baud rate. 	Bit Definition				DPI at 500k												ModIndexLim	Active	Ready	Default	x	x	0	x	x	x	0	0	x	x	x	x	x	x	0	0	0		Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0			Read Only
		Bit Definition				DPI at 500k												ModIndexLim	Active	Ready																																									
		Default	x	x	0	x	x	x	0	0	x	x	x	x	x	x	0	0	0																																										
Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																													
097	<p>[Cnvrtr Alarm 1] Displays alarm conditions that presently exist in the unit.</p> <table border="1"> <thead> <tr> <th>Bit Definition</th> <th></th> <th></th> <th></th> <th></th> <th></th> <th>Overload</th> <th>DCBusHiAlarm</th> <th>DCBusLoAlarm</th> <th>DCRefHighLim</th> <th>DCRefLowLim</th> <th>LCL Fan Stop</th> <th>HeatsinkOvTp</th> <th>LineSyncFail</th> <th>Anlg In Loss</th> <th>DC UnderVolt</th> <th>Prechrg Actv</th> </tr> </thead> <tbody> <tr> <td>Default</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> </tr> <tr> <td>Bit</td> <td>15</td> <td>14</td> <td>13</td> <td>12</td> <td>11</td> <td>10</td> <td>9</td> <td>8</td> <td>7</td> <td>6</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> <td>0</td> </tr> </tbody> </table> <p>1 = Condition True 0 = Condition False x = Reserved</p> <ul style="list-style-type: none"> • Bit 0 (Prechrg Actv) indicates that precharging is not completed. • Bit 1 (DC UnderVolt) indicates that the DC link voltage exceeded the limit. • Bit 2 (Anlg In Loss) indicates the analog input loss. • Bit 3 (LineSync Fail) indicates that the AC input line phase is missing. • Bit 4 (HeatsinkOv Tp) indicates that the heatsink temperature is over temperature (90 °C [194 °F]). • Bit 5 (LCL Fan Stop) indicates that the LCL fan has been stopped. • Bit 6 (DCRefLowLim) indicates that the DC voltage reference is less than the limit in parameter 080 [DC Ref Lo Lmt]. • Bit 7 (DCRefHighLim) indicates that the DC voltage reference exceeds the limit in parameter 081 [DC Ref Hi Lmt]. • Bit 8 (DCBusLo Alarm) indicates that the DC voltage is less than the value set by parameter 078 [DC Bus Lo Alarm]. • Bit 9 (DCBusHi Alarm) indicates that the DC voltage exceeds the value set by parameter 079 [DC Bus Hi Alarm]. • Bit 10 (Overload) indicates that parameter 003 [Total Current] exceeds the rated current. 	Bit Definition						Overload	DCBusHiAlarm	DCBusLoAlarm	DCRefHighLim	DCRefLowLim	LCL Fan Stop	HeatsinkOvTp	LineSyncFail	Anlg In Loss	DC UnderVolt	Prechrg Actv	Default	x	x	x	x	x	1	1	1	1	1	1	1	1	1	1	1	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	Read Only								
Bit Definition						Overload	DCBusHiAlarm	DCBusLoAlarm	DCRefHighLim	DCRefLowLim	LCL Fan Stop	HeatsinkOvTp	LineSyncFail	Anlg In Loss	DC UnderVolt	Prechrg Actv																																													
Default	x	x	x	x	x	1	1	1	1	1	1	1	1	1	1	1																																													
Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																													
098	<p>[Cnvrtr Alarm 2] Displays alarm conditions that presently exist in the unit.</p> <table border="1"> <thead> <tr> <th>Bit Definition</th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th>Contact Fdbk</th> <th>DignConflict</th> </tr> </thead> <tbody> <tr> <td>Default</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>0</td> <td>0</td> </tr> <tr> <td>Bit</td> <td>15</td> <td>14</td> <td>13</td> <td>12</td> <td>11</td> <td>10</td> <td>9</td> <td>8</td> <td>7</td> <td>6</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> <td>0</td> <td>0</td> </tr> </tbody> </table> <p>1 = Condition True 0 = Condition False x = Reserved</p> <ul style="list-style-type: none"> • Bit 0 (DignConflict) indicates that there is a conflict with the digital input settings. • Bit 1 (Contact Fdbk) indicates that there is no feedback from the main contact. 	Bit Definition																Contact Fdbk	DignConflict	Default	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	0	0	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	0	Read Only					
Bit Definition																Contact Fdbk	DignConflict																																												
Default	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	0	0																																												
Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	0																																												
		099	<p>[DC Ref Source] Displays the source of the DC bus voltage reference to the unit.</p>	<p>Default: Read Only</p> <p>Options:</p> <ul style="list-style-type: none"> 0 DC Volt Ref 1 Analog In1 2 Analog In2 3 DPI Port 1 4 DPI Port 2 5 DPI Port 3 6 DPI Port 4 7 DPI Port 5 																																																									



File	Group	No.	Parameter Name and Description	Values																																																							
UTILITY	Diagnostic	100	[Start Inhibits] Displays the inputs presently preventing the AFE from starting.	Read Only																																																							
		<table border="1"> <thead> <tr> <th>Bit Definition</th> <th></th> <th></th> <th></th> <th>DPI Port 5</th> <th>DPI Port 4</th> <th>DPI Port 3</th> <th>DPI Port 2</th> <th>DPI Port 1</th> <th></th> <th></th> <th>Startup Actv</th> <th>Params Reset</th> <th>Stop Assertd</th> <th>DC Bus Pchrg</th> <th>Enable</th> <th>Type 2 Alarm</th> <th>Fault</th> </tr> </thead> <tbody> <tr> <td>Default</td> <td>x</td> <td>x</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>x</td> <td>x</td> <td>x</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>Bit</td> <td>15</td> <td>14</td> <td>13</td> <td>12</td> <td>11</td> <td>10</td> <td>9</td> <td>8</td> <td>7</td> <td>6</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> <td>0</td> <td></td> </tr> </tbody> </table> <p>1 = Inhibit True 0 = Inhibit False x = Reserved</p> <ul style="list-style-type: none"> • Bit 0 (Fault) is set when the AFE is faulted. • Bit 1 (Type 2 Alarm) is set when the AFE has an alarm of type 2. • Bit 2 (Enable) is set when the AFE is not enabled. • Bit 3 (DC Bus Pchrg) is set when the AFE is in precharging. • Bit 4 (Stop Assertd) is set when a stop command is asserted. • Bit 5 (Params Reset) is set when parameter 091 [Reset To Defaults] is reset to defaults. • Bit 6 (Startup Actv) is set when the AFE is in startup sequencing. • Bits 9...13 indicate that the AFE start is inhibited by the respective DPI port. 			Bit Definition				DPI Port 5	DPI Port 4	DPI Port 3	DPI Port 2	DPI Port 1			Startup Actv	Params Reset	Stop Assertd	DC Bus Pchrg	Enable	Type 2 Alarm	Fault	Default	x	x	0	0	0	0	0	x	x	x	0	0	0	0	0	0	0	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0		
		Bit Definition				DPI Port 5	DPI Port 4	DPI Port 3	DPI Port 2	DPI Port 1			Startup Actv	Params Reset	Stop Assertd	DC Bus Pchrg	Enable	Type 2 Alarm	Fault																																								
		Default	x	x	0	0	0	0	0	x	x	x	0	0	0	0	0	0	0																																								
		Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																									
		101	[Last Stop Source] Displays the source that initiated the most recent stop sequence. It will be cleared (set to zero) during the next start sequence.	Default: Read Only Options: 0 Pwr Removed 1...5 DPI Port 1...5 6 Reserved 7 Digital In 8 Fault 9 Not Enabled																																																							
		102	[Dig In Status] Displays the status of the digital inputs.	Read Only																																																							
		<table border="1"> <thead> <tr> <th>Bit Definition</th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th>Digital In6</th> <th>Digital In5</th> <th>Digital In4</th> <th>Digital In3</th> <th>Digital In2</th> <th>Digital In1</th> </tr> </thead> <tbody> <tr> <td>Default</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>Bit</td> <td>15</td> <td>14</td> <td>13</td> <td>12</td> <td>11</td> <td>10</td> <td>9</td> <td>8</td> <td>7</td> <td>6</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> <td>0</td> </tr> </tbody> </table> <p>1 = Input Present 0 = Input Not Present x = Reserved</p>			Bit Definition											Digital In6	Digital In5	Digital In4	Digital In3	Digital In2	Digital In1	Default	x	x	x	x	x	x	x	x	x	x	0	0	0	0	0	0	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0				
Bit Definition											Digital In6	Digital In5	Digital In4	Digital In3	Digital In2	Digital In1																																											
Default	x	x	x	x	x	x	x	x	x	x	0	0	0	0	0	0																																											
Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																											
103	[Dig Out Status] Displays the status of the digital outputs.	Read Only																																																									
<table border="1"> <thead> <tr> <th>Bit Definition</th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th>DigitalOut 3</th> <th>DigitalOut 2</th> <th>DigitalOut 1</th> </tr> </thead> <tbody> <tr> <td>Default</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>Bit</td> <td>15</td> <td>14</td> <td>13</td> <td>12</td> <td>11</td> <td>10</td> <td>9</td> <td>8</td> <td>7</td> <td>6</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> <td>0</td> </tr> </tbody> </table> <p>1 = Output Present 0 = Output Not Present x = Reserved</p>			Bit Definition												DigitalOut 3	DigitalOut 2	DigitalOut 1	Default	x	x	x	x	x	x	x	x	x	x	x	x	0	0	0	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0									
Bit Definition												DigitalOut 3	DigitalOut 2	DigitalOut 1																																													
Default	x	x	x	x	x	x	x	x	x	x	x	x	0	0	0																																												
Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																											
104	[Fault Frequency] Captures and displays the AC line frequency at the time of the last fault.	Default: Read Only Min/Max: -63.0/63.0 Hz Units: 0.1 Hz																																																									
105	 [Fault Total Curr] Captures and displays the DC bus amps at the time of the last fault.	Default: Read Only Min/Max: 0.0/[Rated Amps] x 2 Units: 0.1 Amps																																																									
106	[Fault Bus Volts] Captures and displays the DC bus voltage at the time of the last fault.	Default: Read Only Min/Max: 0/Max Bus Volts Units: 1V DC																																																									
107	[Fault Temp] Captures and displays the heatsink temperature at the time of the last fault.	Default: Read Only Min/Max: 0/200 °C Units: 1 °C																																																									





File	Group	No.	Parameter Name and Description	Values																																																																																								
UTILITY	Diagnostic	108	<p>[Status 1 @ Fault] Captures and displays the bit pattern of parameter 095 [Cnvrtr Status 1] at the time of the last fault.</p> <table border="1"> <tr> <th>Bit Definition</th> <td>DCVoltRefD2</td> <td>DCVoltRefD1</td> <td>DCVoltRefD0</td> <td>Cmd Delayed</td> <td>Regen CurlLim</td> <td>Mot CurlLim</td> <td>At Reference</td> <td>Faulted</td> <td>Alarm</td> <td>Droop Active</td> <td>In Precharge</td> <td>Regenerating</td> <td>Motoring</td> <td>Active</td> <td>Ready</td> </tr> <tr> <th>Default</th> <td>x</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <th>Bit</th> <td>15</td> <td>14</td> <td>13</td> <td>12</td> <td>11</td> <td>10</td> <td>9</td> <td>8</td> <td>7</td> <td>6</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> <td>0</td> </tr> </table> <p>1 = Condition True 0 = Condition False x = Reserved</p>	Bit Definition	DCVoltRefD2	DCVoltRefD1	DCVoltRefD0	Cmd Delayed	Regen CurlLim	Mot CurlLim	At Reference	Faulted	Alarm	Droop Active	In Precharge	Regenerating	Motoring	Active	Ready	Default	x	0	0	0	0	0	0	0	0	0	0	0	0	0	0	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	<p>Read Only</p> <table border="1"> <thead> <tr> <th colspan="3">Bits</th> <th rowspan="2">Description</th> </tr> <tr> <th>14</th> <th>13</th> <th>12</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>0</td> <td>DC Volt Ref</td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> <td>Analog In1</td> </tr> <tr> <td>0</td> <td>1</td> <td>0</td> <td>Analog In2</td> </tr> <tr> <td>0</td> <td>1</td> <td>1</td> <td>DPI Port 1</td> </tr> <tr> <td>1</td> <td>0</td> <td>0</td> <td>DPI Port 2</td> </tr> <tr> <td>1</td> <td>0</td> <td>1</td> <td>DPI Port 3</td> </tr> <tr> <td>1</td> <td>1</td> <td>0</td> <td>DPI Port 4</td> </tr> <tr> <td>1</td> <td>1</td> <td>1</td> <td>DPI Port 5</td> </tr> </tbody> </table>	Bits			Description	14	13	12	0	0	0	DC Volt Ref	0	0	1	Analog In1	0	1	0	Analog In2	0	1	1	DPI Port 1	1	0	0	DPI Port 2	1	0	1	DPI Port 3	1	1	0	DPI Port 4	1	1	1	DPI Port 5
		Bit Definition	DCVoltRefD2	DCVoltRefD1	DCVoltRefD0	Cmd Delayed	Regen CurlLim	Mot CurlLim	At Reference	Faulted	Alarm	Droop Active	In Precharge	Regenerating	Motoring	Active	Ready																																																																											
		Default	x	0	0	0	0	0	0	0	0	0	0	0	0	0	0																																																																											
		Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																																																										
		Bits			Description																																																																																							
		14	13	12																																																																																								
		0	0	0	DC Volt Ref																																																																																							
		0	0	1	Analog In1																																																																																							
		0	1	0	Analog In2																																																																																							
		0	1	1	DPI Port 1																																																																																							
		1	0	0	DPI Port 2																																																																																							
		1	0	1	DPI Port 3																																																																																							
		1	1	0	DPI Port 4																																																																																							
		1	1	1	DPI Port 5																																																																																							
		109	<p>[Status 2 @ Fault] Captures and displays the bit pattern of parameter 096 [Cnvrtr Status 2] at the time of the last fault.</p> <table border="1"> <tr> <th>Bit Definition</th> <td colspan="4">DPI at 500 k</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>ModIndexLim</td> <td>Active</td> <td>Ready</td> </tr> <tr> <th>Default</th> <td>x</td> <td>x</td> <td>0</td> <td>x</td> <td>x</td> <td>x</td> <td>0</td> <td>0</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <th>Bit</th> <td>15</td> <td>14</td> <td>13</td> <td>12</td> <td>11</td> <td>10</td> <td>9</td> <td>8</td> <td>7</td> <td>6</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> <td>0</td> </tr> </table> <p>1 = Condition True 0 = Condition False x = Reserved</p>	Bit Definition	DPI at 500 k													ModIndexLim	Active	Ready	Default	x	x	0	x	x	x	0	0	x	x	x	x	x	0	0	0	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	<p>Read Only</p>																																					
		Bit Definition	DPI at 500 k													ModIndexLim	Active	Ready																																																																										
Default	x	x	0	x	x	x	0	0	x	x	x	x	x	0	0	0																																																																												
Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																																																												
110	<p>[Alarm 1 @ Fault] Captures and displays the bit pattern of parameter 097 [Cnvrtr Alarm 1] at the time of the last fault.</p> <table border="1"> <tr> <th>Bit Definition</th> <td></td> <td></td> <td></td> <td></td> <td>Overload</td> <td>DCBusHiAlarm</td> <td>DCBusLoAlarm</td> <td>DCRefHighLim</td> <td>DCRefLowLim</td> <td>LCL Fan Stop</td> <td>HeatsinkOvTm</td> <td>LineSyncFail</td> <td>Anlg In Loss</td> <td>DC UnderVolt</td> <td>Prechrg Actv</td> </tr> <tr> <th>Default</th> <td>x</td> <td>0</td> <td>x</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <th>Bit</th> <td>15</td> <td>14</td> <td>13</td> <td>12</td> <td>11</td> <td>10</td> <td>9</td> <td>8</td> <td>7</td> <td>6</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> <td>0</td> </tr> </table> <p>1 = Condition True 0 = Condition False x = Reserved</p>	Bit Definition					Overload	DCBusHiAlarm	DCBusLoAlarm	DCRefHighLim	DCRefLowLim	LCL Fan Stop	HeatsinkOvTm	LineSyncFail	Anlg In Loss	DC UnderVolt	Prechrg Actv	Default	x	0	x	0	0	0	0	0	0	0	0	0	0	0	0	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	<p>Read Only</p>																																									
Bit Definition					Overload	DCBusHiAlarm	DCBusLoAlarm	DCRefHighLim	DCRefLowLim	LCL Fan Stop	HeatsinkOvTm	LineSyncFail	Anlg In Loss	DC UnderVolt	Prechrg Actv																																																																													
Default	x	0	x	0	0	0	0	0	0	0	0	0	0	0	0																																																																													
Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																																																												
111	<p>[Alarm 2 @ Fault] Captures and displays the bit pattern of parameter 098 [Cnvrtr Alarm 2] at the time of the last fault.</p> <table border="1"> <tr> <th>Bit Definition</th> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>Contact Fdbk</td> <td>DiginConflict</td> </tr> <tr> <th>Default</th> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>0</td> <td>x</td> <td>x</td> <td>0</td> <td>0</td> </tr> <tr> <th>Bit</th> <td>15</td> <td>14</td> <td>13</td> <td>12</td> <td>11</td> <td>10</td> <td>9</td> <td>8</td> <td>7</td> <td>6</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> <td>0</td> </tr> </table> <p>1 = Condition True 0 = Condition False x = Reserved</p>	Bit Definition															Contact Fdbk	DiginConflict	Default	x	x	x	x	x	x	x	x	x	x	0	x	x	0	0	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	<p>Read Only</p>																																								
Bit Definition															Contact Fdbk	DiginConflict																																																																												
Default	x	x	x	x	x	x	x	x	x	x	0	x	x	0	0																																																																													
Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																																																												
112	<p>[Testpoint 1 Sel] Selects the function whose value is displayed in parameter 113 [Testpoint 1 Data]. These internal values are not accessible through parameters.</p>	<p>Default: 499 Min/Max: 0/65535 Units: None</p>																																																																																										
113	<p>[Testpoint 1 Data] Displays the present value of the function selected in parameter 112 [Testpoint 1 Sel].</p>	<p>Default: Read Only Min/Max: -/+32767 Units: None</p>																																																																																										
114	<p>[Testpoint 2 Sel] Selects the function whose value is displayed in parameter 115 [Testpoint 2 Data]. These internal values are not accessible through parameters.</p>	<p>Default: 499 Min/Max: 0/65535 Units: None</p>																																																																																										
115	<p>[Testpoint 2 Data] Displays the present value of the function selected in parameter 114 [Testpoint 2 Sel].</p>	<p>Default: Read Only Min/Max: -/+32767 Units: None</p>																																																																																										
116	<p>[Cnvrtr OL Count] Displays the accumulated percentage of AFE overload. Continuously operating the AFE over the set level increases this value to 100% and cause an AFE fault.</p>	<p>Default: Read Only Min/Max: 0.1%/+100.0% Units: 0.1%</p>																																																																																										

File	Group	No.	Parameter Name and Description	Values																																																																															
UTILITY	Faults	120	<p>[Fault Config] Enables/disables annunciation of the listed faults.</p> <table border="1"> <thead> <tr> <th>Bit Definition</th> <th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th>AutoResetLim</th><th>Overload</th><th>LineSyncFail</th><th>DC UnderVolt</th> </tr> </thead> <tbody> <tr> <td>Default</td> <td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>0</td><td>0</td><td>0</td><td>x</td><td>0</td><td>x</td> </tr> <tr> <td>Bit</td> <td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table> <p>1 = Enabled 0 = Disabled x = Reserved</p>	Bit Definition																		AutoResetLim	Overload	LineSyncFail	DC UnderVolt	Default	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	0	0	0	x	0	x	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																	
		Bit Definition																		AutoResetLim	Overload	LineSyncFail	DC UnderVolt																																																												
		Default	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	0	0	0	x	0	x																																																										
		Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																																																	
		121	<p>[Fault Clear] Resets a fault and clears the fault queue. 0 (Ready) = A new value can be entered. 1 (Clear Faults) = A fault is reset. 2 (Clr Fault Que) = The fault queue is cleared.</p>	Default: 0 Ready Options: 0 Ready 1 Clear Faults 2 Clr Fault Que																																																																															
		122	<p>[Fault Clear Mode] Enables/disables a fault reset (clear faults) attempt from any source. This mode does not apply to fault codes that are cleared indirectly through other actions.</p>	Default: 1 Enabled Options: 0 Disabled 1 Enabled																																																																															
		123	<p>[Power Up Marker] Displays the elapsed hours since initial AFE power-up. This value rolls over to '0' after the AFE has been powered on for more than the maximum value shown. For relevance to most recent power-up, see parameters 128...131 [Fault x Time].</p>	Default: Read Only Min/Max: 0.0000/429496.7295 Hr Units: 0.0001 Hr																																																																															
		124	<p>[Fault 1 Code]</p>	Default: Read Only																																																																															
		126	<p>[Fault 2 Code]</p>	Min/Max: 0/65535																																																																															
		128	<p>[Fault 3 Code]</p>	Units: None																																																																															
130	<p>[Fault 4 Code] Displays a code that represents the fault that tripped the AFE. The codes appear in these parameters in the order they occur (parameter 124 [Fault 1 Code] = the most recent fault).</p>																																																																																		
125	<p>[Fault 1 Time]</p>	Default: Read Only																																																																																	
127	<p>[Fault 2 Time]</p>	Min/Max: 0.0000/429496.7295 Hr																																																																																	
129	<p>[Fault 3 Time]</p>	Units: 0.0001 Hr																																																																																	
131	<p>[Fault 4 Time] Displays the time between initial AFE power-up and the occurrence of the associated trip fault. The time that is shown by these parameters can be compared to parameter 123 [Power Up Marker] for the time from the most recent power-up. Therefore, [Fault x Time] - [Power Up Marker] = Time difference to the most recent power-up. A negative value indicates that the fault occurred before the most recent power-up. A positive value indicates that the fault occurred after the most recent power-up.</p>																																																																																		
132	<p>[Contact Off Cnfg] Configures faults that force the main contactor off in case of fault. This configuration is only possible if the precharge contactor is off or controlled over the network (digital output selection) and the AFE is supplied by an external 24V DC power supply. This configuration provides an option to protect the AFE when the AFE is faulted, modulating is stopped, and the motoring current can still flow through the IGBT diode.</p> <table border="1"> <thead> <tr> <th>Bit Definition</th> <th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th>All Fault</th><th>LCL OverTemp</th><th>HeatsinkOvTp</th><th>Overload</th><th>AC OverCurr</th><th>IGBTOverTemp</th><th>DC OverVolt</th><th>Auxiliary In</th> </tr> </thead> <tbody> <tr> <td>Default</td> <td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>0</td><td>0</td><td>0</td><td>0</td><td>x</td><td>0</td><td>0</td><td>0</td><td>0</td><td>x</td><td>0</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>0</td> </tr> <tr> <td>Bit</td> <td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> </tr> </tbody> </table> <p>1 = Enabled Contactor Off command from fault* 0 = Disabled Contactor Off command from fault x = Reserved *If enabled, the auto restart function is disabled.</p>	Bit Definition																			All Fault	LCL OverTemp	HeatsinkOvTp	Overload	AC OverCurr	IGBTOverTemp	DC OverVolt	Auxiliary In	Default	x	x	x	x	x	x	x	0	0	0	0	x	0	0	0	0	x	0								0	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0											
Bit Definition																			All Fault	LCL OverTemp	HeatsinkOvTp	Overload	AC OverCurr	IGBTOverTemp	DC OverVolt	Auxiliary In																																																									
Default	x	x	x	x	x	x	x	0	0	0	0	x	0	0	0	0	x	0								0																																																									
Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																																																			
133	<p>[Cnvrtr OL Factor] Sets the operating level for the AFE overload. (AFE rated current) x (AFE OL Factor) = Operating Level</p>	Default: 1.00 Min/Max: 0.50/1.50 Units: None																																																																																	


File	Group	No.	Parameter Name and Description	Values																																																						
UTILITY	Alarms	135	<p>[Alarm Config] Enables/disables alarm conditions that initiate an AFE alarm.</p> <table border="1"> <thead> <tr> <th>Bit Definition</th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th>DCBusHiAlarm</th> <th>DCBusLoAlarm</th> <th>DCRefHighLim</th> <th>DCRefLowLim</th> <th>LCL Fan Stop</th> <th>HeatsinkOvTp</th> <th>LineSyncFail</th> <th>Anlg In Loss</th> <th>DC UnderVolt</th> <th>Prechg Actv</th> </tr> </thead> <tbody> <tr> <td>Default</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> </tr> <tr> <td>Bit</td> <td>15</td> <td>14</td> <td>13</td> <td>12</td> <td>11</td> <td>10</td> <td>9</td> <td>8</td> <td>7</td> <td>6</td> <td>5</td> <td>4</td> <td>3</td> <td>2</td> <td>1</td> <td>0</td> <td></td> </tr> </tbody> </table> <p>1 = Enabled 0 = Disabled x = Reserved</p> <ul style="list-style-type: none"> • Bit 0 (Prechg Actv) sets an alarm when the precharging is not completed. • Bit 1 (DC UnderVolt) sets an alarm when the DC link voltage exceeded the limit. • Bit 2 (Anlg In Loss) sets an alarm when the analog input is lost. • Bit 3 (LineSyncFail) sets an alarm when the AC input line phase is missing. • Bit 4 (HeatsinkOvTp) sets an alarm when the heatsink temperature is over temperature (90 °C [194 °F]). • Bit 5 (LCL Fan Stop) sets an alarm when the LCL fan has been stopped. • Bit 6 (DCRefLowLim) sets an alarm when the DC voltage reference is less than the limit in parameter 080 [DC Ref Lo Lmt]. • Bit 7 (DCRefHighLim) sets an alarm when the DC voltage reference exceeds the limit in parameter 081 [DC Ref Hi Lmt]. • Bit 8 (DCBusLoAlarm) sets an alarm when the DC voltage is less than the value set by parameter 078 [DC Bus Lo Alarm]. • Bit 9 (DCBusHiAlarm) sets an alarm when the DC voltage exceeds the value set by parameter 079 [DC Bus Hi Alarm]. 	Bit Definition								DCBusHiAlarm	DCBusLoAlarm	DCRefHighLim	DCRefLowLim	LCL Fan Stop	HeatsinkOvTp	LineSyncFail	Anlg In Loss	DC UnderVolt	Prechg Actv	Default	x	x	x	x	x	x	x	1	1	1	1	1	1	1	1	1	1	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0		
		Bit Definition								DCBusHiAlarm	DCBusLoAlarm	DCRefHighLim	DCRefLowLim	LCL Fan Stop	HeatsinkOvTp	LineSyncFail	Anlg In Loss	DC UnderVolt	Prechg Actv																																							
		Default	x	x	x	x	x	x	x	1	1	1	1	1	1	1	1	1	1																																							
		Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																								
136	<p>[Alarm Clear] Resets all [Alarm 1...4 Code] parameters to '0'.</p>	Default: 0 Ready Options: 0 Ready 1 Clr Alarm Que																																																								
137	[Alarm 1 Code]	Default: Read Only																																																								
138	[Alarm 2 Code]	Min/Max: 0/65535																																																								
139	[Alarm 3 Code]	Units: None																																																								
140	[Alarm 4 Code] Displays a code that represents a converter alarm. The codes appear in the order they occur ([Alarm 1 Code] = the most recent alarm). A time stamp is not available with alarms.																																																									

Communication File




File	Group	No.	Parameter Name and Description	Values																																																																			
COMMUNICATION	Comm Control	150	[DPI Baud Rate] Displays the '500 kbps' baud rate that DPI uses for peripherals attached to the AFE.	Default: Read Only																																																																			
		151	[Cnvrtr Logic Rslt] Captures and displays the final Logic Command that results from the combination of all DPI and discrete inputs. This parameter has the same structure as the product-specific Logic Command received via DPI, and is used in peer-to-peer communications. <table border="1"> <tr> <td>Bit Definition</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> <td>Cmd LogicOut</td> <td></td><td></td><td></td><td></td><td></td><td></td> <td>Clear Fault</td> <td></td><td></td><td></td> <td>Start</td> <td>Stop</td> </tr> <tr> <td>Default</td> <td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>0</td><td>x</td><td>x</td><td>x</td> <td>0</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td> <td>0</td><td>x</td><td>0</td><td>0</td> <td>0</td><td>0</td> </tr> <tr> <td>Bit</td> <td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td> <td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td> <td>0</td><td></td><td></td><td></td> <td></td><td></td> </tr> </table> <p>1 = Condition True 0 = Condition False x = Reserved</p>	Bit Definition										Cmd LogicOut							Clear Fault				Start	Stop	Default	x	x	x	x	x	0	x	x	x	0	x	x	x	x	x	0	x	0	0	0	0	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0						Read Only
		Bit Definition										Cmd LogicOut							Clear Fault				Start	Stop																																															
		Default	x	x	x	x	x	0	x	x	x	0	x	x	x	x	x	0	x	0	0	0	0																																																
		Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																																					
	152	[DPI Port Sel] Selects which DPI port reference value appears in parameter 153 [DPI Port Value].	Default: 1 DPI Port 1 Options: 1 DPI Port 1 2 DPI Port 2 3 DPI Port 3 4 DPI Port 4 5 DPI Port 5																																																																				
	153	[DPI Port Value] Displays the value of the DPI reference selected in parameter 152 [DPI Port Sel].	Default: Read Only Min/Max: 0.0/1500.0V DC Units: 0.1V DC																																																																				
	154	[Logic Mask]  Sets which adapters can control the AFE. If the bit for an adapter is set to '0', the adapter has no control functions except for stop. <table border="1"> <tr> <td>Bit Definition</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> <td></td><td></td><td>DPI Port 5</td> <td>DPI Port 4</td> <td>DPI Port 3</td> <td>DPI Port 2</td> <td>DPI Port 1</td> <td>Digital In</td> </tr> <tr> <td>Default</td> <td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td> <td>x</td><td>x</td> <td>1</td><td>1</td><td>1</td><td>1</td><td>1</td><td>1</td> </tr> <tr> <td>Bit</td> <td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td> <td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td><td></td> </tr> </table> <p>1 = Control Permitted 0 = Control Masked x = Reserved</p>	Bit Definition												DPI Port 5	DPI Port 4	DPI Port 3	DPI Port 2	DPI Port 1	Digital In	Default	x	x	x	x	x	x	x	x	x	x	x	1	1	1	1	1	1	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																
	Bit Definition												DPI Port 5	DPI Port 4	DPI Port 3	DPI Port 2	DPI Port 1	Digital In																																																					
	Default	x	x	x	x	x	x	x	x	x	x	x	1	1	1	1	1	1																																																					
Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																																							
155	[Fault Clr Mask]  Sets which adapters can clear a fault.	See [Logic Mask] .																																																																					
156	[Stop Owner] Displays the adapters that are presently issuing a valid stop command. <table border="1"> <tr> <td>Bit Definition</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td> <td></td><td></td><td>DPI Port 5</td> <td>DPI Port 4</td> <td>DPI Port 3</td> <td>DPI Port 2</td> <td>DPI Port 1</td> <td>Digital In</td> </tr> <tr> <td>Default</td> <td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td> <td>x</td><td>x</td> <td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>1</td> </tr> <tr> <td>Bit</td> <td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td> <td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td><td></td> </tr> </table> <p>1 = digital outputIssuing Command 0 = No Command</p>	Bit Definition												DPI Port 5	DPI Port 4	DPI Port 3	DPI Port 2	DPI Port 1	Digital In	Default	x	x	x	x	x	x	x	x	x	x	x	0	0	0	0	0	1	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0		Read Only															
Bit Definition												DPI Port 5	DPI Port 4	DPI Port 3	DPI Port 2	DPI Port 1	Digital In																																																						
Default	x	x	x	x	x	x	x	x	x	x	x	0	0	0	0	0	1																																																						
Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																																							
157	[Start Owner] Displays the adapters that are presently issuing a valid start command.	See [Stop Owner] .																																																																					
158	[Fault Clr Owner] Displays the adapters that are presently clearing a fault.	See [Stop Owner] .																																																																					

File	Group	No.	Parameter Name and Description	Values
COMMUNICATION	Datalinks	170	[Data In A1] - Link A Word 1	Default: 0 (0 = Disabled)
		171	[Data In A2] - Link A Word 2	Min/Max: 0/236
			Sets the parameter number whose value is written from a communication device data table. If parameters that can only be changed while the unit is stopped are used as datalink inputs, they are not updated until the unit is stopped. See the communication adapter User Manual for datalink information.	Units: None
		172	[Data In B1] - Link B Word 1	See [Data In A1] - Link A Word 1 [Data In A2] - Link A Word 2 .
		173	[Data In B2] - Link B Word 2	
				
		174	[Data In C1] - Link C Word 1	See [Data In A1] - Link A Word 1 [Data In A2] - Link A Word 2 .
		175	[Data In C2] - Link C Word 2	
				
		176	[Data In D1] - Link D Word 1	See [Data In A1] - Link A Word 1 [Data In A2] - Link A Word 2 .
		177	[Data In D2] - Link D Word 2	
				
		180	[Data Out A1] - Link A Word 1	Default: 0 (0 = Disabled)
		181	[Data Out A2] - Link A Word 2	Min/Max: 0/236
	Sets the parameter number whose value is written to a communication device data table.	Units: None		
182	[Data Out B1] - Link B Word 1	See [Data Out A1] - Link A Word 1 [Data Out A2] - Link A Word 2 .		
183	[Data Out B2] - Link B Word 2			
184	[Data Out C1] - Link C Word 1	See [Data Out A1] - Link A Word 1 [Data Out A2] - Link A Word 2 .		
185	[Data Out C2] - Link C Word 2			
186	[Data Out D1] - Link D Word 1	See [Data Out A1] - Link A Word 1 [Data Out A2] - Link A Word 2 .		
187	[Data Out D2] - Link D Word 2			

Inputs and Outputs File

File	Group	No.	Parameter Name and Description	Values																																																											
INPUTS and OUTPUTS	Analog Inputs	200	<p>[Anlg In Config]  Selects the mode for the analog inputs.</p> <table border="1"> <tr> <td>Bit Definition</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>An2 (0 = V, 1 = mA)</td><td>An1 (0 = V, 1 = mA)</td> </tr> <tr> <td>Default</td> <td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>0</td><td>0</td> </tr> <tr> <td>Bit</td> <td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td><td></td><td></td> </tr> </table> <p>1 = Current 0 = Voltage x = Reserved</p>	Bit Definition																		An2 (0 = V, 1 = mA)	An1 (0 = V, 1 = mA)	Default	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	0	0	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0			
		Bit Definition																		An2 (0 = V, 1 = mA)	An1 (0 = V, 1 = mA)																																										
		Default	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	0	0																																										
		Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																													
		201	<p>[Analog In 1 Hi] Sets the highest input value to the Analog Input 1 scaling block. Parameter 200 [Anlg In Config] defines if this input is -/+10V or 4...20 mA.</p>	Default: 10.000V Min/Max: 4.000/20.000 mA -/+10.000V Units: 0.001 mA 0.001V																																																											
		202	<p>[Analog In 1 Lo] Sets the lowest input value to the Analog Input 1 scaling block. Parameter 200 [Anlg In Config] defines if this input is -/+10V or 4...20 mA.</p>	Default: 0.000V Min/Max: 4.000/20.000 mA -/+10.000V Units: 0.001 mA 0.001V																																																											
		203	<p>[Analog In 1 Loss] Selects the AFE action when an analog signal loss is detected. Signal loss is defined as an analog signal less than 1V or 2 mA. The signal loss event ends and normal operation resumes when the input signal level is greater than or equal to 1.5V or 3 mA.</p>	Default: 0 Disabled Options: 0 Disabled 1 Fault 2 Hold Input 3 Set Input Lo 4 Set Input Hi																																																											
204	<p>[Analog In 2 Hi] Sets the highest input value to the Analog Input 2 scaling block. Parameter 200 [Anlg In Config] defines if this input is -/+10V or 4...20 mA.</p>	Default: 10.000V Min/Max: 4.000/20.000 mA -/+10.000V Units: 0.001 mA 0.001V																																																													
205	<p>[Analog In 2 Lo] Sets the lowest input value to the Analog Input 2 scaling block. Parameter 200 [Anlg In Config] defines if this input is -/+10V or 4...20 mA.</p>	Default: 0.000V Min/Max: 4.000/20.000 mA -/+10.000V Units: 0.001 mA 0.001V																																																													
206	<p>[Analog In 2 Loss] Selects the AFE action when an analog signal loss is detected. Signal loss is defined as an analog signal less than 1V or 2 mA. The signal loss event ends and normal operation resumes when the input signal level is greater than or equal to 1.5V or 3 mA.</p>	Default: 0 Disabled Options: 0 Disabled 1 Fault 2 Hold Input 3 Set Input Lo 4 Set Input Hi																																																													
	Analog Outputs	207	<p>[Anlg Out Config] Selects the mode for the analog outputs.</p> <table border="1"> <tr> <td>Bit Definition</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>An2 (0 = V, 1 = mA)</td><td>An1 (0 = V, 1 = mA)</td> </tr> <tr> <td>Default</td> <td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>0</td><td>0</td> </tr> <tr> <td>Bit</td> <td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td><td></td><td></td> </tr> </table> <p>1 = Current 0 = Voltage x = Reserved</p> <p>Important: Make sure that the jumpers are in the correct position or the output is wrong: J3 = Analog Output 1; J4 = Analog Output 2 Position AB = Current; Position BC = Voltage 0-10V (default); Position CD = Voltage -/+10V</p>	Bit Definition																		An2 (0 = V, 1 = mA)	An1 (0 = V, 1 = mA)	Default	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	0	0	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0			
Bit Definition																		An2 (0 = V, 1 = mA)	An1 (0 = V, 1 = mA)																																												
Default	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	0	0																																												
Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																															

File	Group	No.	Parameter Name and Description	Values																																																																										
INPUTS and OUTPUTS	Analog Outputs	208	<p>[Anlg Out Absolute] Selects whether the signed value or absolute value of a parameter is used before being scaled to drive the analog output.</p> <table border="1"> <tr> <td>Bit Definition</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>Analog Out2</td><td>Analog Out1</td> </tr> <tr> <td>Default</td> <td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>1</td><td>1</td> </tr> <tr> <td>Bit</td> <td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td><td></td><td></td><td></td> </tr> </table> <p>1 = Absolute 0 = Signed x = Reserved</p>	Bit Definition																		Analog Out2	Analog Out1	Default	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	1	1	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																		
		Bit Definition																		Analog Out2	Analog Out1																																																									
		Default	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	1	1																																																									
		Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																																												
		209	<p>[Analog Out1 Sel] Selects the source for Analog Output 1.</p> <table border="1"> <thead> <tr> <th rowspan="2">Options</th> <th colspan="2">[Analog Out1 Lo] Value</th> <th rowspan="2">[Analog Out1 Hi] Value</th> </tr> <tr> <th>Parameter [Anlg Out Absolute] = Signed</th> <th>Absolute</th> </tr> </thead> <tbody> <tr><td>0</td><td>Input Volt</td><td>0V AC</td><td>200% Rated⁽²⁾</td></tr> <tr><td>1</td><td>AC Line Freq</td><td>-63.0 Hz</td><td>63.0 Hz</td></tr> <tr><td>2</td><td>Total Curr</td><td>0 Amps</td><td>200% Rated⁽³⁾</td></tr> <tr><td>3</td><td>Active Curr</td><td>-200% Rated</td><td>200% Rated⁽³⁾</td></tr> <tr><td>4</td><td>ReactiveCurr</td><td>-200% Rated</td><td>200% Rated⁽³⁾</td></tr> <tr><td>5</td><td>Input Curr R</td><td>0 Amps</td><td>200% Rated⁽³⁾</td></tr> <tr><td>6</td><td>Input Curr S</td><td>0 Amps</td><td>200% Rated⁽³⁾</td></tr> <tr><td>7</td><td>Input Curr T</td><td>0 Amps</td><td>200% Rated⁽³⁾</td></tr> <tr><td>8</td><td>DC Bus Volt</td><td>0V DC</td><td>300% Rated⁽²⁾</td></tr> <tr><td>9</td><td>DC Bus Curr</td><td>-200% Rated</td><td>200% Rated⁽³⁾</td></tr> <tr><td>10</td><td>AC Line kW</td><td>-200% Rated</td><td>200% Rated⁽⁴⁾</td></tr> <tr><td>11</td><td>AC Line kVar</td><td>-200% Rated</td><td>200% Rated⁽⁴⁾</td></tr> <tr><td>12</td><td>AC Line kVA</td><td>0 kVA</td><td>200% Rated⁽⁴⁾</td></tr> <tr><td>13</td><td>Power Factor</td><td>-1.00</td><td>1.00</td></tr> <tr><td>14</td><td>DC Bus V Ref</td><td>P080 [V DC]</td><td>P081 [V DC]</td></tr> <tr><td>15</td><td>Param Cntl⁽¹⁾</td><td>—</td><td>—</td></tr> <tr><td>16</td><td>TestPt Data1</td><td>-32767</td><td>32767</td></tr> </tbody> </table> <p>(1) Parameter controlled analog output allows PLC to control analog outputs through datalinks. Set in parameter 217 [Anlg Out1 Setpt] and parameter 218 [Anlg Out2 Setpt]. (2) 100% corresponds to parameter 031 [Rated Volts]. (3) 100% corresponds to parameter 032 [Rated Amps]. (4) 100% corresponds to parameter 030 [Rated kW].</p>	Options	[Analog Out1 Lo] Value		[Analog Out1 Hi] Value	Parameter [Anlg Out Absolute] = Signed	Absolute	0	Input Volt	0V AC	200% Rated ⁽²⁾	1	AC Line Freq	-63.0 Hz	63.0 Hz	2	Total Curr	0 Amps	200% Rated ⁽³⁾	3	Active Curr	-200% Rated	200% Rated ⁽³⁾	4	ReactiveCurr	-200% Rated	200% Rated ⁽³⁾	5	Input Curr R	0 Amps	200% Rated ⁽³⁾	6	Input Curr S	0 Amps	200% Rated ⁽³⁾	7	Input Curr T	0 Amps	200% Rated ⁽³⁾	8	DC Bus Volt	0V DC	300% Rated ⁽²⁾	9	DC Bus Curr	-200% Rated	200% Rated ⁽³⁾	10	AC Line kW	-200% Rated	200% Rated ⁽⁴⁾	11	AC Line kVar	-200% Rated	200% Rated ⁽⁴⁾	12	AC Line kVA	0 kVA	200% Rated ⁽⁴⁾	13	Power Factor	-1.00	1.00	14	DC Bus V Ref	P080 [V DC]	P081 [V DC]	15	Param Cntl ⁽¹⁾	—	—	16	TestPt Data1	-32767	32767	Default: 0 = Input Volt Options: See Table
		Options	[Analog Out1 Lo] Value		[Analog Out1 Hi] Value																																																																									
			Parameter [Anlg Out Absolute] = Signed	Absolute																																																																										
		0	Input Volt	0V AC	200% Rated ⁽²⁾																																																																									
		1	AC Line Freq	-63.0 Hz	63.0 Hz																																																																									
		2	Total Curr	0 Amps	200% Rated ⁽³⁾																																																																									
3	Active Curr	-200% Rated	200% Rated ⁽³⁾																																																																											
4	ReactiveCurr	-200% Rated	200% Rated ⁽³⁾																																																																											
5	Input Curr R	0 Amps	200% Rated ⁽³⁾																																																																											
6	Input Curr S	0 Amps	200% Rated ⁽³⁾																																																																											
7	Input Curr T	0 Amps	200% Rated ⁽³⁾																																																																											
8	DC Bus Volt	0V DC	300% Rated ⁽²⁾																																																																											
9	DC Bus Curr	-200% Rated	200% Rated ⁽³⁾																																																																											
10	AC Line kW	-200% Rated	200% Rated ⁽⁴⁾																																																																											
11	AC Line kVar	-200% Rated	200% Rated ⁽⁴⁾																																																																											
12	AC Line kVA	0 kVA	200% Rated ⁽⁴⁾																																																																											
13	Power Factor	-1.00	1.00																																																																											
14	DC Bus V Ref	P080 [V DC]	P081 [V DC]																																																																											
15	Param Cntl ⁽¹⁾	—	—																																																																											
16	TestPt Data1	-32767	32767																																																																											
210	<p>[Analog Out1 Hi] Sets the Analog Output 1 value when the source value is at maximum.</p>	Default: 20.000 mA, 10.000V Min/Max: 4.000/20.000 mA -/+10.000V Units: 0.001 mA 0.001V																																																																												
211	<p>[Analog Out1 Lo] Sets the Analog Output 1 value when the source value is at minimum.</p>	Default: 0.000 mA, 0.000V Min/Max: 4.000/20.000 mA -/+10.000V Units: 0.001 mA 0.001V																																																																												
212	<p>[Analog Out2 Sel] Selects the source for Analog Output 2.</p>	Default: 0 = AC Line Freq Options: See [Analog Out1 Sel] Table																																																																												
213	<p>[Analog Out2 Hi] Sets the Analog Output 2 value when the source value is at maximum.</p>	Default: 20.000 mA, 10.000V Min/Max: 4.000/20.000 mA -/+10.000V Units: 0.001 mA 0.001V																																																																												
214	<p>[Analog Out2 Lo] Sets the Analog Output 2 value when the source value is at minimum.</p>	Default: 0.000 mA, 0.000V Min/Max: 4.000/20.000 mA -/+10.000V Units: 0.001 mA 0.001V																																																																												

File	Group	No.	Parameter Name and Description	Values
INPUTS and OUTPUTS	Analog Outputs	215	[Anlg Out1 Scale]  Sets the high value for the range of Analog Output 1 scale. Entering '0.0' disables this scale and the maximum scale is used. Example: If parameter 209 [Analog Out1 Sel] = 'DC Bus Volt', the maximum value is 2 * parameter 031 [Rated Volts] = 800V DC. By setting parameter 215 [Anlg Out1 Scale] = 600V DC, then 600V DC instead of 800V DC is used for the parameter 210 [Analog Out1 Hi] value at the analog output.	Default: 0.0 Min/Max: Based on [Analog Out1 Sel] Units: Based on [Analog Out1 Sel]
		216	[Anlg Out2 Scale]  Sets the high value for the range of Analog Output 2 scale. Entering '0.0' disables this scale and max scale is used. Example: If parameter 212 [Analog Out2 Sel] = 'DC Bus Volt', the maximum value is 2 * parameter 031 [Rated Volts] = 800V DC. By setting parameter 216 [Anlg Out2 Scale] = 600V DC, then 600V DC instead of 800V DC is used for the parameter 213 [Analog Out2 Hi] value at the analog output.	Default: 0.0 Min/Max: Based on [Analog Out2 Sel] Units: Based on [Analog Out2 Sel]
		217	[Anlg Out1 Setpt] Sets the Analog Output 1 value from a communication device. Example: Set parameter 170 [Data In A1] to '217' (value from communication device). Then set parameter 209 [Analog Out1 Sel] to 'Param Cntl'.	Default: 0.000 mA, 0.000V Min/Max: 4.000/20.000 mA -/+10.000V Units: 0.001 mA 0.001V
		218	[Anlg Out2 Setpt] Sets the Analog Output 2 value from a communication device. Example: Set parameter 171 [Data In A2] to '218' (value from communication device). Then set unit parameter 212 [Analog Out2 Sel] to 'Param Cntl'.	Default: 0.000 mA, 0.000V Min/Max: 4.000/20.000 mA -/+10.000V Units: 0.001 mA 0.001V
	Digital Inputs	221	[Digital In1 Sel]	Default In1: 1 Run
		222	[Digital In2 Sel]	Default In2: 2 Clear Fault
		223	[Digital In3 Sel]	Default In3: 3 Enable Mcont
		224	[Digital In4 Sel]	Default In4: 6 ContactorAck
		225	[Digital In5 Sel] (Only this parameter is fixed and non-configurable.)	Default In5: 4 LCL OverTemp
		226	[Digital In6 Sel]  Selects the function for the digital inputs. 1 (Run) - Selects the digital input to command the AFE to start modulating as long as the stop input is not on. It is selectable for other functions, if the Run is controlled over DPI. 2 (Clear Fault) - Selects the digital input, if a fault is pending, to clear it if the condition is no longer present. It is also selectable if this function is controlled by Comm Bus. 3 (Aux Fault) - Selects the digital input to be a customer-supplied external signal wired into the AFE unit. Opening this contact issues an external fault command, disabling the converter. 4 (LCL OverTemp) - Selects the digital input to be used as temperature protection to the LCL filter. 5 (LCL Fan Stop) - Selects the digital input to be used as an acknowledge signal from the LCL filter fan operation. 6 (ContactorAck) - Selects the digital input to be used as an acknowledge signal from the main contactor. 7 (Excl Link) - Selects the digital input to control a digital output. 8 (Enable) - Selects the digital input to allow a Run command. If J5 jumper on the digital input card is removed, the enable function is assigned to Digital Input 6 (enable input) and creates a fault if opened. 9 (Enable Mcont) - Selects the digital input, when opened, to command the main contactor to open. This option is to force the main contactor open and discharge the DC bus. 10 (Mcont Off) - Selects the digital input, when closed, to command the main contactor to open. This option is to force the main contactor open and discharge the DC bus. We recommend not to change the factory default wiring and setting, except that [Digital In6 Sel] can be configured for any other function.	Default In6: 5 Not Used Options: 0 Not Used 1 Run 2 Clear Fault 3 Aux Fault 4 LCL OverTemp 5 LCL Fan Stop 6 ContactorAck 7 Excl Link 8 Enable 9 Enable Mcont 10 Mcont Off

File	Group	No.	Parameter Name and Description	Values																																																						
INPUTS and OUTPUTS	Digital Outputs	227	<p>[Dig Out Setpt] Sets the digital output from a communication device. Example: Set parameter 172 [Data In B1] to '227' and parameter 229 [Digital Out2 Sel] to 'Param Cntl'. Digital Output 2 can be controlled by controlling Bit 1 of this parameter over Datalink B1.</p> <table border="1"> <tr> <td>Bit Definition</td> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>Net DigOut3</td><td>Net DigOut2</td> </tr> <tr> <td>Default</td> <td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>0</td><td>0</td><td>x</td> </tr> <tr> <td>Bit</td> <td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td> </tr> </table> <p>1 = Output Energized 0 = Output Deenergized x = Reserved</p>	Bit Definition																	Net DigOut3	Net DigOut2	Default	x	x	x	x	x	x	x	x	x	x	x	x	x	x	0	0	x	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
		Bit Definition																	Net DigOut3	Net DigOut2																																						
		Default	x	x	x	x	x	x	x	x	x	x	x	x	x	x	0	0	x																																							
		Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																								
		228	<p>[Digital Out1 Sel] Digital Output 1 is specified for controlling the main contactor. This parameter is read only as '10' (Contact Ctrl).</p>	Default: Read Only																																																						
		229	<p>[Digital Out2 Sel] Selects the AFE status that energizes a (CRx) output relay.</p> <p>(1) Any relay that is programmed as Fault or Alarm energizes (pick up) when power is applied to the AFE and de-energizes (drop out) when a fault or alarm exists. Relays selected for other functions energize only when that condition exists and de-energizes when the condition is removed.</p> <p>(2) These selections correspond to bits in parameter 097 [Cnvrtr Alarm]. Therefore, these selections work only if the corresponding alarm is configured in parameter 135 [Alarm Config].</p> <p>(3) When a digital output is set to one of these options (for example, Input 3 Link) with Digital Input 3 set to 'Excel Link', the Digital Input 3 state (on/off) is echoed in the digital output.</p> <p>(4) Bit 7 of parameter 151 [Cnvrtr LogicRslt] controls the digital output.</p> <p>(5) Parameter controlled digital output lets the PLC control digital outputs through data links. Set in parameter 227 [Dig Out Setpt].</p> <p>(6) Charging contactor control over the network by Bit 7 of parameter 151 [Cnvrtr LogicRslt] and as soon as the main contactor is on, the output is switched off. An impulse over the network is enough to charge. Use this feature only if the control board is supplied from an external 24V DC power supply.</p>	<p>Default 1: 1 Fault</p> <p>Options:</p> <ul style="list-style-type: none"> 0 Not Used 1 Fault ⁽¹⁾ 2 Alarm ⁽¹⁾ 3 Ready 4 Active 5 Motoring 6 Regenerating 7 In Precharge 8 Current Limit 9 At Reference 10 Contact Ctrl 11 ContactorAck 12 Charge Cntrl ⁽⁶⁾ 13 Anlg In Loss ⁽²⁾ 14 DC UnderVolt ⁽²⁾ 15 DCREfLowLim ⁽²⁾ 16 DCREfHighLim ⁽²⁾ 17 Reserved 18... Input 1...6 Link ⁽³⁾ 23 LogicCmdBit ⁽⁴⁾ 24 Param Cntrl ⁽⁵⁾ 25 																																																						
		230	<p>[Dig Out2 Invert] Selects if the Digital Output 2 is inverted or not.</p>	<p>Default: 1 True</p> <p>Options:</p> <ul style="list-style-type: none"> 0 False 1 True 																																																						
		231	<p>[Dig Out2 OnTime] Sets the 'ON Delay' time for Digital Output 2. This value is the time between the occurrence of a condition and activation of the relay.</p>	<p>Default: 0.00 sec</p> <p>Min/Max: 0.00/163.00 sec</p> <p>Units: 0.01 sec</p>																																																						
		232	<p>[Dig Out2 OffTime] Sets the 'OFF Delay' time for Digital Output 2. This value is the time between the disappearance of a condition and de-activation of the relay.</p>	<p>Default: 0.00 sec</p> <p>Min/Max: 0.00/163.00 sec</p> <p>Units: 0.01 sec</p>																																																						
		233	<p>[Digital Out3 Sel] See [Digital Out2 Sel].</p>	<p>Default: 4 = Active</p> <p>Options: See [Digital Out2 Sel].</p>																																																						
234	<p>[Dig Out3 Invert] Selects if the Digital Output 3 is inverted or not.</p>	<p>Default: 0 False</p> <p>Min/Max: 0 False</p> <p>Units: 1 True</p>																																																								
235	<p>[Dig Out3 OnTime] Sets the 'ON Delay' time for Digital Output 3. This value is the time between the occurrence of a condition and activation of the relay.</p>	<p>Default: 0.00 sec</p> <p>Min/Max: 0.00/163.00 sec</p> <p>Units: 0.01 sec</p>																																																								
236	<p>[Dig Out3 OffTime] Sets the 'OFF Delay' time for Digital Output 3. This value is the time between the disappearance of a condition and de-activation of the relay.</p>	<p>Default: 0.00 sec</p> <p>Min/Max: 0.00/163.00 sec</p> <p>Units: 0.01 sec</p>																																																								

Parameter Cross Reference – by Name

Parameter Name	Number	Group	Page
AC Line Freq	002	Metering	65
AC Line kVA	015	Metering	99
AC Line kVar	014	Metering	99
AC Line kW	013	Metering	99
Active Current	004	Metering	99
Active I Ki	067	Current Loop	103
Active I Kp	066	Current Loop	103
Active I Ref	064	Current Loop	103
Alarm 1 @ Fault	110	Diagnostics	108
Alarm 2 @ Fault	111	Diagnostics	108
Alarm Clear	136	Alarms	110
Alarm Config	135	Alarms	110
Alarm X Code	137 . . . 140	Alarms	110
Analog In 1 Hi	201	Analog Inputs	113
Analog In 1 Lo	202	Analog Inputs	113
Analog In 1 Loss	203	Analog Inputs	113
Analog In 2 Hi	204	Analog Inputs	113
Analog In 2 Lo	205	Analog Inputs	113
Analog In 2 Loss	206	Analog Inputs	113
Analog In1 Value	022	Metering	100
Analog In2 Value	023	Metering	100
Analog Out1 Hi	210	Analog Outputs	114
Analog Out1 Lo	211	Analog Outputs	114
Analog Out1 Sel	209	Analog Outputs	114
Analog Out2 Hi	213	Analog Outputs	114
Analog Out2 Lo	214	Analog Outputs	114
Analog Out2 Sel	212	Analog Outputs	114
Anlg In Config	200	Analog Inputs	113
Anlg Out Absolute	208	Analog Outputs	114
Anlg Out Config	207	Analog Outputs	113
Anlg Out1 Scale	215	Analog Outputs	115
Anlg Out1 Setpt	217	Analog Outputs	115
Anlg Out2 Scale	216	Analog Outputs	115
Anlg Out2 Setpt	218	Analog Outputs	115
Auto Rstrt Delay	054	Restart Modes	102
Auto Rstrt Tries	053	Restart Modes	102
Auto Stop Level	049	Control Modes	101
AutoRstrt Config	052	Restart Modes	102
Cmd DC Volt	018	Metering	100
Cnvrtr Alarm 1	097	Diagnostics	106
Cnvrtr Alarm 2	098	Diagnostics	106
Cnvrtr Logic Rslt	151	Comm Control	111
Cnvrtr OL Count	116	Diagnostics	108
Cnvrtr OL Factor	133	Faults	109
Cnvrtr Status 1	095	Diagnostics	105
Cnvrtr Status 2	096	Diagnostics	106
Contact Off Cnfg	132	Faults	109
Contact On Delay	050	Control Modes	101
Control Options	051	Control Modes	102

Parameter Name	Number	Group	Page
Control SW Ver	033	Converter Data	100
Current Lmt Val	077	Limits	103
Data In AX	170, 171	Datalinks	112
Data In BX	172, 173	Datalinks	112
Data In CX	174, 175	Datalinks	112
Data In DX	176, 177	Datalinks	112
Data Out AX	180, 181	Datalinks	112
Data Out BX	182, 183	Datalinks	112
Data Out CX	184, 185	Datalinks	112
Data Out DX	186, 187	Datalinks	112
DC Bus Current	012	Metering	99
DC Bus Hi Alarm	079	Limits	103
DC Bus Lo Alarm	078	Limits	103
DC Bus Volt	011	Metering	99
DC Ref Hi Lmt	081	Limits	103
DC Ref Lo Lmt	080	Limits	103
DC Ref Source	099	Diagnostics	106
DC Volt Ki	063	Voltage Loop	102
DC Volt Kp	062	Voltage Loop	102
DC Volt Ref	061	Voltage Loop	102
DC Volt Ref Sel	060	Voltage Loop	102
Dig In Status	102	Diagnostics	107
Dig Out Setpt	227	Digital Outputs	116
Dig Out Status	103	Diagnostics	107
Dig Out2 Invert	230	Digital Outputs	116
Dig Out2 OffTime	232	Digital Outputs	116
Dig Out2 OnTime	231	Digital Outputs	116
Dig Out3 Invert	234	Digital Outputs	116
Dig Out3 OffTime	236	Digital Outputs	116
Dig Out3 OnTime	235	Digital Outputs	116
Digital InX Sel	221...226	Digital Inputs	115
Digital Out1 Sel	228	Digital Outputs	116
Digital Out2 Sel	229	Digital Outputs	116
Digital Out3 Sel	233	Digital Outputs	116
DPI Baud Rate	150	Comm Control	111
DPI Port Sel	152	Comm Control	111
DPI Port Value	153	Comm Control	111
Droop	085	Parallel Mode	104
Elapsed Run Time	021	Metering	100
Fault 1 Code	124	Faults	109
Fault 1 Time	125	Faults	109
Fault 2 Code	126	Faults	109
Fault 2 Time	127	Faults	109
Fault 3 Code	128	Faults	109
Fault 3 Time	129	Faults	109
Fault 4 Code	130	Faults	109
Fault 4 Time	131	Faults	109
Fault Bus Volts	106	Diagnostics	107
Fault Clear	121	Faults	109
Fault Clear Mode	122	Faults	109

Parameter Name	Number	Group	Page
Fault Clr Mask	155	Masks and Owners	111
Fault Clr Owner	158	Masks and Owners	111
Fault Config	120	Faults	109
Fault Frequency	104	Diagnostics	107
Fault Temp	107	Diagnostics	107
Fault Total Curr	105	Diagnostics	107
Ground Current	010	Metering	99
Ground I Lvl	082	Limits	103
Heatsink Temp	017	Metering	99
I Imbalance	009	Metering	99
Input Current R	006	Metering	99
Input Current S	007	Metering	99
Input Current T	008	Metering	99
Input Voltage	001	Metering	99
Language	093	Converter Memory	105
Last Stop Source	101	Diagnostics	107
Logic Mask	154	Masks and Owners	111
Modulation Index	043	Control Modes	101
Modulation Type	042	Control Modes	101
Motor Power Lmt	075	Limits	103
Motoring MWh	019	Metering	100
Nom Input Volt	040	Control Modes	101
Param Access Lvl	090	Converter Memory	105
Power Factor	016	Metering	99
Power Up Marker	123	Faults	109
PWM Frequency	041	Control Modes	101
PWM Synch	086	Parallel Mode	104
Rated Amps	032	Converter Data	100
Rated kW	030	Converter Data	100
Rated Volts	031	Converter Data	100
RatedLineCurrent	045	Control Modes	101
Reactive Current	005	Metering	99
Reactive I Ki	069	Current Loop	103
Reactive I Kp	068	Current Loop	103
Reactive I Ref	065	Current Loop	103
Reactive I Sel	070	Current Loop	103
Regen MWh	020	Metering	100
Regen Power Lmt	076	Limits	103
Reset Meters	092	Converter Memory	105
Reset To Defaults	091	Converter Memory	105
Restart Delay	047	Control Modes	101
Start Inhibits	100	Diagnostics	107
Start Owner	157	Masks and Owners	111
Start Up Delay	087	Parallel Mode	104
Start/Stop Mode	046	Control Modes	101
Status 1 @ Fault	108	Diagnostics	108
Status 2 @ Fault	109	Diagnostics	108
Stop Delay	048	Control Modes	101
Stop Owner	156	Masks and Owners	111
Testpoint 1 Data	113	Diagnostics	108

Parameter Name	Number	Group	Page
Testpoint 1 Sel	112	Diagnostics	108
Testpoint 2 Data	115	Diagnostics	108
Testpoint 2 Sel	114	Diagnostics	108
Total Current	003	Metering	99
Voltage Class	094	Converter Memory	105

Parameter Cross Reference – by Number

Number	Parameter Name	Group	Page
001	Input Voltage	Metering	99
002	AC Line Freq	Metering	99
003	Total Current	Metering	99
004	Active Current	Metering	99
005	Reactive Current	Metering	99
006	Input Current R	Metering	99
007	Input Current S	Metering	99
008	Input Current T	Metering	99
009	I Imbalance	Metering	99
010	Ground Current	Metering	99
011	DC Bus Volt	Metering	99
012	DC Bus Current	Metering	99
013	AC Line kW	Metering	99
014	AC Line kVar	Metering	99
015	AC Line kVA	Metering	99
016	Power Factor	Metering	99
017	Heatsink Temp	Metering	99
018	Cmd DC Volt	Metering	100
019	Motoring MWh	Metering	100
020	Regen MWh	Metering	100
021	Elapsed Run Time	Metering	100
022	Analog In1 Value	Metering	100
023	Analog In2 Value	Metering	100
030	Rated kW	Converter Data	100
031	Rated Volts	Converter Data	100
032	Rated Amps	Converter Data	100
033	Control SW Ver	Converter Data	100
040	Nom Input Volt	Control Modes	101
041	PWM Frequency	Control Modes	101
042	Modulation Type	Control Modes	101
043	Modulation Index	Control Modes	101
045	RatedLineCurrent	Control Modes	101
046	Start/Stop Mode	Control Modes	101
047	Restart Delay	Control Modes	101
048	Stop Delay	Control Modes	101
049	Auto Stop Level	Control Modes	101
050	Contact On Delay	Control Modes	101
051	Control Options	Control Modes	102
052	AutoRstrt Config	Restart Modes	102
053	Auto Rstrt Tries	Restart Modes	102

Number	Parameter Name	Group	Page
054	Auto Rstrt Delay	Restart Modes	102
060	DC Volt Ref Sel	Voltage Loop	102
061	DC Volt Ref	Voltage Loop	102
062	DC Volt Kp	Voltage Loop	102
063	DC Volt Ki	Voltage Loop	102
064	Active I Ref	Current Loop	103
065	Reactive I Ref	Current Loop	103
066	Active I Kp	Current Loop	103
067	Active I Ki	Current Loop	103
068	Reactive I Kp	Current Loop	103
069	Reactive I Ki	Current Loop	103
070	Reactive I Sel	Current Loop	103
075	Motor Power Lmt	Limits	103
076	Regen Power Lmt	Limits	103
077	Current Lmt Val	Limits	103
078	DC Bus Lo Alarm	Limits	103
079	DC Bus Hi Alarm	Limits	103
080	DC Ref Lo Lmt	Limits	103
081	DC Ref Hi Lmt	Limits	103
082	Ground I Lvl	Limits	103
085	Droop	Parallel Mode	104
086	PWM Synch	Parallel Mode	104
087	Start Up Delay	Parallel Mode	104
090	Param Access Lvl	Converter Memory	105
091	Reset To Defaults	Converter Memory	105
092	Reset Meters	Converter Memory	105
093	Language	Converter Memory	105
094	Voltage Class	Converter Memory	105
095	Cnvrtr Status 1	Diagnostics	105
096	Cnvrtr Status 2	Diagnostics	106
097	Cnvrtr Alarm 1	Diagnostics	106
098	Cnvrtr Alarm 2	Diagnostics	106
099	DC Ref Source	Diagnostics	106
100	Start Inhibits	Diagnostics	107
101	Last Stop Source	Diagnostics	107
102	Dig In Status	Diagnostics	107
103	Dig Out Status	Diagnostics	107
104	Fault Frequency	Diagnostics	107
105	Fault Total Curr	Diagnostics	107
106	Fault Bus Volts	Diagnostics	107
107	Fault Temp	Diagnostics	107
108	Status 1 @ Fault	Diagnostics	108
109	Status 2 @ Fault	Diagnostics	108
110	Alarm 1 @ Fault	Diagnostics	108
111	Alarm 2 @ Fault	Diagnostics	108
112	Testpoint 1 Sel	Diagnostics	108
113	Testpoint 1 Data	Diagnostics	108
114	Testpoint 2 Sel	Diagnostics	108
115	Testpoint 2 Data	Diagnostics	108
116	Cnvrtr OL Count	Diagnostics	108

Number	Parameter Name	Group	Page
120	Fault Config	Faults	109
121	Fault Clear	Faults	109
122	Fault Clear Mode	Faults	109
123	Power Up Marker	Faults	109
124	Fault 1 Code	Faults	109
125	Fault 1 Time	Faults	109
126	Fault 2 Code	Faults	109
127	Fault 2 Time	Faults	109
128	Fault 3 Code	Faults	109
129	Fault 3 Time	Faults	109
130	Fault 4 Code	Faults	109
131	Fault 4 Time	Faults	109
132	Contact Off Cnfg	Faults	109
133	Cnvtr OL Factor	Faults	109
135	Alarm Config	Alarms	110
136	Alarm Clear	Alarms	110
137...140	Alarm X Code	Alarms	110
150	DPI Baud Rate	Comm Control	111
151	Cnvtr Logic Rslt	Comm Control	111
152	DPI Port Sel	Comm Control	111
153	DPI Port Value	Comm Control	111
154	Logic Mask	Masks and Owners	111
155	Fault Clr Mask	Masks and Owners	111
156	Stop Owner	Masks and Owners	111
157	Start Owner	Masks and Owners	111
158	Fault Clr Owner	Masks and Owners	111
170, 171	Data In AX	Datalinks	112
172, 173	Data In BX	Datalinks	112
174, 175	Data In CX	Datalinks	112
176, 177	Data In DX	Datalinks	112
180, 181	Data Out AX	Datalinks	112
182, 183	Data Out BX	Datalinks	112
184, 185	Data Out CX	Datalinks	112
186, 187	Data Out DX	Datalinks	112
200	Anlg In Config	Analog Inputs	113
201	Analog In 1 Hi	Analog Inputs	113
202	Analog In 1 Lo	Analog Inputs	113
203	Analog In 1 Loss	Analog Inputs	113
204	Analog In 2 Hi	Analog Inputs	113
205	Analog In 2 Lo	Analog Inputs	113
206	Analog In 2 Loss	Analog Inputs	113
207	Anlg Out Config	Analog Outputs	113
208	Anlg Out Absolute	Analog Outputs	114
209	Analog Out1 Sel	Analog Outputs	114
210	Analog Out1 Hi	Analog Outputs	114
211	Analog Out1 Lo	Analog Outputs	114
212	Analog Out2 Sel	Analog Outputs	114
213	Analog Out2 Hi	Analog Outputs	114
214	Analog Out2 Lo	Analog Outputs	114
215	Anlg Out1 Scale	Analog Outputs	115

Number	Parameter Name	Group	Page
216	Anlg Out2 Scale	Analog Outputs	115
217	Anlg Out1 Setpt	Analog Outputs	115
218	Anlg Out2 Setpt	Analog Outputs	115
221...226	Digital InX Sel	Digital Inputs	115
227	Dig Out Setpt	Digital Outputs	116
228	Digital Out1 Sel	Digital Outputs	116
229	Digital Out2 Sel	Digital Outputs	116
230	Dig Out2 Invert	Digital Outputs	116
231	Dig Out2 OnTime	Digital Outputs	116
232	Dig Out2 OffTime	Digital Outputs	116
233	Digital Out3 Sel	Digital Outputs	116
234	Dig Out3 Invert	Digital Outputs	116
235	Dig Out3 OnTime	Digital Outputs	116
236	Dig Out3 OffTime	Digital Outputs	116

Notes:

Troubleshooting


This chapter provides information to guide you in troubleshooting the PowerFlex® Active Front End. Included is a listing and description of AFE faults (with possible solutions, when applicable) and alarms.

Topic	Page
AFE Status	125
Faults and Alarms	126
Manually Clearing Faults	127
Fault and Alarm Descriptions	127
Clear the Alarms	131
Common Symptoms and Corrective Actions	131
Technical Support	135

AFE Status

The condition or state of the AFE is constantly monitored. The status indicators and/or the HIM (if present) indicate any changes.

Front Panel Indications


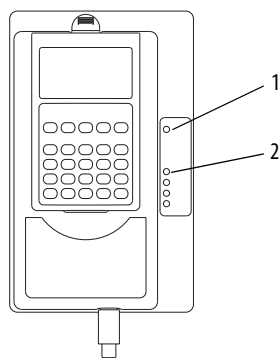


Item	Name	Color	State	Description
1	PWR (power)	Green	Steady	Illuminates when power is applied to the AFE.
2	PORT ⁽¹⁾	See the Communication Adapter User Manual (publication 20COMM-UMxxx)		Status of DPI™ port internal communication (if present).
	MOD ⁽¹⁾			Status of communication adapter (when installed).
	NET A ⁽¹⁾			Status of network (if connected).
	NET B ⁽¹⁾			Status of secondary network (if connected).

(1) These indicators operate only when a 20-COMM-X communication adapter is installed in the AFE and operating on the connected network.

HIM Indication

The HIM also provides visual notification of a fault or alarm condition.

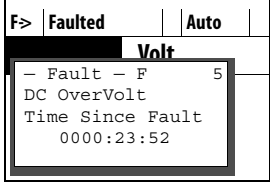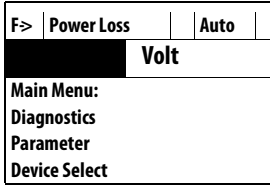Condition	Display
<p>AFE is indicating a fault.</p> <p>The HIM reports the fault condition and displays the following data:</p> <ul style="list-style-type: none"> • 'Faulted' appears in the status line • Fault number • Fault name • Time that has passed since fault occurred <p>Press Esc to regain HIM control.</p>	
<p>AFE is indicating an alarm.</p> <p>The HIM reports the alarm condition and displays the following data:</p> <ul style="list-style-type: none"> • Alarm name (only type 2 alarms) • Alarm bell graphic 	

Faults and Alarms

A fault is a condition that stops the AFE. There are three fault types.



Fault Type	Fault Description
1	Auto-reset run When this type of fault occurs, and [Auto Rstrt Tries] (page 102) is set to a value greater than '0', a user-configurable timer, [Auto Rstrt Delay] (page 102) begins. When the timer reaches zero, the AFE attempts to reset the fault. If the condition that caused the fault is no longer present, the fault is reset and the AFE is restarted.
2	Non-resettable This type of fault normally requires AFE or motor repair. The cause of the fault must be corrected before the fault can be cleared. After repair, the fault is reset on power-up.
3	Configurable These faults can be enabled and disabled to annunciate or ignore a fault condition by using [Fault Config] (page 109).

An alarm is a condition that, if left untreated, can stop the AFE. There are two alarms types.

Alarm Type	Alarm Description
1	Configurable These alarms can be enabled or disabled by using [Alarm Config] (page 110).
2	Non-configurable These alarms are always enabled.

See [Fault and Alarm Descriptions on page 127](#).

Manually Clearing Faults

Steps
<ol style="list-style-type: none"> 1. Press the HIM  (Escape) key to acknowledge the fault. The fault information is removed so that you can use the HIM. 2. Address the condition that caused the fault. The cause must be corrected before the fault can be cleared. 3. After corrective action has been taken, clear the fault with one of these methods: <ul style="list-style-type: none"> – Press the HIM  (Stop) key. – Cycle power to the AFE. – Set AFE parameter 121 - [Fault Clear] to '1' (Clear Faults). – 'Clear Faults' by using the HIM Diagnostic menu.

Fault and Alarm Descriptions

Table 21 - Fault/Alarm Types, Descriptions, and Actions

No.	Name	Fault	Alarm	Description	Action (if appropriate)
1	PrechargeActv		1	The charging switch is open, when the START command has been given. <ul style="list-style-type: none"> • Faulty operation • Component failure 	Reset the fault and restart. If the fault reoccurs, contact technical support (see page 135).
2	Auxiliary In	1		The auxiliary input interlock is open.	Check all remote wiring.
4	DC UnderVolt	1 3	1	The DC bus voltage fell below the minimum value of 333V for 400/480V AFEs or 461V for 600/690V AFEs. You can enable/disable this fault with parameter 120 [Fault Config].	Monitor the incoming AC line for low voltage or power interruption.
5	DC OverVolt	1		The DC bus voltage exceeded the maximum value of 911V for 400/480V AFEs or 1200V for 600/690V AFEs.	<ol style="list-style-type: none"> 1. Check if the AFE was in a regenerative current limit condition, which can indicate an excess regenerative load. 2. Adjust parameter [Regen Power Lmt]. 3. Monitor incoming AC line for high voltage or voltage transients.
7	Overload	3		When input current exceeds 125% for 60 seconds or 150% for 30 seconds. The overload is a linear type in counting up.	Reduce the current consumption of the AFE or increase parameter 133 [Cnvrtr OL Factor].
8	HeatsinkOvrTp	2	1	The heatsink temperature has exceeded the maximum allowable value. 85 °C (185 °F) = Alarm 90 °C (194 °F) = Fault	<ol style="list-style-type: none"> 1. Verify that the maximum ambient temperature has not been exceeded. 2. Check the fans (including the ASIC board on frame 10 and higher converters). 3. Check for an excess load.
9	IGBT OverTemp	1		The output transistors have exceeded their maximum operating temperature due to an excessive load.	<ol style="list-style-type: none"> 1. Verify that the maximum ambient temperature has not been exceeded. 2. Check the fan or fans. 3. Check for an excess load.
10	System Fault	2		A hardware problem exists in the power structure.	<ol style="list-style-type: none"> 1. Cycle the power. 2. Verify the fiber-optic connections. 3. Contact technical support (see page 135). 4. If the problem persists, replace the converter unit.
12	AC OverCurr	1		The AC line current has exceeded the hardware current limit.	Check programming for an excess load or other causes of excess current.
13	Ground Fault	1		A current path to earth ground exists that is greater than the parameter 082 [Ground I Lvl] value. The current must appear for 800 milliseconds before the unit will fault.	Check the cables.
14	Converter Flt	2		A hardware problem exists in the power structure.	<ol style="list-style-type: none"> 1. Cycle the power. 2. Contact technical support (see page 135). 3. If the problem persists, replace the converter unit.

Table 21 - Fault/Alarm Types, Descriptions, and Actions (Continued)

No.	Name	Fault	Alarm	Description	Action (if appropriate)
17	LineSync Fail	2 3	1	One input line phase is missing.	1. Check all user-supplied fuses. 2. Check the AC input line voltage.
19	Unbalanced PU	2		An imbalance between the power modules exists (paralleled units - only Frame 13).	1. Check for DC voltage imbalance between the power modules. 2. Check for current input imbalance between the power modules.
21	Phase Loss	2		There is no current in one of the three phases.	Check supply voltage, fuses, and cable.
29	Anlg In Loss	1 3	1	An analog input is configured to fault on a signal loss. A signal loss has occurred. Configure this fault with parameter [Anlg In x Loss].	1. Check parameter settings. 2. Check for broken/loose connections at the inputs.
30	MicroWatchdog	2		A microprocessor watchdog timeout has occurred.	1. Cycle the power. 2. Replace the main control board.
31	IGBT Temp Hw	2		The drive output current has exceeded the instantaneous current limit.	1. Check for an excess load. 2. Contact technical support (see page 135).
32	Fan Cooling	2		Fan is not energized at start command.	1. Check the status of parameter 097 [Cnvrtr Alarm 1] bit 5 (LCL Fan Stop). If set to '1', check the fan on the LCL filter. If set to '0', check the fan on the converter. 2. If the LCL filter fan is not operating, check its DC power supply.
33	AutoReset Lim	3		The AFE unsuccessfully attempted to reset a fault and resumed running for the programmed number in parameter 053 [Auto Rstrt Tries]. You can enable/disable this fault with parameter 120 [Fault Config].	Correct the cause and manually clear the fault.
34	CAN Bus Flt	2		A sent message was not acknowledged.	1. Cycle the power. 2. Replace the main control board.
35	Application	1		Problem in application software with task overload.	Contact technical support (see page 135).
37	HeatsinkUndTp	1		The ambient temperature is too low.	Raise the ambient temperature.
44	Device Change	2		The new power unit or option board that is installed is a different type.	Clear the fault and reset the AFE to the default configurations.
45	Device Add	2		A new option board was added.	Clear the fault.
47	NvsReadChksum	2		There is an error reading parameters 019 [Motoring MWh], 020 [Regen MWh], and 021 [Elapsed Run Time] from EEPROM.	1. Cycle the power. 2. Replace the main control board.
54	Zero Divide	2		This event occurred because a mathematical function had a dividend of zero.	1. Cycle the power. 2. Replace the main control board.
58	Start Prevent	1		Startup has been prevented.	1. Cancel prevention of startup if the cancellation can be done safely. 2. Remove Run Request.
65	I/O Removed	2		An I/O option board has been removed.	Clear the fault.
70	Power Unit	1		One or more of the IGBTs were operating in the active region instead of desaturation. Excessive transistor current or insufficient base drive voltage causes this fault.	Clear the fault.
71	Periph Loss	2		The 20-COMM-x communication adapter has a fault on the network side.	Check the DPI device event queue and corresponding fault information for the device.

Table 21 - Fault/Alarm Types, Descriptions, and Actions (Continued)

No.	Name	Fault	Alarm	Description	Action (if appropriate)
81	Port DPI Loss	2		The DPI port has stopped communicating. A SCANport™ device was connected to a drive operating DPI devices at 500k baud.	<ol style="list-style-type: none"> 1. If the adapter was not intentionally disconnected, check the wiring to the port. Replace the wiring, port expander, adapters, main control board, or complete AFE as required. 2. Check the HIM connection. 3. If an adapter was intentionally disconnected and the [Logic Mask] bit for that adapter is set to '1', this fault occurs. To disable this fault, set the bit in parameter [Logic Mask] for the adapter to '0'.
94	Hardware Enbl	2		An enable signal is missing from the control terminal block.	<ol style="list-style-type: none"> 1. Check the control wiring. 2. Check the position of the hardware enable jumper. 3. Check the digital input programming.
100	Param Chksum	2		The checksum read from the main control board does not match the checksum calculated.	<ol style="list-style-type: none"> 1. Restore the AFE to the default configurations. 2. Cycle the power. 3. Reload User Set, if used.
104	PwrBrd Chksum	2		The checksum read from the EEPROM does not match the checksum calculated from the EEPROM data.	<ol style="list-style-type: none"> 1. Cycle the power. 2. Contact technical support (see page 135). 3. If the problem persists, replace the AFE.
106	MCB-PB Config	2		The AFE rating information that is stored on the power board is incompatible with the main control board.	<ol style="list-style-type: none"> 1. Reset the fault or cycle the power. 2. Replace the main control board.
107	New IO Option	2		A new option board was added to the main control board.	<ol style="list-style-type: none"> 1. Restore the AFE to default configurations. 2. Reprogram parameters as necessary.
113	Fatal App	2		A fatal application error has occurred.	Replace the main control board.
120	I/O Change	2		An option board has been replaced.	Reset the fault.
121	I/O Comm Loss	2		An I/O board lost communications with the main control board.	<ol style="list-style-type: none"> 1. Check the connector. 2. Check for induced noise. 3. Replace I/O board or main control board.

Table 21 - Fault/Alarm Types, Descriptions, and Actions (Continued)

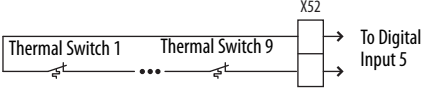
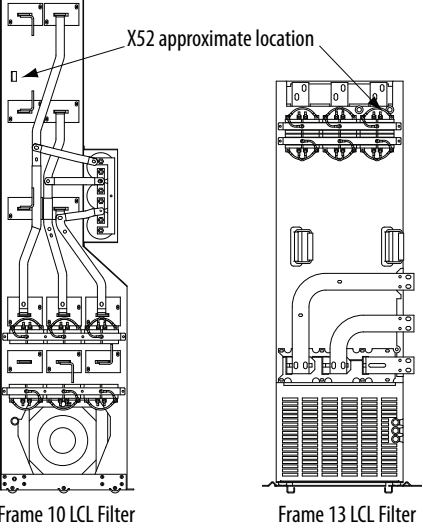
No.	Name	Fault	Alarm	Description	Action (if appropriate)
125	LCL OverTemp	1		<p>The LCL filter has been overheated or the signal is not connected to input.</p> <p>There are nine total thermal switches that are connected in series to monitor temperature inside the coil of each filter inductor.</p>  <p>X52 is on the LCL filter.</p> 	<p>Check the LCL filter sensor connections, the fan, and fan power supply.</p>
128	Contact Fdbk		2	<p>The input of the acknowledge signal from the main contactor is missing.</p>	<p>Check if the main contactor is closed. Check the wiring of the feedback signal.</p>
133	DigInConflict		2	<p>Digital input functions are in conflict.</p>	<p>Check the parameter settings to correct the problem.</p>
138	DCRefLowLim		1	<p>DC voltage reference is less than the limit in parameter 080 [DC Ref Lo Lmt].</p>	<p>Check the parameter setting.</p>
139	DCRefHighLim		1	<p>DC voltage reference exceeds the limit in parameter 081 [DC Ref Hi Lmt].</p>	<p>Check the parameter setting.</p>
140	DCBusLoAlarm		1	<p>DC voltage is less than the value set by parameter 078 [DC Bus Lo Alarm].</p>	<p>Check the parameter setting.</p>
141	DCBusHiAlarm		1	<p>DC voltage exceeds the value set by parameter 079 [DC Bus Hi Alarm].</p>	<p>Check the parameter setting.</p>

Table 22 - Fault/Alarm Cross-reference – By Name


Fault/Alarm		Fault	Alarm	Fault/Alarm		Fault	Alarm
Name	No.			Name	No.		
AC OverCurr	12	x		I/O Change	120	x	
Anlg In Loss	29	x	x	I/O Comm Loss	121	x	
Application	35	x		I/O Removed	65	x	
AutoReset Lim	33	x		IGBT OverTemp	9	x	
Auxiliary In	2	x		IGBT Temp Hw	31	x	
CAN Bus Flt	34	x		LCL OverTemp	125	x	
Contact Fdbk	128		x	LineSync Fail	17	x	x
Converter Flt	14	x		MCB-PB Config	106	x	
DC OverVolt	5	x		MicroWatchdog	30	x	
DC UnderVolt	4	x	x	New IO Option	107	x	
DCBusHiAlarm	141		x	NvsReadChksum	47	x	
DCBusLoAlarm	140		x	Overload	7	x	
DCRefHighLim	139		x	Param Chksum	100	x	
DCRefLowLim	138		x	Periph Loss	71	x	
Device Add	45	x		Phase Loss	21	x	
Device Change	44	x		Port DPI Loss	81	x	
DigIn Cnflct	133		x	Power Unit	70	x	
Fan Cooling	32	x		PrechargeActv	1		x
Fatal App	113	x		PwrBrd Chksum	104	x	
Ground Fault	13	x		Start Prevent	58	x	
Hardware Enbl	94	x		System Fault	10	x	
HeatsinkOvrTp	8	x	x	Unbalanced PU	19	x	
HeatsinkUndTp	37	x		Zero Divide	54	x	

Clear the Alarms

Alarms are automatically cleared when the condition that caused the alarm is no longer present.

Common Symptoms and Corrective Actions

Table 23 - AFE Does Not Start from Start or Run Inputs Wired to the Terminal Block

Causes	Indication	Corrective Action
AFE is faulted	Flashing red status light	Clear fault. <ul style="list-style-type: none"> Press the HIM  (Stop) key. Cycle power to the AFE. Set parameter 121 [Fault Clear] to '1' (Clear Faults); see page 109. 'Clear Faults' by using the HIM diagnostic menu.
Incorrect input wiring; see Control Wiring on page 40 or Control Wiring on page 74 for wiring examples. IMPORTANT: Jumper between terminals 17, 18, and 20 is required when using the 24V DC internal supply.	None	Wire inputs correctly and/or install jumper.

Causes	Indication	Corrective Action
Incorrect digital input programming.	None	Program [Digital Inx Sel] for correct inputs (see page 115). Run programming can be missing.
There is some other start inhibit.	Check status bits of parameter 100 [Start Inhibits].	Correct the source of the inhibit.

Table 24 - Instability in the AC Line Input Current and DC Bus Voltage

Causes	Indication	Corrective Action
AC line voltage more than 5% above normal.	Instability in AC line current and DC bus voltage. Can trip on fault F7 'Overload'.	Increase parameter 060 [DC Volt Ref] proportional to the percentage of the AC line voltage above nominal.
Negative reactive I Ref on parameter 065 [Reactive I Ref] with a soft (high impedance) AC line.	Instability in AC line current and DC bus voltage. Can trip an F7 overload.	Change parameter 065 [Reactive I Ref] value to zero. Verify if the AFE is running on a soft line per AC line source considerations.

Figure 44 - AFE Start Sequence Troubleshooting Diagram


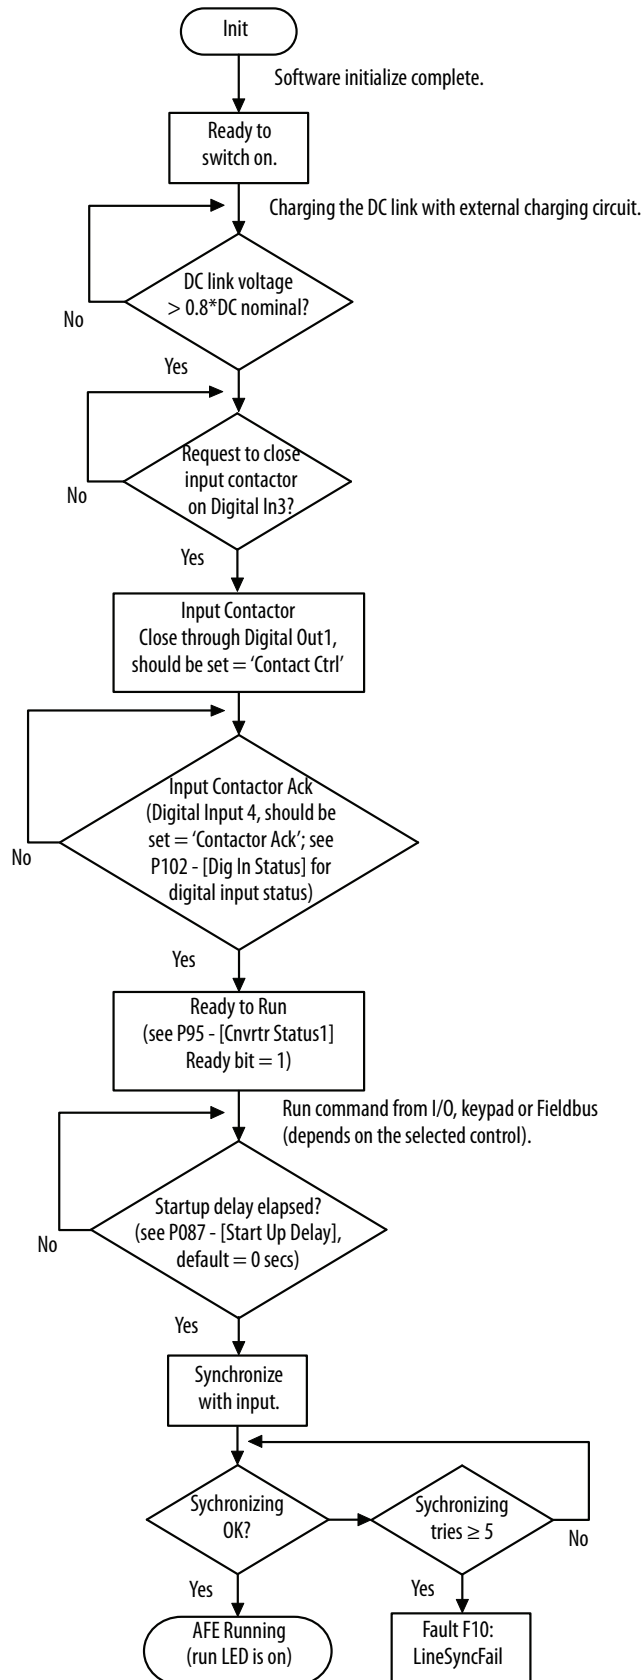


Figure 45 - AFE Fault Handling Sequence Troubleshooting Diagram

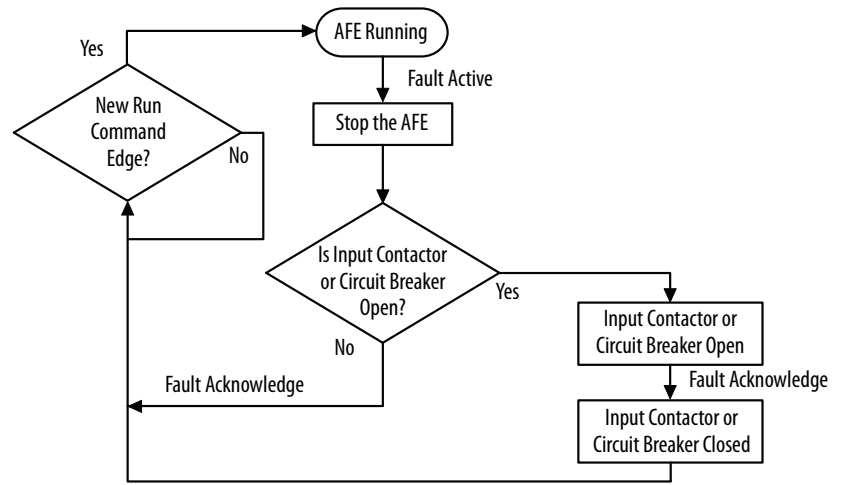

Technical Support

When you contact technical support, be prepared to provide this information:

- Order number
- Product catalog number and drives series number (if applicable)
- Product serial number
- Firmware revision level (verify with parameter 033 [Control SW Ver])
- Most recent fault code
- Your application

The data that are contained in the following parameters helps in initial troubleshooting of a faulted drive. Record the data provided for each listed parameter in this table.

Parameter	Name	Description	Recorded Parameter Data
104	Fault Frequency	Captures and displays the AC line frequency at time of last fault.	
105	Fault Total Curr	Captures and displays the DC bus amps at time of last fault.	
106	Fault Bus Volts	Captures and displays the DC bus voltage at time of last fault.	
107	Fault Temp	Captures and displays the heatsink temperature at time of last fault.	
108	Status 1 @ Fault	Captures and displays [Cnvtr Status 1] bit pattern at time of last fault.	
109	Status 2 @ Fault	Captures and displays [Cnvtr Status 2] bit pattern at time of last fault.	
110	Alarm 1 @ Fault	Captures and displays [Cnvtr Alarm 1] bit pattern at time of last fault.	
111	Alarm 2 @ Fault	Captures and displays [Cnvtr Alarm 2] bit pattern at time of last fault.	
124	Fault 1 Code	Displays a code that represents the fault that tripped the AFE. The codes appear in these parameters in the order they occur ([Fault 1 Code] equals the most recent fault).	
126	Fault 2 Code		
128	Fault 3 Code		
130	Fault 4 Code		
125	Fault 1 Time	Displays the time between initial unit power-up and the occurrence of the associated trip fault. Can be compared to [Power Up Marker] for the time from the most recent power-up. [Fault x Time] - [Power Up Marker] = Time difference to the most recent power-up. A negative value indicates that fault occurred before most recent power-up. A positive value indicates that fault occurred after most recent power-up. Time stamp of the fault occurrence.	
127	Fault 2 Time		
129	Fault 3 Time		
131	Fault 4 Time		
137...140	Alarm Code 1...4	Displays a code that represents a converter alarm. The codes appear in the order they occur ([Alarm 1 Code] = the most recent alarm). A time stamp is not available with alarms.	

Notes:

Supplemental Information

Topic	Page
Specifications	137
Derating Guidelines	139
AFE Current Ratings and Watts Loss	140
Fusing and Circuit Breakers for AFE in IP20 2500 MCC Style Enclosure	141
Fusing and Circuit Breakers for AFE in IP21 Rittal Enclosure	142
Dimensions	143
DPI Communication Configurations	152

Specifications

This table provides certification information.

Certifications	Description
C-UL-US	UL and C-UL Listed to UL508C and CAN/CSA - 22.2 No. 14-05. UL Listing is applicable up to 600V AC.
CE	Marked for all applicable European Directives ⁽¹⁾ EMC Directive (2014/35/EU) EN 61800-3 Adjustable speed electrical power drive systems - Part 3: EMC requirements and specific test methods Low Voltage Directive (2014/30/EU) EN 61800-5-1 Adjustable speed electrical power drive systems - Part 5-1: Safety requirements - Electrical, thermal and energy
KCC	Korean KC registration ⁽²⁾
Regulatory compliance mark (RCM)	Certified by Rockwell Automation to be in conformity with the requirements of the applicable Australian legislation and standards referenced here: IEC 61800-3

The AFE is also designed to meet the following specifications:

- NFPA 70 - US National Electrical Code
- NFPA 79 - Electrical Standard for Industrial Machinery 2002 Edition
- NEMA ICS 7.0 - Safety standards for Construction and Guide for Selection, Installation and Operation of Adjustable Speed Drive Systems


- (1) Applied noise impulses can be counted with the standard pulse train. These applied noise impulses can cause erroneously high [Pulse Freq] readings.
- (2) Registration KCC-REM-RAA-20A. See the certificate of registration for specific drive catalog numbers that have this certification.

Category	Specification				
Protection	AFE Voltage Class	380/400V	480V	600V	690V
	Bus overvoltage trip	911V DC	911V DC	1200V DC	1200V DC
	Bus undervoltage shutoff/fault	333VDC	333V DC	461V DC	461V DC
	Heat sink thermistor	Monitored by microprocessor overtemp trip			
	Ground fault protection	Yes			
	Input phase loss protection	Yes			
	Input overcurrent protection	Yes			
	Overtemperature protection	Yes			
	LCL filter overtemperature protection	Yes			
	Line transients	Up to 6000V peak per IEEE C62.41-1991			
	Control logic noise immunity	Showering arc transients up to 1500V peak			
	Ground fault trip	DC bus-to-ground current exceeds par 082 [Ground I Lvl] value			
Environment	Altitude	1000 m (3300 ft) max. without derating			
	Max surrounding air temperature without derating	0...40 °C (32...104 °F); Frame 13 600/690V AFE is rated at 35 °C (95 °F). See Derating Guidelines on page 139 for derating above 35 °C (95 °F).			
	Storage temperature (all constructions)	-40...+60 °C (-40...+140 °F)			
	Atmosphere	Important: The AFE unit must not be installed in an area where the ambient atmosphere contains volatile or corrosive gas, vapors, or dust. If the AFE is not going to be installed for some time, store the AFE in an area where it is not exposed to a corrosive atmosphere.			
	Relative humidity	5...95% noncondensing			
	Shock (non-operational)	15G peak for 11 ms duration EN50178 / EN60068-2-27			
	Vibration	1 mm (0.039 in.) displacement, 1G peak EN50178 / EN60068-2-6			
	Sound: Frame 10 Frame 13	71 dB at 1 m (3.28 ft) 80 dB at 1 m (3.28 ft)			
Electrical	AC input voltage tolerance	±10%			
	Frequency tolerance	48...63 Hz			
	Input phases	Three-phase input provides full rating for all AFEs. The AFE cannot be operated with single-phase input.			
	Displacement power factor	1.0 default across entire range			
	Efficiency	97.5% at rated amps, nominal line volts			
	Short circuit rating: • AFE Frame 10 in IP20 • AFE Frame 13 in IP20 • AFE in IP21 or AFE IP00	<ul style="list-style-type: none"> • 100 kA for 400/480V unit; 65 kA for 600/690V unit • 100 kA for 400/480V unit; 100 kA for 600/690V unit • Determined by AIC rating of installed fuse/circuit breaker 			
Control	AFE Voltage Class	380/400V	480V	600V	690V
	DC output voltage range	462...702	583...842	700...932	802...1071
	Method	Sine-coded PWM			
	Carrier frequency	3.6 kHz			
	Intermittent overload: • Normal duty • Heavy duty	<ul style="list-style-type: none"> • 110% overload capability for up to 1 minute • 150% overload capability for up to 1 minute (this heavy-duty rating does not apply to Frame 13 600/690V AFEs) 			
	Current limit capability	Current limit programmable from 20...150% of rated input current.			


Derating Guidelines

The following charts illustrate derating guidelines based on conditions.


Ambient Temperature/Load

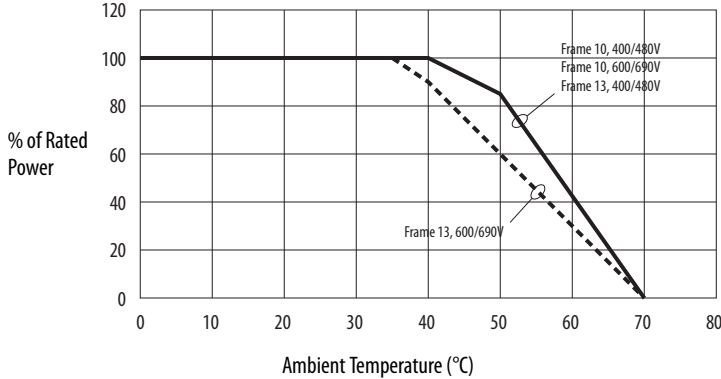

Altitude/Load 400/480V AC Input

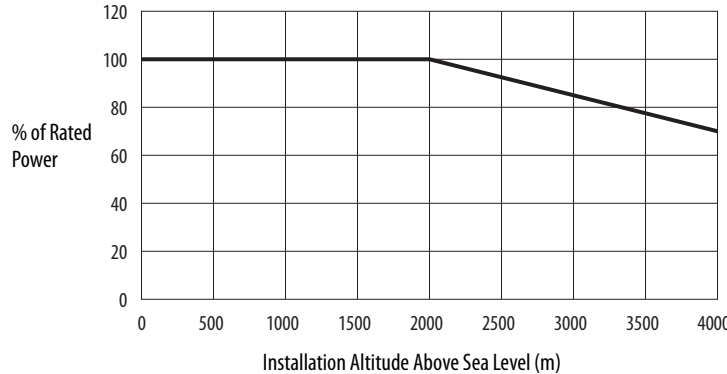

Altitude/Load 600/690V AC Input

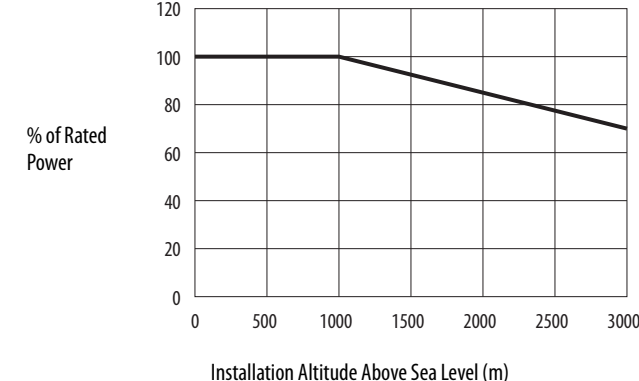

AFE Current Ratings and Watts Loss

The following tables provide PowerFlex Active Front End current ratings (including continuous and 1 minute) and typical watts loss.

400 Volt AC Input Ratings

AFE Catalog Number	Frame Size	kW Rating		PWM Freq.	AC Input Amps		DC Output Amps	Typical Watts Loss
		ND	HD	kHz	Cont.	1 Min.	Cont.	
20YD460...	10	309	—	3.6	460 A	506 A	520 A	8000 W
		—	258	3.6	385 A	578 A	435 A	
20YD1K3...	13	873	—	3.6	1300 A	1430 A	1469 A	23,000 W
		—	772	3.6	1150 A	1725 A	1299 A	

480 Volt AC Input Ratings

AFE Catalog Number	Frame Size	Hp Rating		PWM Freq.	AC Input Amps		DC Output Amps	Typical Watts Loss
		ND	HD	kHz	Cont.	1 Min.	Cont.	
20YD460...	10	497	—	3.6	460 A	506 A	520 A	8000 W
		—	416	3.6	385 A	578 A	435 A	
20YD1K3...	13	1404	—	3.6	1300 A	1430 A	1469 A	23,000 W
		—	1242	3.6	1150 A	1725 A	1299 A	

600 Volt AC Input Ratings

AFE Catalog Number	Frame Size	Hp Rating		PWM Freq.	AC Input Amps		DC Output Amps	Typical Watts Loss
		ND	HD	kHz	Cont.	1 Min.	Cont.	
20YF325...	10	439	—	3.6	325 A	358 A	367 A	8000 W
		—	324	3.6	240 A	360 A	272 A	
20YF1K0...	13 ⁽¹⁾	1390	—	3.6	1030 A	1133 A	1164 A	26,000 W

(1) Heavy-duty rating does not apply to Frame 13 600/690V AFE.

690 Volt AC Input Ratings

AFE Catalog Number	Frame Size	kW Rating		PWM Freq.	AC Input Amps		DC Output Amps	Typical Watts Loss
		ND	HD	kHz	Cont.	1 Min.	Cont.	
20YF325...	10	376	—	3.6	325 A	358 A	367 A	8000 W
		—	278	3.6	240 A	360 A	272 A	
20YF1K0...	13 ⁽¹⁾	1193	—	3.6	1030 A	1133 A	1164 A	26,000 W

(1) Heavy-duty rating does not apply to Frame 13 600/690V AFE.

Fusing and Circuit Breakers for AFE in IP20 2500 MCC Style Enclosure

AC Input Fuse and Circuit Breaker Ratings

The tables in this section provide the recommended AC input line fuses and circuit breakers. The AFE in an IP20 2500 MCC Style enclosure includes the recommended AC input fusing and circuit breaker.

400/480 Volt AC Fusing and Circuit Breaker Ratings

Frame Size	Fuse Rating		Main Circuit Breaker Rating	
	Amps	Bussman Type	Amps	ABB Type
10	800 A	170M6696	600 A	T5L600BW
13	2200 A	170M7090	1600 A	T8VBC3FC000000xx

600/690 Volt AC Fusing and Circuit Breaker Ratings

Frame Size	Fuse Rating		Main Circuit Breaker Rating	
	Amps	Bussman Type	Amps	ABB Type
10	630 A	170M6694	400 A	T5L400BW
13	1800 A	170M7532	1600 A	T8VBC3FC000000xx

DC Bus Output Fuse Ratings

DC Bus Output fuses must be used for short circuit protection. The tables in this section provide the ratings of the DC Bus Output fuses used for the AFE in an IP20 2500 MCC Style enclosure.

465...800 Volt DC Fusing

Frame Size	Fuse Rating	
	Amps	Bussman Type
10	1100 A	170M6499
13	1100 A (2 per phase)	170M6499

640...1100 Volt DC Fusing

Frame Size	Fuse Rating	
	Amps	Bussman Type
10	630 A	170M6454
13	630 A (2 per phase)	170M6454

Fusing and Circuit Breakers for AFE in IP21 Rittal Enclosure

AC Input Fuse and Circuit Breaker Ratings

The tables in this section provide the recommended AC input line fuses and circuit breakers. The AFE in an IP21 Rittal enclosure includes the recommended MCCB (motor-controlled circuit breaker).

400/480 Volt AC Fusing and MCCB Ratings

Frame Size	Fuse Ratings			MCCB Ratings	
	Amps	Bussman Type ⁽¹⁾	Ferraz Shawmut Type	Amps	ABB Type
10	800	—	NH3UD69V800PV	630	T5H630FF3LS
	1000	170M6277	—		
13	2200	—	PC44UD75V22CTQ	1600	T7516FF3PR231LS
	1000 (3 per phase)	170M6277	—		

(1) Suitable for replacement fuse.

600/690 Volt AC Fusing and MCCB Ratings

Frame Size	Fuse			MCCB Ratings	
	Amps	Bussman Type ⁽¹⁾	Ferraz Shawmut Type	Amps	ABB Type
10	700	—	PC73UD13C630PA	400	T5H400LS
	700	170M6305	—		
13	1800	—	PC84UD12C18CTQ	1600	T7516FF3PR231LS
	700 (3 per phase)	170M6305	—		

(1) Suitable for replacement fuse.

DC Bus Output Fuse Ratings

DC Bus Output fuses must be used for short circuit protection. The tables in this section provide the ratings of the DC Bus Output fuses used for the AFE in an IP21 Rittal enclosure.

465...800 Volt DC Fusing

Frame Size	Fuse		
	Amps	Bussman Type ⁽¹⁾	Ferraz Shawmut Type
10	1100	—	PC73UD95V11CTF
	1250	170M6566	—
13	2400	—	PC84UD11C24CTQ
	1250 (2 per phase)	170M6566	—

(1) Suitable for replacement fuse.

640...1100 Volt DC Fusing


Frame Size	Fuse		
	Amps	Bussman Type ⁽¹⁾	Ferraz Shawmut Type
10	630	—	PC73UD13C630TF
	700	170M6305	—
13	2000	—	PC84UD11C20CTQ
	1000 (2 per phase)	170M8510	—

(1) Suitable for replacement fuse.

Dimensions


Figure 46 - AFE Frame 10 in IP20 2500 MCC Style Enclosure Dimensions

Dimensions are in millimeters and (inches).

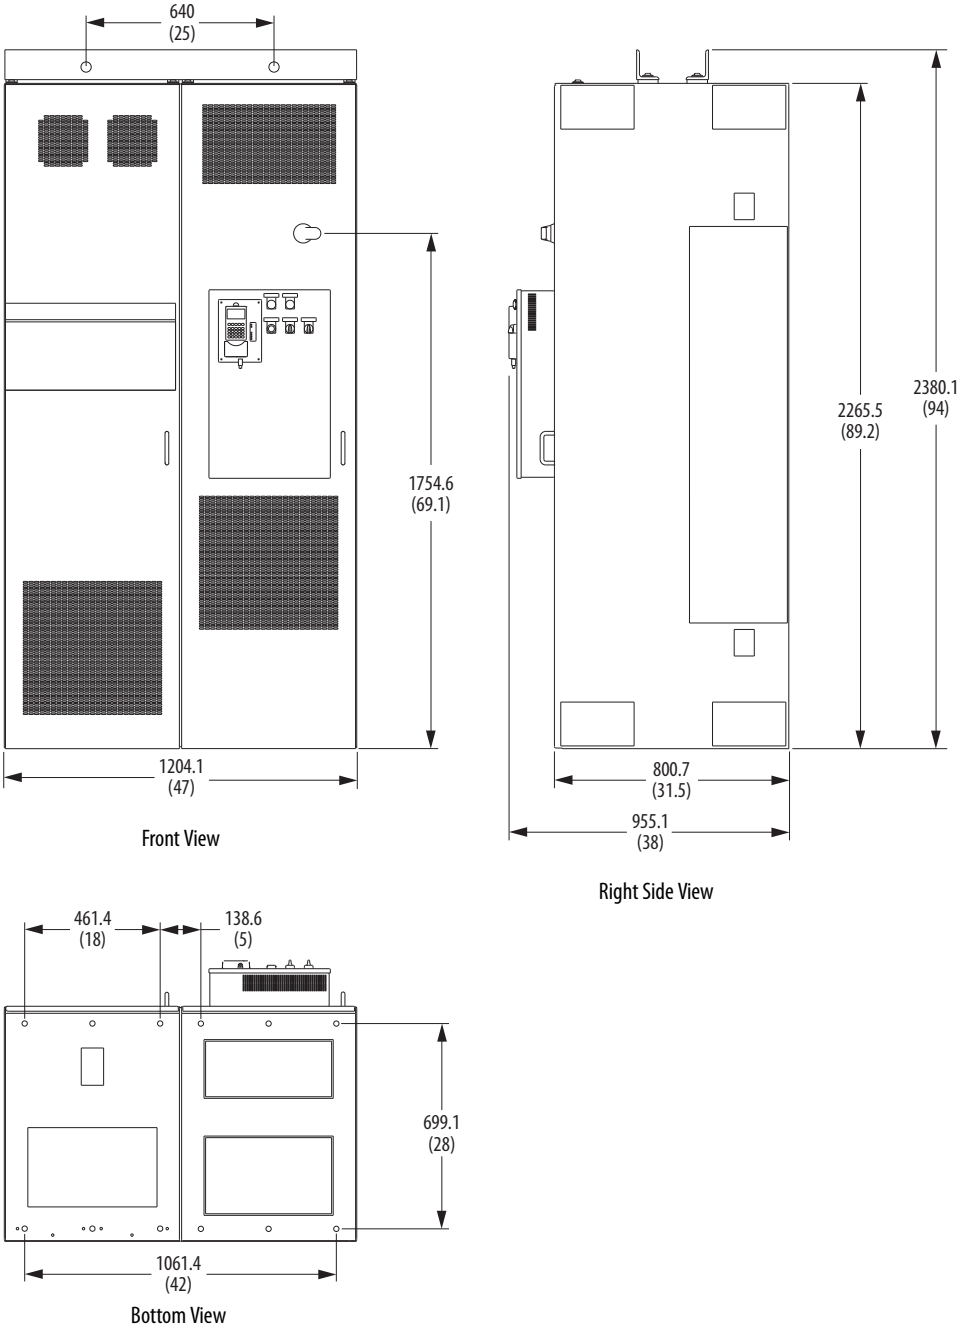

Overall Dimensions, mm (in.)			Weight, kg (lb)
Height	Width	Depth	
2380.1 (94)	1204.1 (47)	955.1 (38)	1035 (2282)


Figure 47 - AFE Frame 13 in IP20 2500 MCC Style Enclosure Dimensions

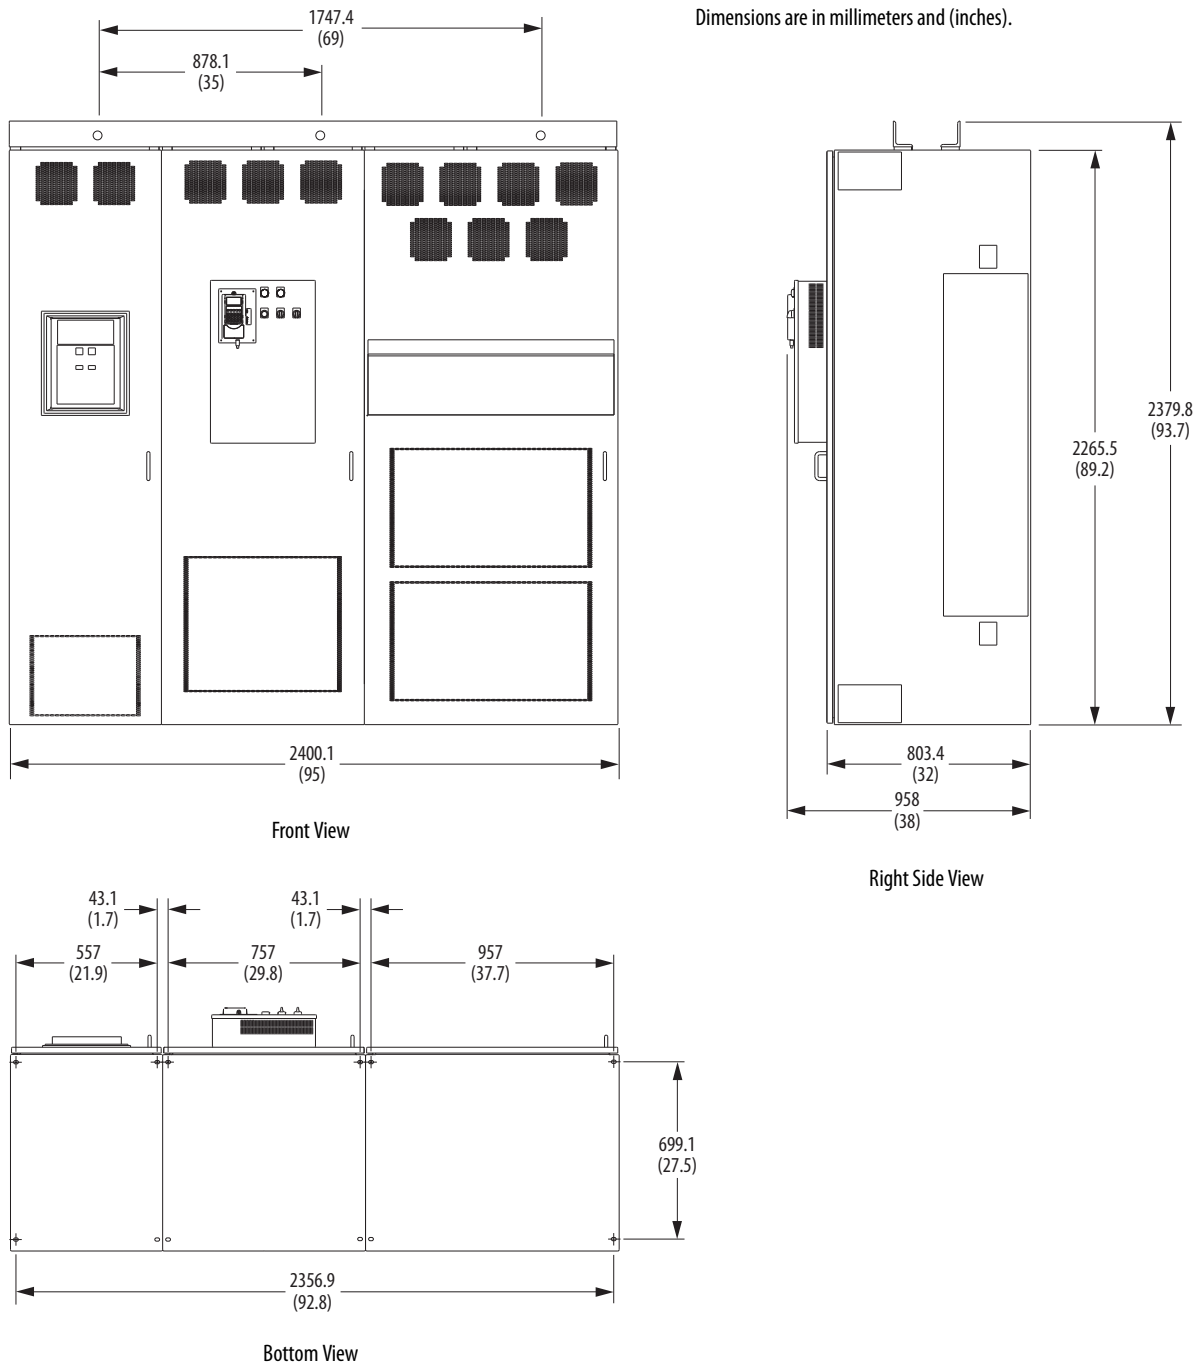

Overall Dimensions, mm (in.)			Weight, kg (lb)
Height	Width	Depth	
2379.8 (93.7)	2400.1 (95)	958 (38)	2200 (4850)

Figure 48 - AFE Frame 10 in IP21 Rittal Enclosure Dimensions


Dimensions are in millimeters and (inches).

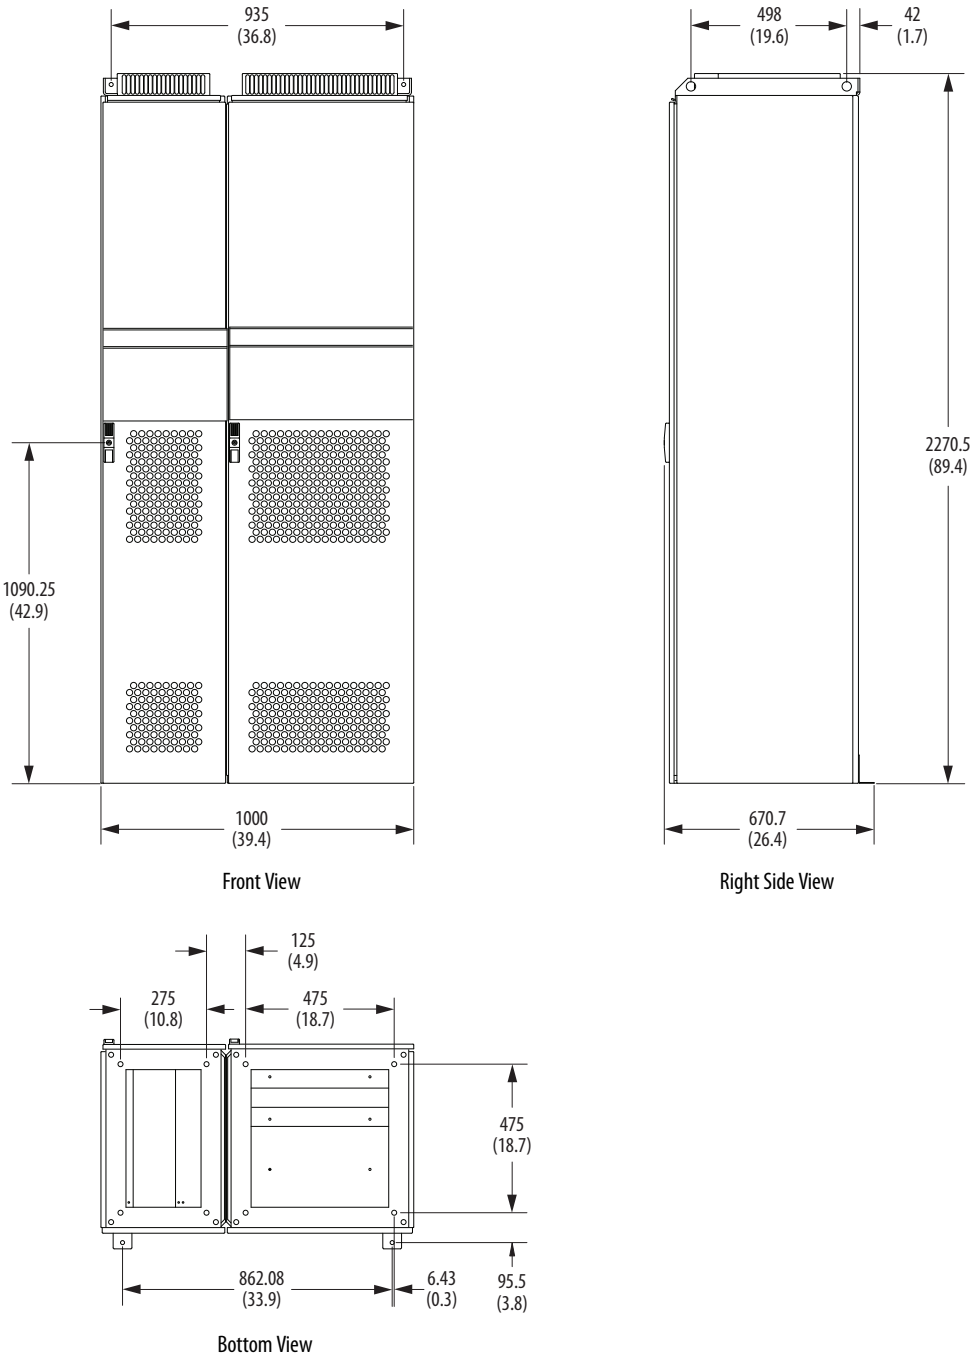

Overall Dimensions, mm (in.)			Weight, kg (lb)
Height	Width	Depth	
2270.5 (89.4)	1000 (39.4)	670.7 (26.4)	600 (1323)

Figure 49 - AFE Frame 13 in IP21 Rittal Enclosure Dimensions


Dimensions are in millimeters and (inches).

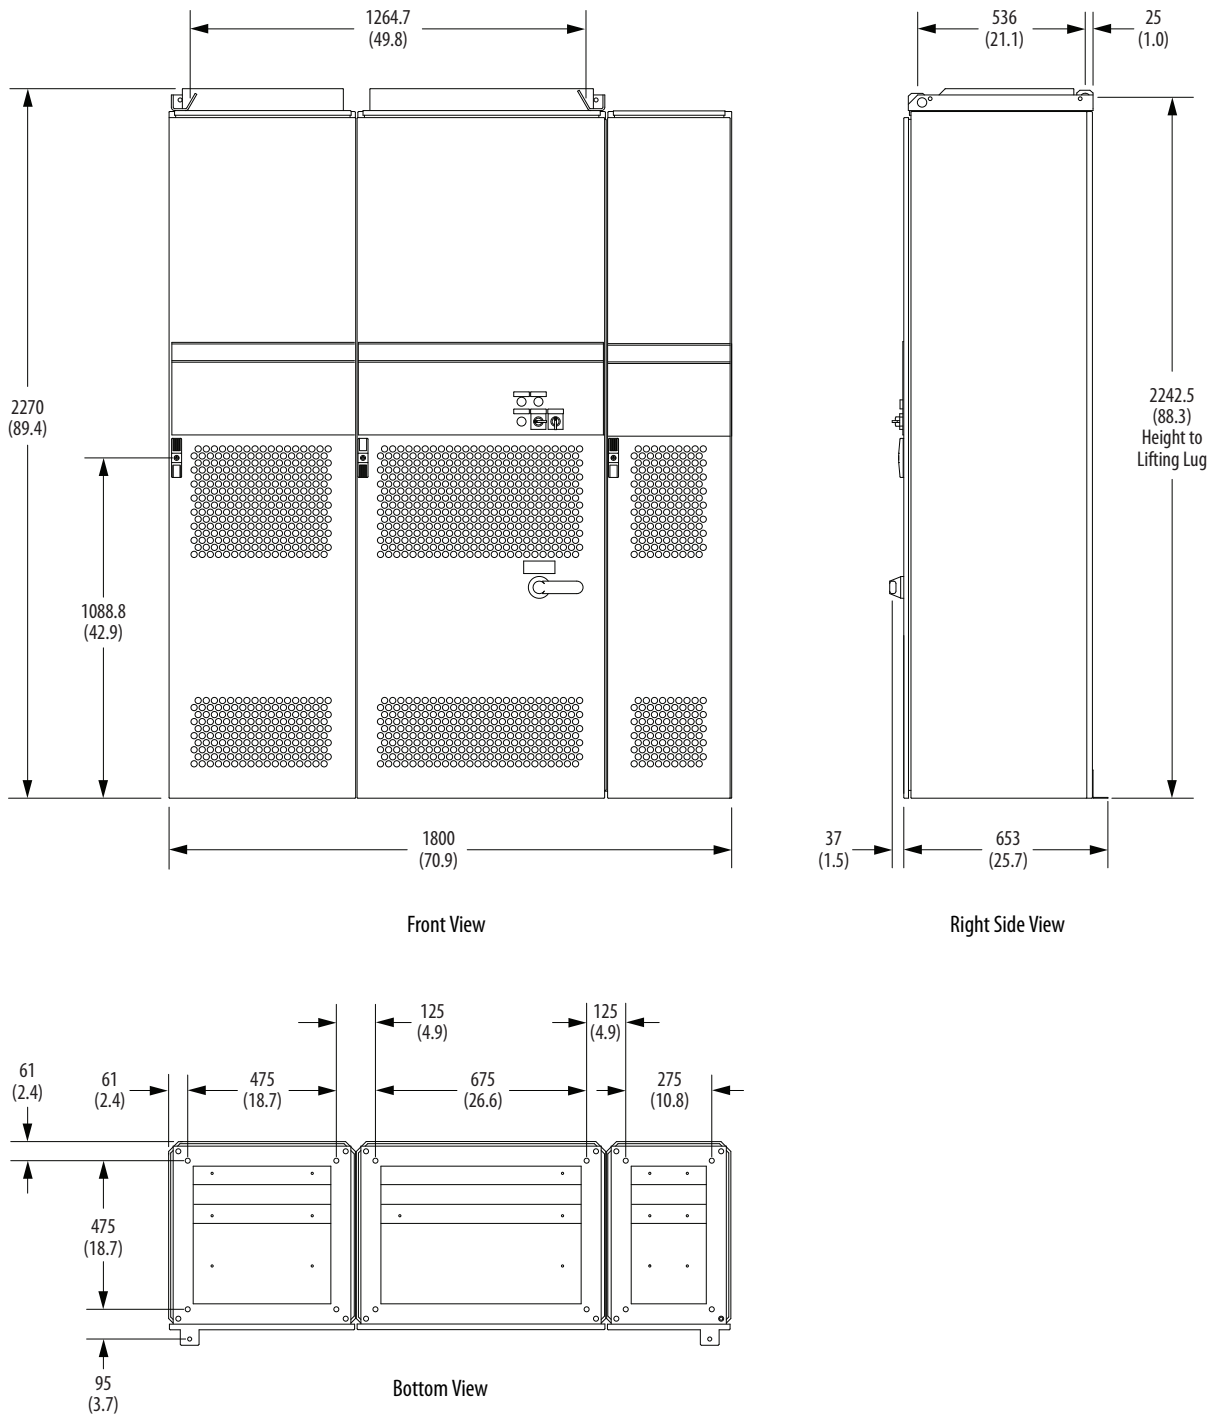

Overall Dimensions, mm (in.)			Weight, kg (lb)
Height	Width	Depth	
2270.5 (89.4)	1800 (70.9)	690 (27.2)	1280 (2821.9)

Figure 50 - AFE Frame 10 LCL Filter Dimensions


Dimensions are in millimeters and (inches).

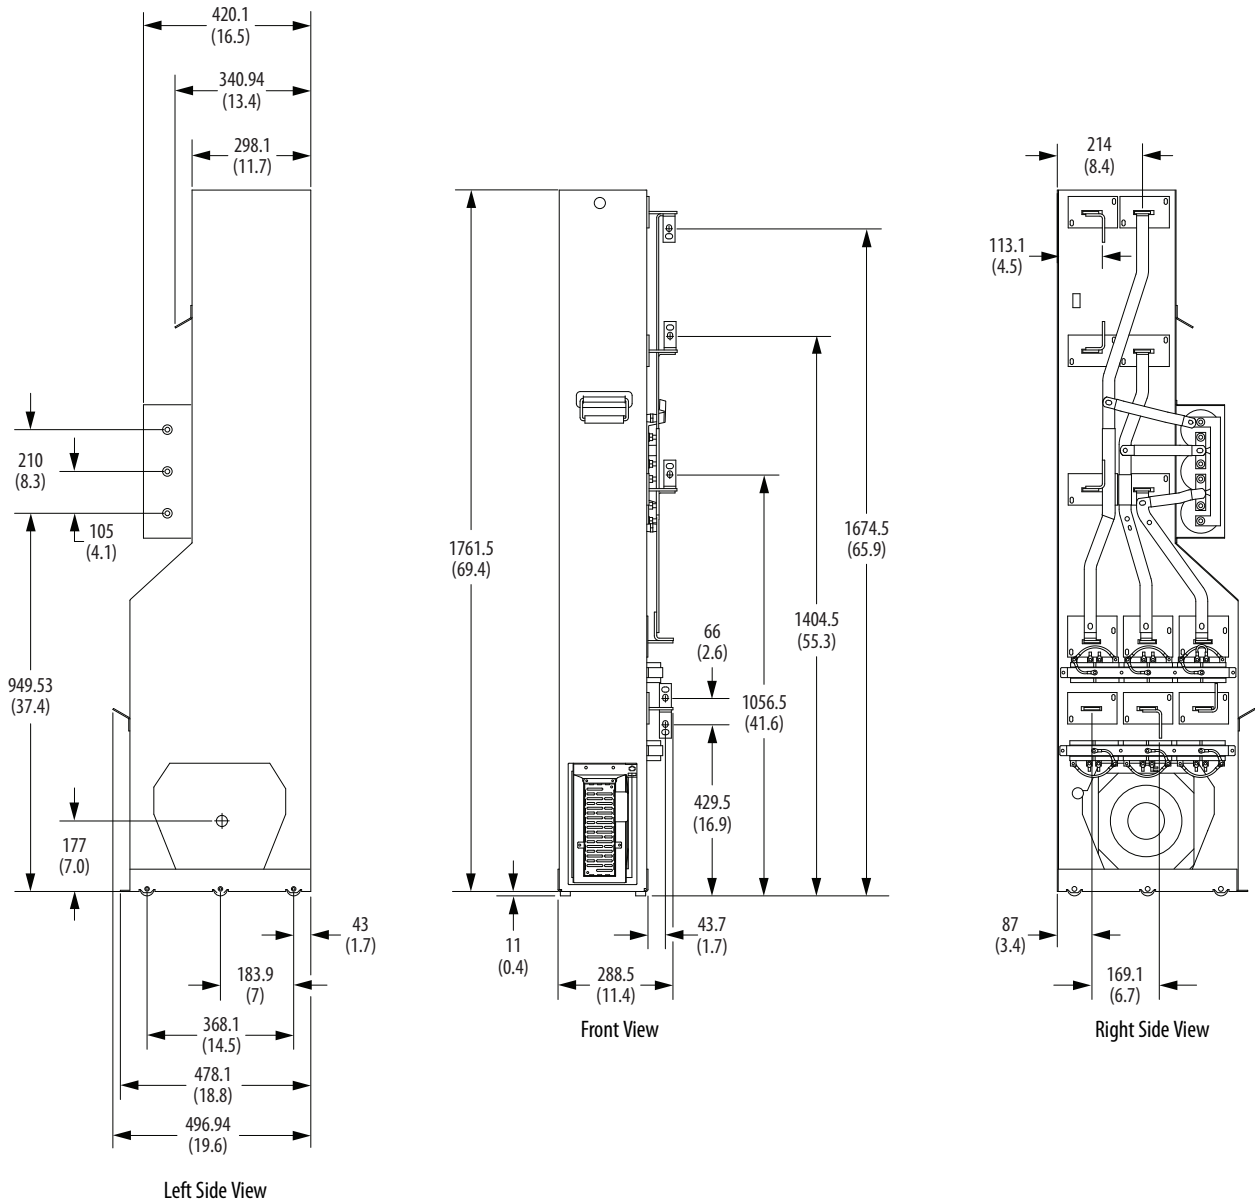

AFE Input Voltage	Overall Dimensions, mm (in.)			Weight, kg (lb)
	Height	Width	Depth	
400/480V	1761.5 (69.4)	288.5 (11.4)	496.9 (19.6)	263 (580)
600/690V				304 (670)

Figure 51 - AFE Frame 13 LCL Filter Dimensions


Dimensions are in millimeters and (inches).

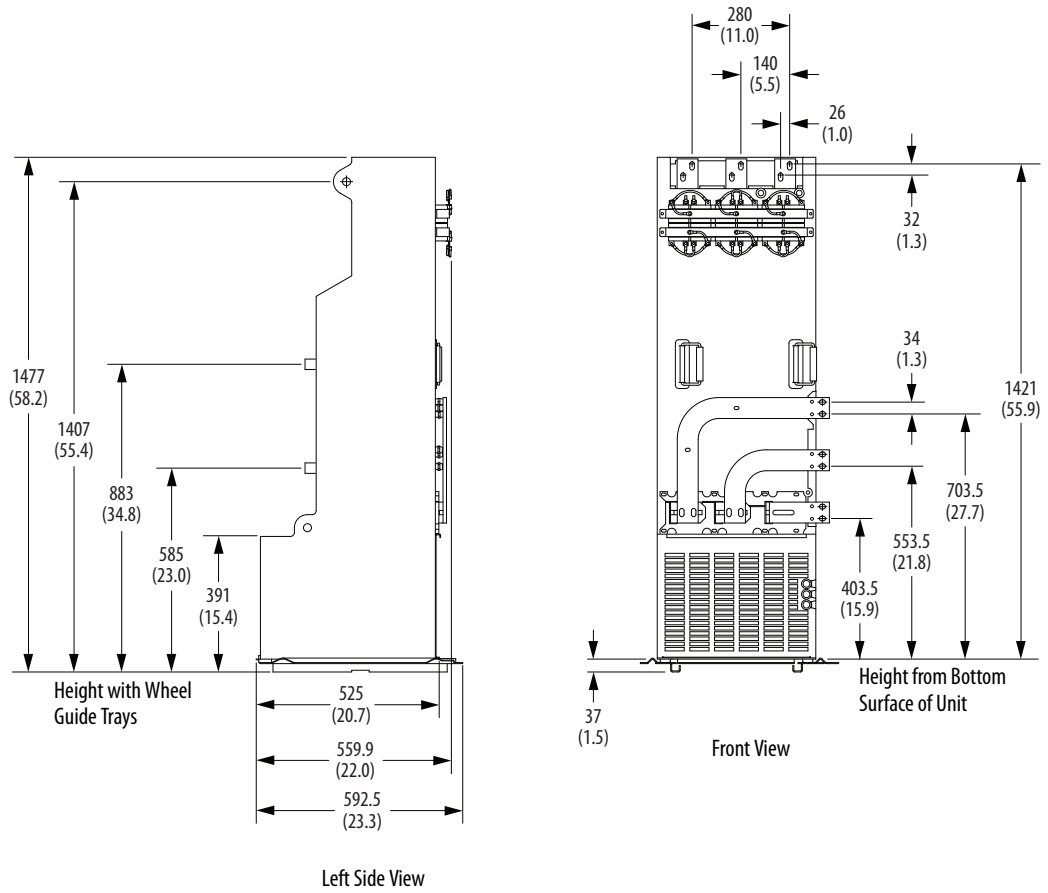

AFE Input Voltage	Overall Dimensions, mm (in.)			Weight, kg (lb)
	Height	Width	Depth	
400/480V	1442 (56.8)	494 (19.4)	525 (20.7)	477 (1052)
600/690V				473 (1043)

Figure 52 - AFE Frame 10 Power Structure Dimensions


Dimensions are in millimeters and (inches).

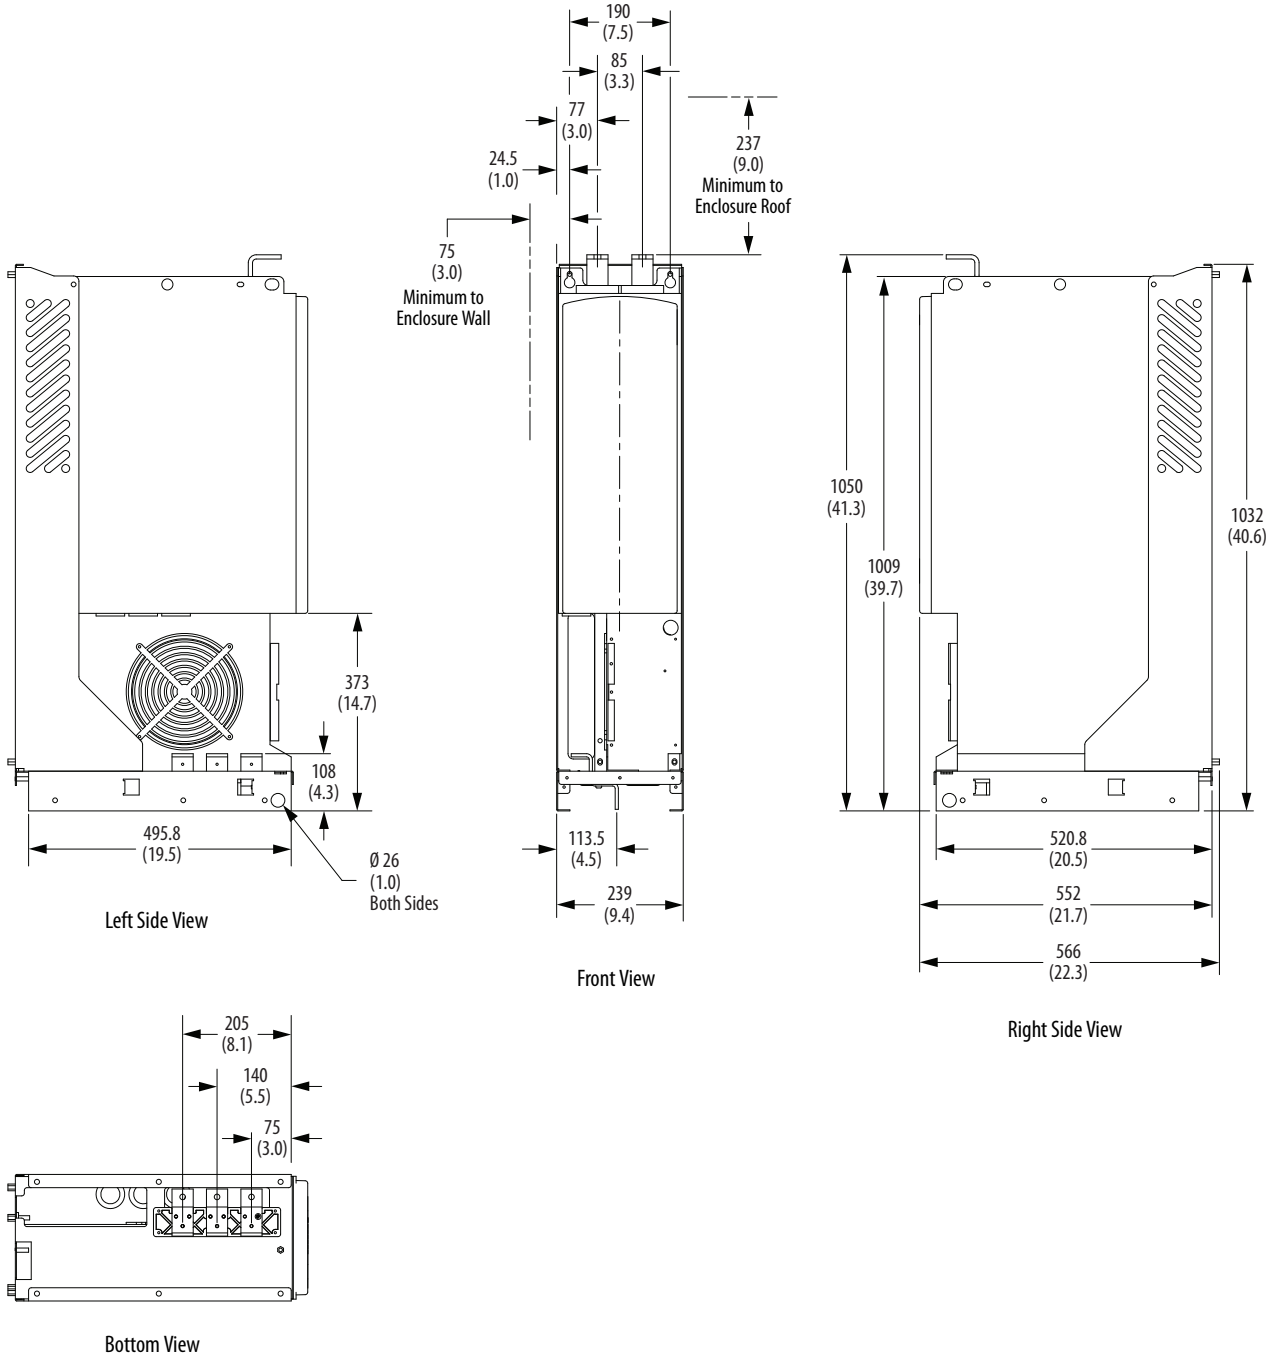

Overall Dimensions, mm (in.)			Weight, kg (lb)
Height	Width	Depth	
1050 (41.3)	239 (9.4)	556 (22.3)	100 (221)

Figure 53 - AFE Frame 13 Power Structure Dimensions


Dimensions are in millimeters and (inches).

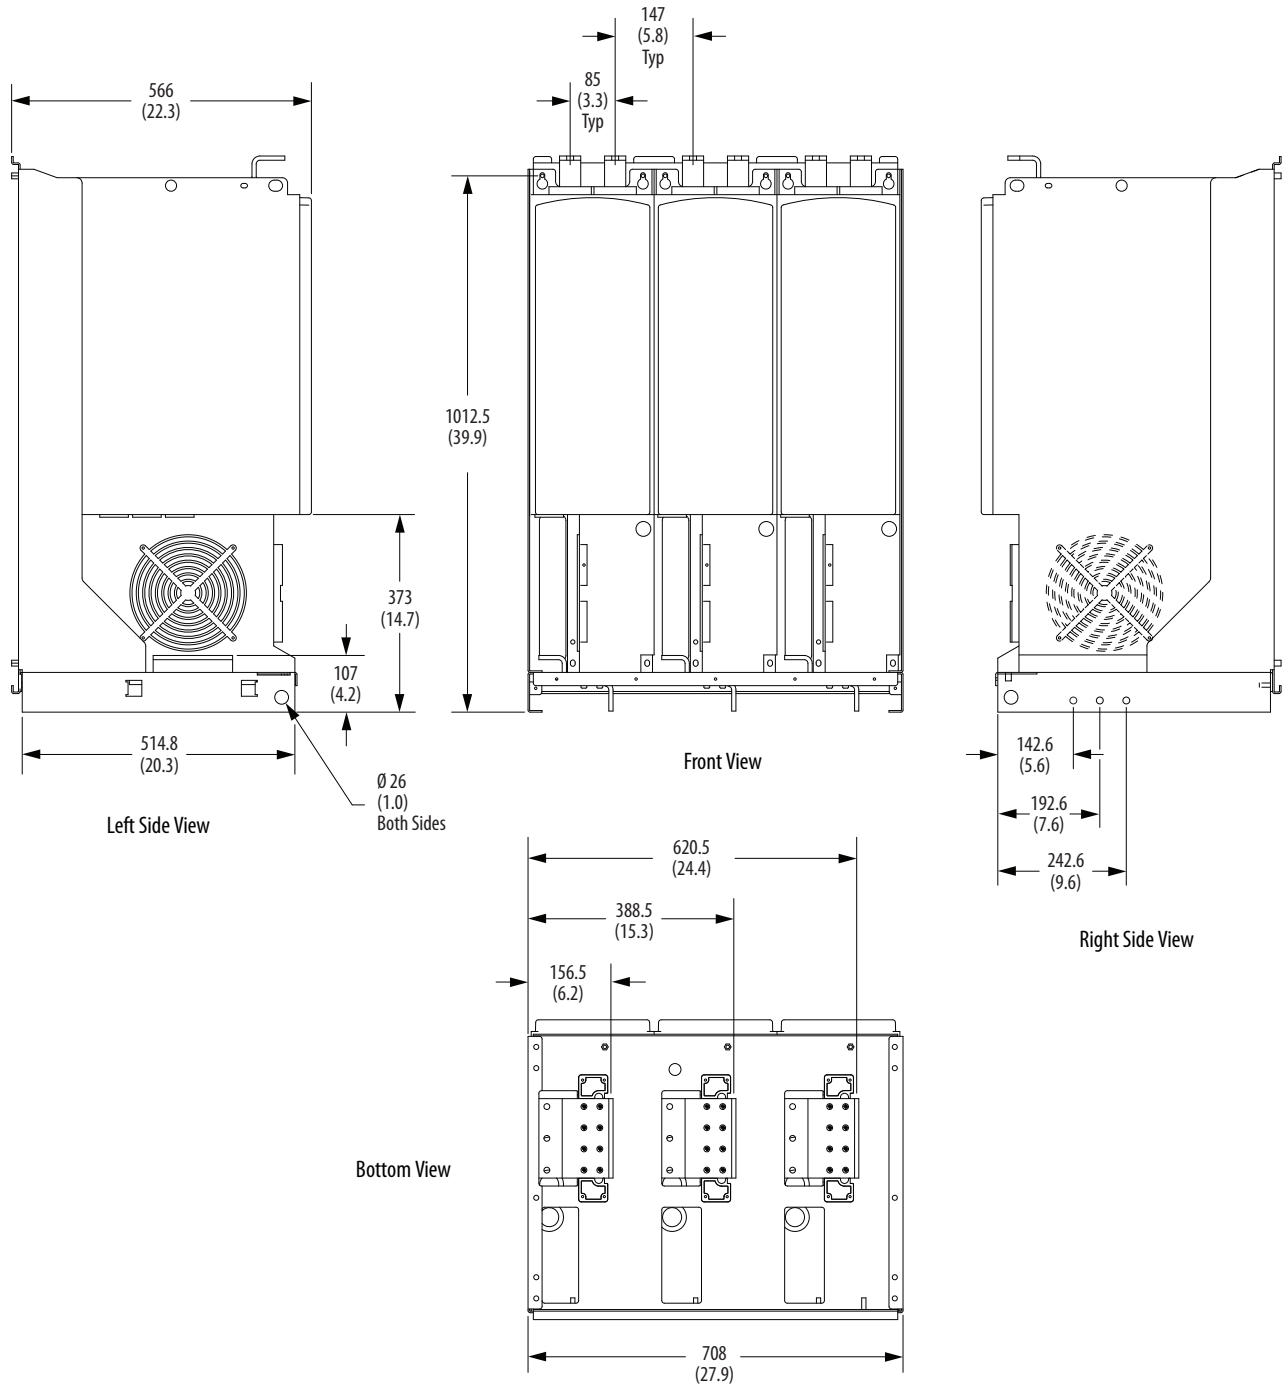

Overall Dimensions, mm (in.)			Weight, kg (lb)
Height	Width	Depth	
1032 (40.6)	708 (27.9)	553 (21.8)	306 (675)

Figure 54 - Control Box Dimensions (only for AFE in IP21 Rittal Enclosure)

Dimensions are in millimeters and (inches).

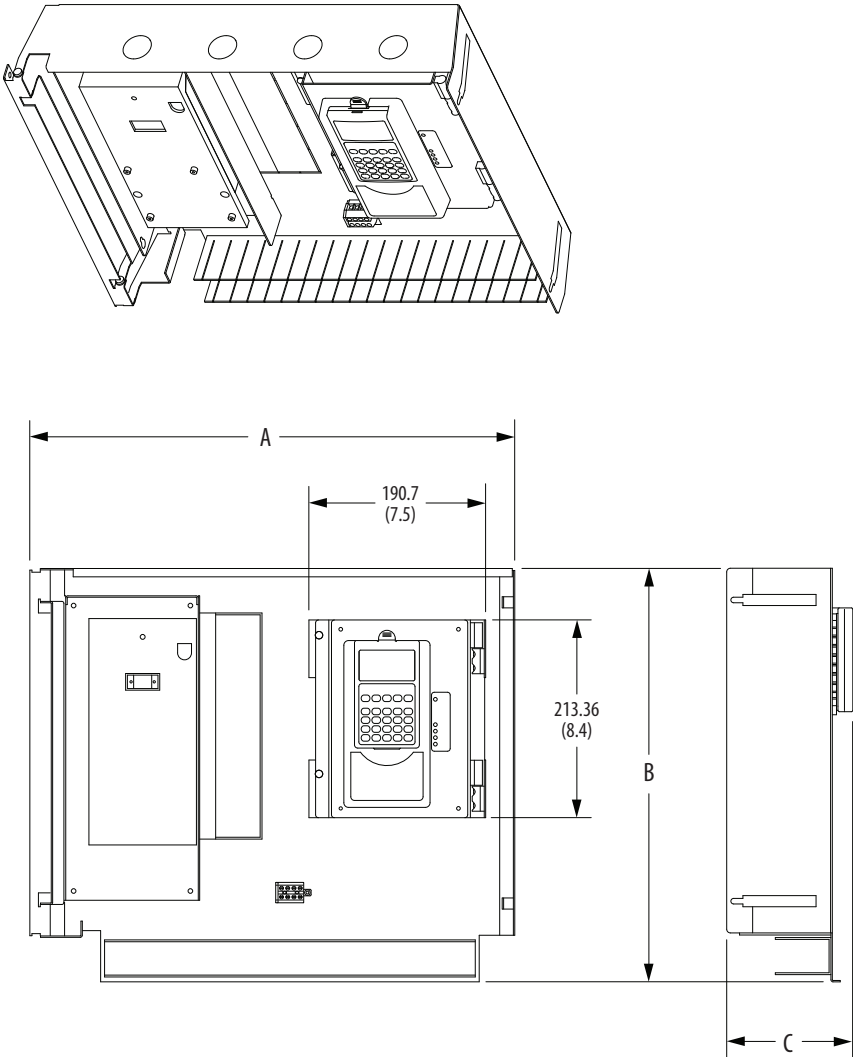

Frame Size	Overall Dimensions, mm (in.)		
	A	B	C
10	532.24 (20.6)	446 (17.6)	135.96 (5.4)
13	733.67 (28.9)	448 (17.6)	135.96 (5.4)

DPI Communication Configurations

This section contains information for how to use DPI™ communication with the PowerFlex Active Front End.

Typical Programmable Controller Configurations

IMPORTANT If programs are written that continuously write information to the AFE control, be sure to format the block transfer correctly. If attribute 10 is selected for the block transfer, values are written only to RAM and are not saved by the drive. Attribute 10 is the preferred attribute for continuous transfers.

If attribute 9 is selected, each program scan completes a write to the drives nonvolatile memory (EEPROM). Because the EEPROM accommodates only a fixed number of writes, excessive continuous block transfers can quickly damage the EEPROM. Therefore, do **not** assign attribute 9 to continuous block transfers. See the individual communication adapter user manual for details.

Logic Command Word for PowerFlex 700/700H/700S Drives

Logic Bits														Command	Description		
15	14	13	12	11	10	9	8	7	6	5	4	3	2			1	0
															x	Stop	0 = Not Stop 1 = Normal Stop
															x	Start ⁽¹⁾	0 = Not Start 1 = Start
														x		Reserved	
												x				Clear Fault ⁽²⁾	0 = Not Clear Fault 1 = Clear Fault
											x					Reserved	
										x						Reserved	
								x								Cmd LogicOut	0 = Network-controlled Digital Output off 1 = Network-controlled Digital Output on
							x									Reserved	
						x										Reserved	
					x											Reserved	
				x												Reserved	
		x														Reserved	
	x															Reserved	
x																Reserved	

(1) A Not Stop condition (logic bit 0 = 0, logic bit 8 = 0, and logic bit 9 = 0) must first be present before a 1 = Start condition starts the AFE.


(2) To perform this command, the value must switch from '0' to '1'.

Logic Status Word for PowerFlex 700/700H/700S Drives

Logic Bits																Status	Description																																							
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																									
															x	Ready	0 = Not ready 1 = Ready																																							
															x	Active	0 = Not active 1 = Active																																							
															x	Motoring	0 = Not motoring 1 = Motoring																																							
															x	Regenerating	0 = Not regenerating 1 = Regenerating																																							
															x	In Precharge	0 = Not in precharge 1 = In precharge																																							
															x	Droop Active	0 = Not droop active for AFE paralleling 1 = Droop active for AFE paralleling																																							
															x	Alarm	0 = No alarm 1 = Alarm																																							
															x	Faulted	0 = Not faulted 1 = Faulted																																							
															x	At Reference	0 = Not at reference 1 = At reference																																							
															x	Mot CurLim	0 = Not exceeding current limit in Motoring Mode 1 = Exceeding current limit in Motoring Mode																																							
															x	Regen CurLim	0 = Not exceeding current limit in Regenerative Mode 1 = Exceeding current limit in Regenerative Mode																																							
															x	Cmd Delayed	0 = Condition false 1 = Condition true																																							
															x	DCVoltRefID0	<table border="1"> <thead> <tr> <th colspan="3">Bits</th> <th rowspan="2">Description</th> </tr> <tr> <th>14</th> <th>13</th> <th>12</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>0</td> <td>= DC Volt Ref</td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> <td>= Analog In 1</td> </tr> <tr> <td>0</td> <td>1</td> <td>0</td> <td>= Analog In 2</td> </tr> <tr> <td>0</td> <td>1</td> <td>1</td> <td>= DPI Port 1</td> </tr> <tr> <td>1</td> <td>0</td> <td>0</td> <td>= DPI Port 2</td> </tr> <tr> <td>1</td> <td>0</td> <td>1</td> <td>= DPI Port 3</td> </tr> <tr> <td>1</td> <td>1</td> <td>0</td> <td>= DPI Port 4</td> </tr> <tr> <td>1</td> <td>1</td> <td>1</td> <td>= DPI Port 5</td> </tr> </tbody> </table>	Bits			Description	14	13	12	0	0	0	= DC Volt Ref	0	0	1	= Analog In 1	0	1	0	= Analog In 2	0	1	1	= DPI Port 1	1	0	0	= DPI Port 2	1	0	1	= DPI Port 3	1	1	0	= DPI Port 4	1	1	1	= DPI Port 5
Bits			Description																																																					
14	13	12																																																						
0	0	0	= DC Volt Ref																																																					
0	0	1	= Analog In 1																																																					
0	1	0	= Analog In 2																																																					
0	1	1	= DPI Port 1																																																					
1	0	0	= DPI Port 2																																																					
1	0	1	= DPI Port 3																																																					
1	1	0	= DPI Port 4																																																					
1	1	1	= DPI Port 5																																																					
															x	DCVoltRefID1																																								
															x	DCVoltRefID2																																								
															x	Reserved																																								

The AFE reference is the commanded bus voltage (for example, a value of 6000 represents 600.0V DC). The feedback value is the bus voltage measured in the AFE.

The AFE supports 16-bit and 32-bit datalinks, which can be selected on the Logix module definition screen (for details, see the communication adapter documentation). The example screen shows a 20-COMM-E EtherNet/IP adapter that uses a 32-bit parameter (Datalink A) on the input, and two 16-bit parameters on the output.

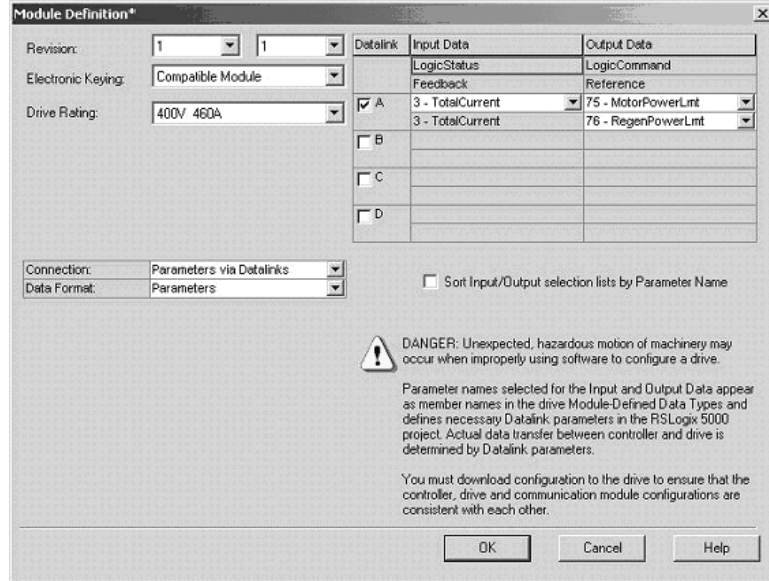

The data is used as shown in the table.

Logix to 20-COMM-x	
Word	Output I/O
1	Logic Command
2	Reference (bus voltage)
3	Datalink In A1
4	Datalink In A2
5	Datalink In B1
6	Datalink In B2
7	Datalink In C1
8	Datalink In C2
9	Datalink In D1
10	Datalink In D2

20-COMM-x to Logix	
Word	Input I/O
1	Logic Status
2	Feedback (bus voltage)
3	Datalink Out A1
4	Datalink Out A2
5	Datalink Out B1
6	Datalink Out B2
7	Datalink Out C1
8	Datalink Out C2
9	Datalink Out D1
10	Datalink Out D2

Logic Status Word for PowerFlex 750-Series Drives

Logic Bits																Command	Description																		
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0				
																																x	Run Ready	0 = Not ready to run 1 = Ready to run	
																																x	Active	0 = Not active 1 = Active	
																																x	Command Direction	0 = Reverse 1 = Forward	
																																x	Actual Direction	0 = Reverse 1 = Forward	
																																x	Accelerating	0 = Not accelerating 1 = Accelerating	
																																x	Decelerating	0 = Not decelerating 1 = Decelerating	
																																x	Alarm	0 = No alarm (Par. 959 and 960) 1 = Alarm	
																																x	Fault	0 = No fault (Par. 952 and 953) 1 = Fault	
																																x	At Setpt Spd	0 = Not at setpoint speed 1 = At setpoint speed	
																																x	Manual	0 = Manual mode not active 1 = Manual mode active	
																																x	Spd Ref ID 0	00000 = Reserved	
																																x	Spd Ref ID 1	00001 = Auto Ref A (Par. 545)	
																																x	Spd Ref ID 2	00010 = Auto Ref B (Par. 550)	
																																x	Spd Ref ID 3	00011 = Auto Preset Speed 3 (Par. 573)	
																																x	Spd Ref ID 4	00100 = Auto Preset Speed 4 (Par. 574) 00101 = Auto Preset Speed 5 (Par. 575) 00110 = Auto Preset Speed 6 (Par. 576) 00111 = Auto Preset Speed 7 (Par. 577) 01000 = Reserved 01001 = Reserved 01010 = Reserved 01011 = Reserved 01100 = Reserved 01101 = Reserved 01110 = Reserved 01111 = Reserved 10000 = Man Port 0 10001 = Man Port 1 10010 = Man Port 2 10011 = Man Port 3 10100 = Man Port 4 10101 = Man Port 5 10110 = Man Port 6 10111 = Reserved 11000 = Reserved 11001 = Reserved 11010 = Reserved 11011 = Reserved 11100 = Reserved 11101 = Man Port 13 (embedded EtherNet/IP) 11110 = Man Port 14 (DriveLogix™) 11111 = Alternate Man Ref Sel	
																																	x	Reserved	
																																	x	Running	0 = Not running 1 = Running
																																	x	Jogging	0 = Not jogging (Par. 556 and 557) 1 = Jogging
																																	x	Stopping	0 = Not stopping 1 = Stopping
																																	x	DC Brake	0 = Not DC brake 1 = DC Brake
																																	x	DB Active	0 = Not dynamic brake active 1 = Dynamic brake active
																																	x	Speed Mode	0 = Not Speed Mode (Par. 309) 1 = Speed Mode
																																	x	Position Mode	0 = Not Position Mode (Par. 309) 1 = Position Mode
																																	x	Torque Mode	0 = Not Torque Mode (Par. 309) 1 = Torque Mode
																																	x	At Zero Speed	0 = Not at zero speed 1 = At zero speed
																																	x	At Home	0 = Not at home 1 = At home
																																	x	At Limit	0 = Not at limit 1 = At limit
																																	x	Current Limit	0 = Not at current limit 1 = At current limit
																																	x	Bus Freq Reg	0 = Not Bus Freq Reg 1 = Bus Freq Reg

Logic Bits																															Command	Description				
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1			0			
		x																																	Enable On	0 = Not enable on 1 = Enable on
		x																																	Motor Overload	0 = Not motor overload 1 = Motor overload
		x																																	Regen	0 = Not regen 1 = Regen


Notes:

HIM Overview

Topic	Page
External and Internal Connections	159
LCD Display Elements	160
ALT Functions	160
Menu Structure	161
View and Edit Parameters	163
Remove/Install the HIM	163

External and Internal Connections


The PowerFlex® Active Front End provides a number of cable connection points.

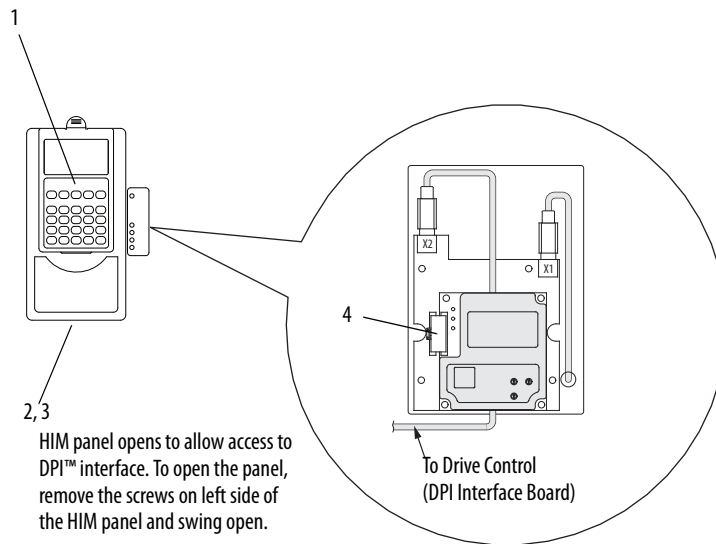

No.	Connector ⁽¹⁾	Description
1	DPI port 1	HIM connection when installed in AFE.
2	DPI port 2	Cable connection for handheld and remote options.
3	DPI port 3 or 2	Splitter cable that is connected to DPI Port 2, which provides an additional port.
4	DPI port 5	Cable connection for communications adapter.

(1) There is no port 4 on PowerFlex 7-Class products. Port 4 only exists on legacy SCANport™ products.



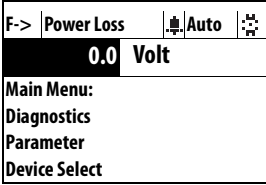




LCD Display Elements

Display	Description
	Direction Drive Status Alarm Auto/Man Information Commanded or Output Volts Programming / Monitoring / Troubleshooting

ALT Functions


To use an ALT function, press the ALT key and release it, and then press the programming key that is associated with the desired function that is listed in the following table.

Table 25 - ALT Key Functions

ALT Key plus...		Function
	 View	Selects how parameters are viewed or shows detailed information about a parameter or component.
	 Lang	Displays the language selection screen.
	 Auto/Man	Switches between Auto and Manual Modes.
	 Remove	Lets the HIM be removed without causing a fault if the HIM is not the last controlling device and does not have manual control of the AFE.
	 Exp	Lets the value to be entered as an exponent.
	 Param #	Enters a parameter number for viewing or editing.

Menu Structure

Figure 55 - HIM Menu Structure

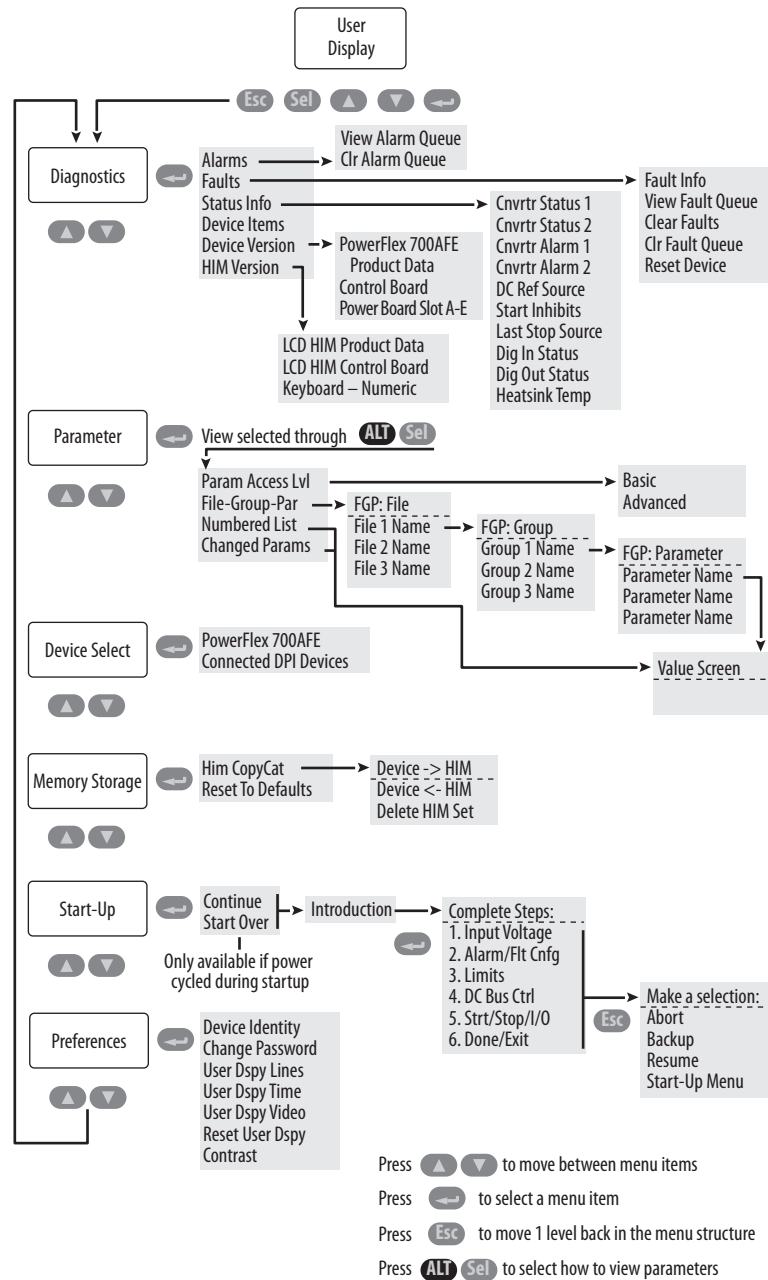

Diagnostics Menu

When a fault trips the Active Front End, use this menu to access detailed data about the AFE.

Option	Description
Faults	View fault queue or fault information, clear faults, or reset the AFE.
Status Info	View parameters that display status information about the AFE.
Device Version	View the firmware revision and hardware series of components.
HIM Version	View the firmware revision and hardware series of the HIM.

Parameter Menu

See [View and Edit Parameters on page 163](#).

Device Select Menu

Use this menu to access parameters in connected peripheral devices.

Memory Storage Menu

AFE data can be saved to, or recalled from, HIM sets. HIM sets are files that are stored in permanent nonvolatile HIM memory.

Option	Description
HIM Copycat: Device -> HIM Device <- HIM	Save data to a HIM set, load data from a HIM set to active AFE memory, or delete a HIM set.
Reset To Defaults	Restore the AFE to its default configuration settings.

Start-up Menu

See [Chapter 3](#).

Preferences Menu





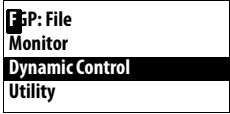




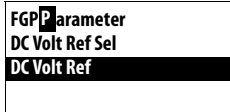
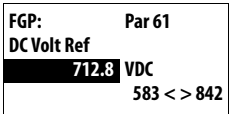

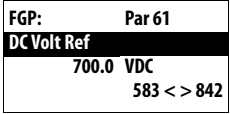








The HIM and AFE have features that you can customize.

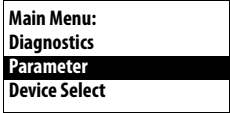Option	Description
AFE Identity	Add text to identify the AFE.
Change Password	Enable/disable or modify the password.
User Dspy Lines	Select the display, parameter, scale, and text for the user display. The user display is two lines of user-defined data that appears when the HIM is not being used for programming.
User Dspy Time	Set the wait time for the user display or enable/disable it.
User Dspy Video	Select reverse or normal video for the frequency and user display lines.
Reset User Dspy	Return all options for the user display to default configuration values.

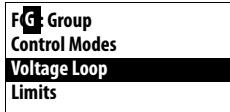

The AFE is initially set to Basic Parameter View. To view all parameters, set parameter 196 [ParamAccessLvl] to option '1' (Advanced). The Reset to Defaults function does not affect Parameter 196.

View and Edit Parameters

HIM




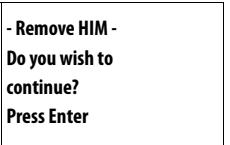
Step	Example Screen
<p>1. In the Main Menu, press the  or  key to scroll to Parameter.</p>	
<p>2. Press the  (Enter) key. FGP File appears on the top line and the first three files appear below it.</p>	
<p>3. To scroll through the files, press the  or  key.</p>	
<p>4. To select a file, press the  (Enter) key. The groups in the file are displayed under it.</p>	
<p>5. Repeat step 3 and step 4 to select a group and then a parameter. The parameter value screen appears.</p>	
<p>6. To edit the parameter, press the  (Enter) key.</p>	
<p>7. To change the value, press the  or  key. If desired, press the  key to move from digit to digit, letter to letter, or bit to bit. The digit or bit that can be changed is highlighted.</p>	
<p>8. To save the value, press the  (Enter) key. To cancel a change, press the  key to escape.</p>	
<p>9. To scroll through the parameters in the group, press the  or  key, or press the  key to return to the group list.</p>	

Numeric Keypad Shortcut

When using a HIM with a numeric keypad, press the  key and  key to access the parameter by typing its number.

Remove/Install the HIM

The HIM can be removed or installed while the AFE is powered.

Step	Example Displays
<p>To remove the HIM, do the following.</p> <ol style="list-style-type: none"> Press the  key and then the  (Enter) key. The Remove HIM configuration screen appears. To confirm that you want to remove the HIM, press the  (Enter) key. Remove the HIM from the AFE. <p>To install the HIM, insert it into the AFE or connect its cable to the AFE.</p>	

Notes:

Application Notes

Topic	Page
Sizing Guidelines	165
Voltage Boost	167
Paralleling AFEs	168

Sizing Guidelines

Use the following guidelines to size the AFE.

Basic Procedure to Size the AFE

- Sum the DC Input current rating of the connected drives.
See the respective drive documentation specifications, or Drives in Common Bus Configurations, publication [DRIVES-AT002](#).
- Multiply the total DC current by 0.9.
This step compensates for the boosted DC bus voltage that is provided by the AFE.
- Select the AFE with the DC current rating that meets or exceeds the value calculated in [step 2](#).

Examples:

Normal-duty (ND), 110%, 1 minute

DC Input Rating of Connected Drives				AFE	
DC Voltage	ND Power	ND Currents	ND Current Sum x 0.9	ND Cont. DC Output Amps	AC Input Voltage
650V	5 x 60 Hp 1 x 30 Hp	5 x 84.5 = 422.5 A 1 x 85.8 A	457.5 A	520 A	480V

Heavy-duty (HD), 150%, 1 minute

DC Input Rating of Connected Drives				AFE	
DC Voltage	HD Power	HD Currents	HD Current Sum x 0.9	HD Cont. DC Output Amps	AC Input Voltage
650V	5 x 60 Hp 1 x 30 Hp	5 x 84.5 = 422.5 A 1 x 55.7 = 55.7 A	430.4 A	435 A	480V

Advanced Procedure to Size the AFE

1. Convert all motor powers to kW ($kW = Hp \times 0.746$).
2. Determine the total power and input current required during acceleration.⁽¹⁾

For Motoring Loads: $P_{Drive} = P_{Motor} / \text{Motor Efficiency}$

For Regenerating Loads: $P_{Drive} = P_{Motor} * \text{Motor Efficiency}$

$$P_{Accel} = P_{Drive1} + P_{Drive2} + \dots$$

Calculate the input current required on the regenerative unit during acceleration, taking advantage of the 110% for 1 minute overload rating of the regenerative unit.

$$I_{Input} = P_{Accel} \times 1000 / (\sqrt{3} \times V_{LL} \times 1.1),$$

where P_{Accel} is in kW, and V_{LL} = RMS line-to-line AC input voltage.

3. Determine the total power and input current required during steady-state run operation.⁽¹⁾

For Motoring Loads: $P_{Drive} = P_{Motor} / \text{Motor Efficiency}$

For Regenerating Loads: $P_{Drive} = P_{Motor} * \text{Motor Efficiency}$

$$P_{Run} = P_{Drive1} + P_{Drive2} + \dots$$

Calculate the steady-state input current required on the regenerative unit.

$$I_{Input} = P_{Run} \times 1000 / (\sqrt{3} \times V_{LL}),$$

where P_{Run} is in kW, and V_{LL} = RMS line-to-line AC input voltage.

4. Determine the total power and input current required during deceleration.⁽¹⁾

For Motoring Loads: $P_{Drive} = P_{Motor} / \text{Motor Efficiency}$

For Regenerating Loads: $P_{Drive} = P_{Motor} * \text{Motor Efficiency}$

$$P_{Decel} = P_{Drive1} + P_{Drive2} + \dots$$

Calculate the input current required on the regenerative unit during deceleration, taking advantage of the 110% for 1 minute overload rating of the regenerative unit.

$$I_{Input} = P_{Decel} \times 1000 / (\sqrt{3} \times V_{LL} \times 1.1),$$

where P_{Decel} is in kW, and V_{LL} = RMS line-to-line AC input voltage.

5. Compare the absolute values of the input current required for the regenerative unit during acceleration, deceleration, and steady state.
6. Select the regenerative unit with the input current rating that meets or exceeds the worst case input current.

(1) P_{Motor} is the motor power required for the application. The P_{Motor} could be positive if that section of the machine is motoring, or negative if that section of the machine is regenerating.

Voltage Boost



ATTENTION: The AFE can be used for voltage boost but cannot be used to lower the DC bus voltage. The minimum DC bus voltage is limited by the rectified diode bridge voltage.

AFE parameter 61 [DC Volt Ref] can be adjusted to boost the DC voltage.

The maximum value of parameter 61 [DC Volt Ref] is:

$$[\text{Rated Volts}] \times 1.35 \times 1.3 \text{ for } 400/480\text{V units}$$

$$[\text{Rated Volts}] \times 1.35 \times 1.15 \text{ for } 600/690\text{V units,}$$

where [Rated Volts] is the AC input voltage for the AFE.

The maximum AC output to the motor = [DC Volt Ref] / ($\sqrt{2} \times 1.1$)

Example:

$$\text{AC line voltage} = 400\text{V AC}$$

$$\text{Motor} = 460\text{V AC}$$

$$\text{Max [DC Volt Ref]} = 400 \times 1.35 \times 1.3 = 702\text{V DC}$$

$$\text{Maximum AC output to motor} = 702\text{V DC} / (\sqrt{2} \times 1.1) = 451\text{V AC}$$

In addition, the AC input current required by the AFE increases when using voltage boost. The continuous and overload AC input current ratings must not be exceeded, or the AFE trips on overload. See the [Advanced Procedure to Size the AFE on page 166](#) for sizing guidelines.

Paralleling AFEs

The power of the AFE input group can be increased by connecting several groups in parallel. Paralleling refers to AFE units connected on the same input transformer and the same DC bus. No communication between the units is required—they work independently.

Paralleling is typically used when the power range of one frame size is not enough, or when redundancy is needed. For additional information, see Drives in Common Bus Configurations, publication [DRIVES-AT002](#).

Guidelines for AFEs in IP20 2500 MCC Style Enclosure

Follow these guidelines for paralleling AFEs in IP20 2500 MCC Style enclosures:

- For AFEs in IP20 2500 MCC Style enclosures, a maximum of two AFEs of the same power size (for example, two Frame 10 AFEs) and same voltage class can be paralleled.
- Each AFE must have its own LCL filter.
- Each AFE must have its own short circuit protection on AC and DC sides. See [Appendix A](#) for fusing information. When paralleling, you must check the sufficient short circuit capacity of the system.
- Derate the AFE units by 5% of their power rating.
- Configure the following parameters for parallel operation:
 - Set Parameter 42 - [Modulation Type] to '3'.
 - Set Parameter 82 - [Ground I Lvl] to 100%.
 - Set Parameter 85 - [Droop] to 5% for current sharing of the AFEs.
 - Set Parameter 86 - [PWM Synch] to '1' to reduce circulating currents between AFEs connected to the same DC bus and fed from the same power source.
- If one of the paralleled AFEs is isolated from the AC and DC voltages, you must isolate the AC input and DC output. The AC input can be isolated with a circuit breaker or a disconnect switch. Contactors are not suitable for isolating the AC input because they cannot be locked in the safe position. The DC output can be isolated with a disconnect. A load isolation switch or safety isolation switch can be used to isolate the precharging circuit from the AC input.
- Each AFE must use a separate precharging circuit, precharging control switch, DC bus output fusing, and main contactor.

Each AFE controls its own precharging and main contactor. Therefore, it is possible to disconnect the AFE when other parallel AFEs are powered up but not modulating.

- The fault relay of both AFEs must be interlocked with each other, such that both AFEs are disabled (not running) when either AFE is faulted.
- An AFE can be connected while other parallel AFE units are running. When connecting the AFE to the DC bus, follow these steps in the order shown.
 - a. Precharged the isolated AFE.
When completed, the AFE control closes the contactor.
 - b. To connect the AFE to the DC bus, close the DC disconnect.

When disconnecting the AFE from the DC bus, follow these steps in the order shown.

- a. Stop the inverters and AFEs connected to the same DC bus from modulating.
The AFE load must be zero before being disconnected to reduce the load on the contactor.
 - b. Open the contactor of the AFE.
 - c. Open the DC disconnect switch.
 - d. Restart the other AFE units.
- When AFEs are paralleled, the DC bus voltage at regeneration is 5% higher than with one AFE due to the 5% droop. See Drives in Common Bus Configurations, publication DRIVES-AT002, for supported drives that can be used in various AFE configurations.
 - [Figure 56 on page 170](#) shows an example of paralleling two AFEs in their IP20 2500 MCC Style enclosures, where each AFE has its own precharging circuit, precharging control, and fusing on the DC bus output and main contactor.

In this case, turn the disconnects (Q0) of all AFEs to ON, and set all REM-AUTO-MAN selector switches on the door to AUTO to enable automatic operation.

When turning on the main power, the two AFEs precharge automatically. After charging, the contactors (K1) are closed and the AFEs start the modulation. The control signal 'Inverter Enable' shown in [Figure 23 on page 45](#) can be used to interlock the drives connected to the DC bus.

Figure 56 - Connecting Parallel Frame 10 AFEs in IP20 2500 MCC Style Enclosures


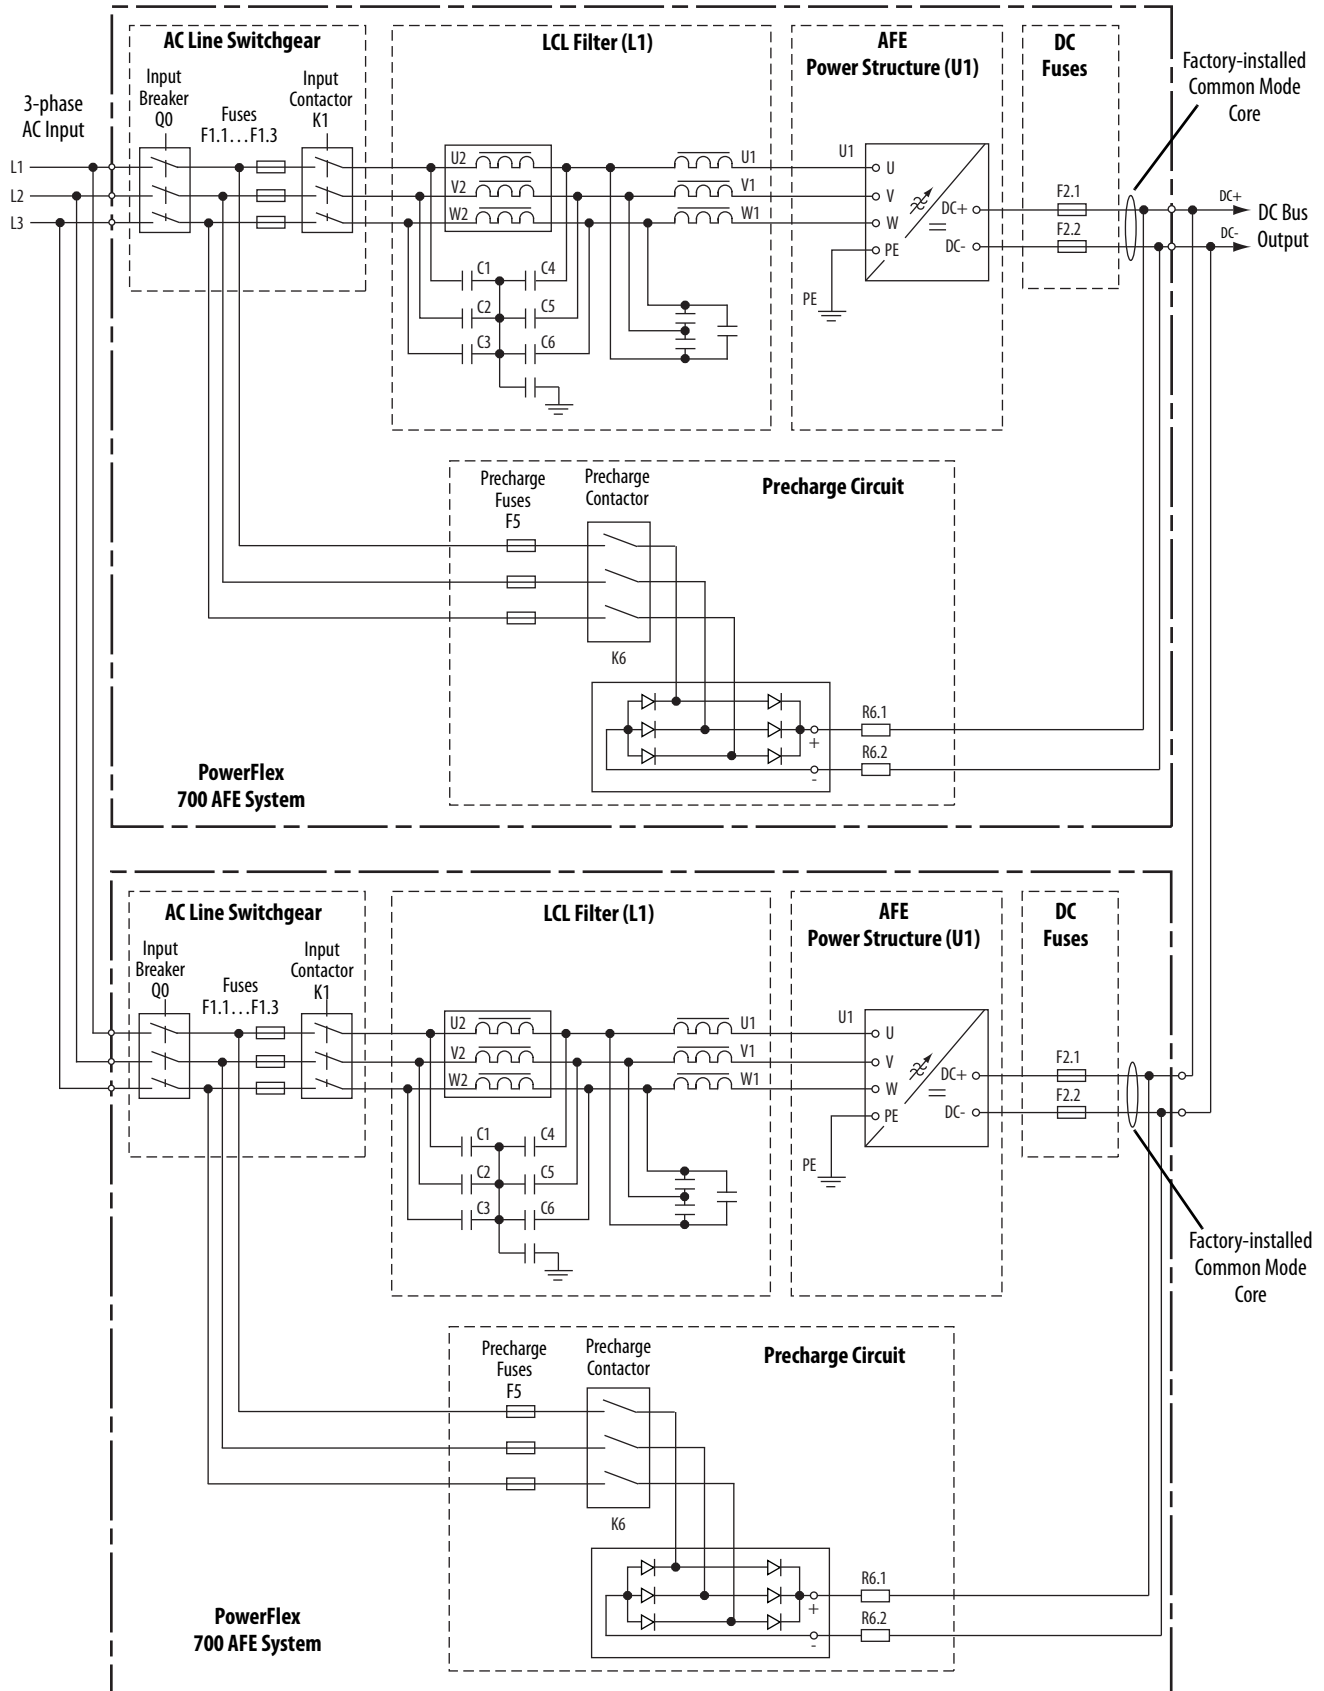


Figure 57 - Connecting Parallel Frame 13 AFEs in IP20 2500 MCC Style Enclosures

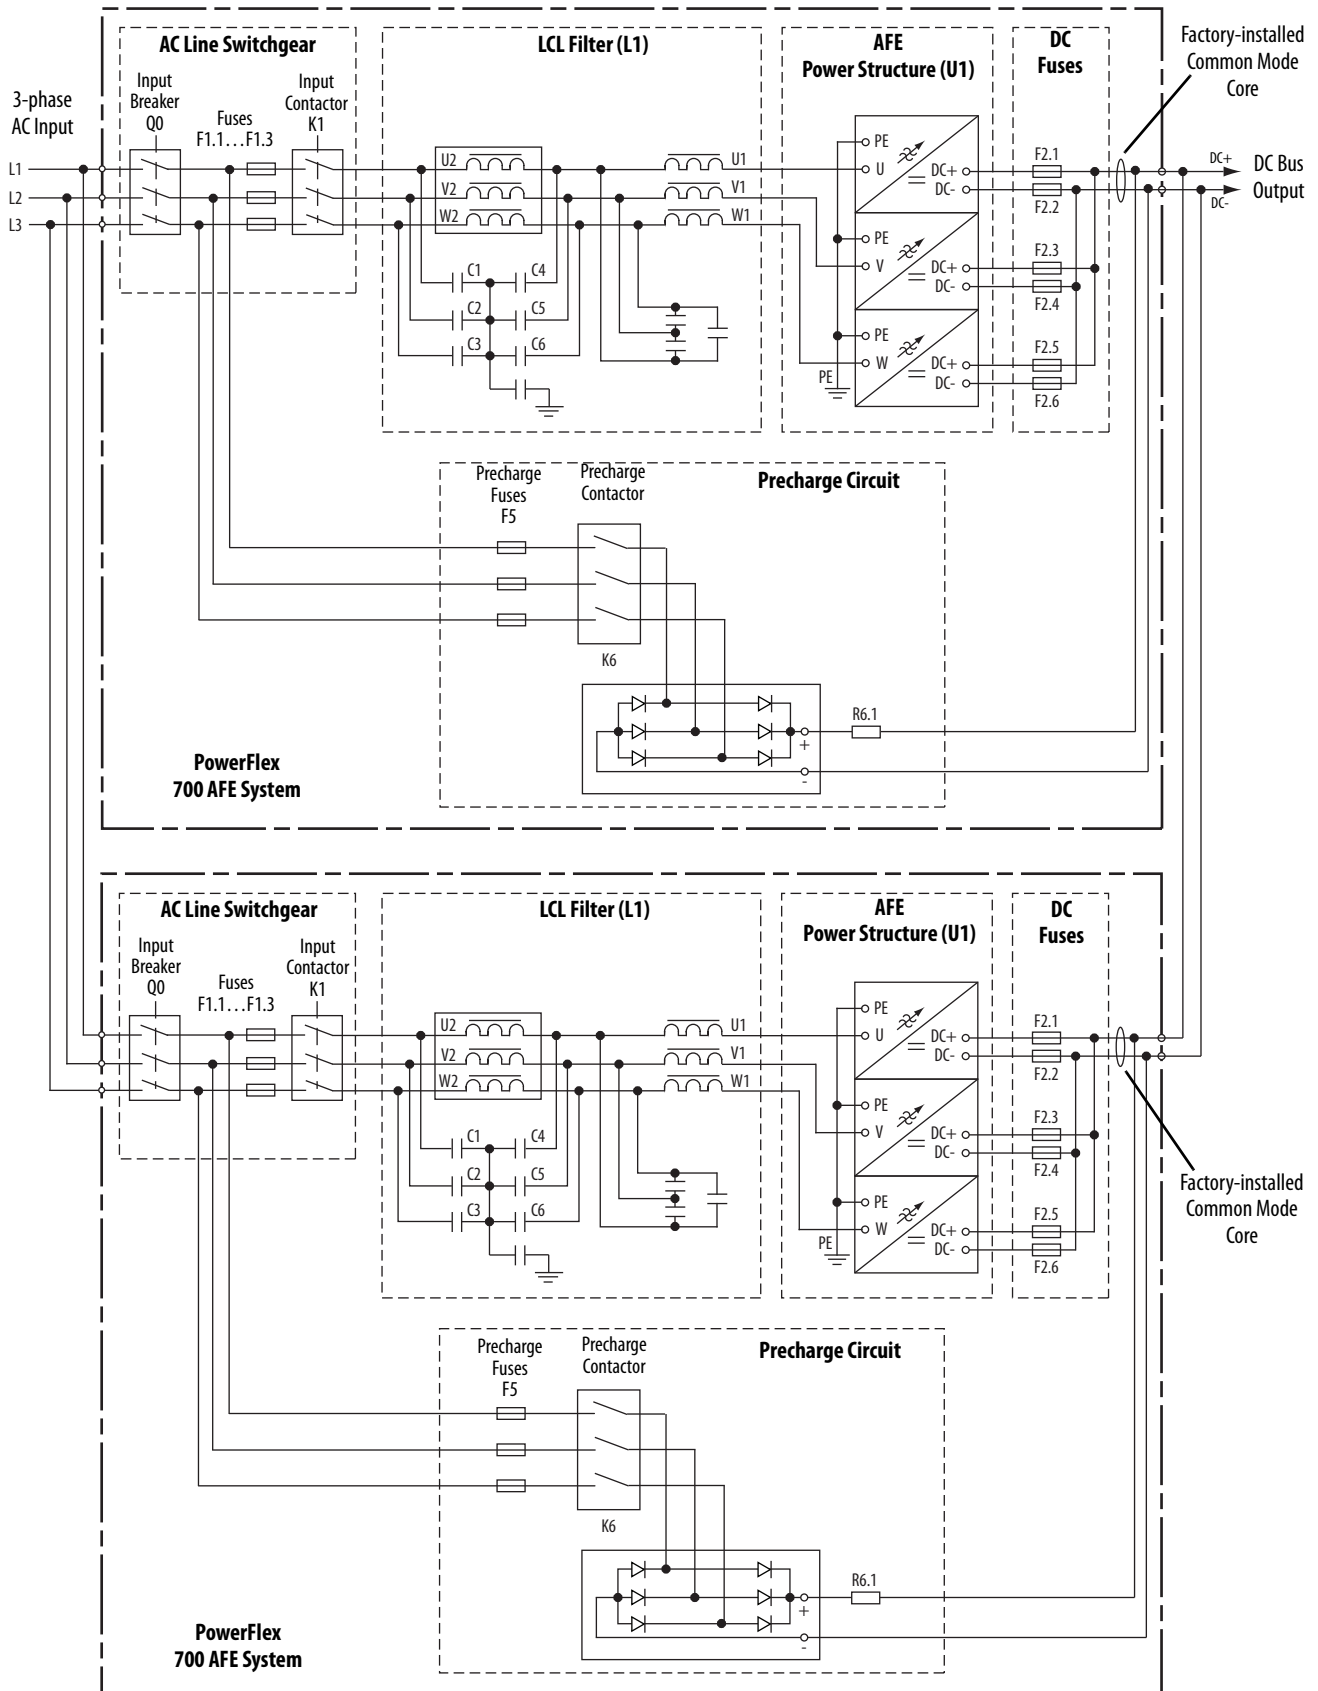

Guidelines for AFEs in IP21 Rittal Enclosure

Follow these guidelines for paralleling AFEs in IP21 Rittal enclosures:

- AFE units of different power sizes can be connected in parallel.
- For AFEs in IP21 Rittal enclosures, a maximum of six AFEs can be paralleled. However, the capacity of the DC bus bar can limit the number of AFEs.
- Each AFE must have its own LCL filter.
- Each AFE must have its own short circuit protection on AC and DC sides. See [Appendix A](#) for fusing information. When paralleling, you must check the sufficient short circuit capacity of the system.
- Derate the AFE units by 5% of their power rating.
- Configure the following parameters for parallel operation:
 - Set Parameter 42 - [Modulation Type] to '3'.
 - Set Parameter 82 - [Ground I Lvl] to 100%.
 - Set Parameter 85 - [Droop] to 5% for current sharing of the AFEs.
 - Set Parameter 86 - [PWM Synch] to '1' to reduce circulating currents between AFEs connected to the same DC bus and fed from the same power source.
- If one of the paralleled AFEs is isolated from the AC and DC voltages, you must isolate the AC input and DC output. The AC input can be isolated with a circuit breaker or a disconnect switch. Contactors are not suitable for isolating the AC input because they cannot be locked in the safe position. The DC output can be isolated with a disconnect. A load isolation switch or safety isolation switch can be used to isolate the precharging circuit from the AC input.
- Each AFE must use a separate precharging circuit, precharging control switch, DC bus output fusing, and main contactor.

Each AFE controls its own precharging and main contactor. Therefore, it is possible to disconnect the AFE when other parallel AFEs are powered up but not modulating.

- The fault relay of both AFEs must be interlocked with each other, such that both AFEs are disabled (not running) when either AFE is faulted.
- An AFE can be connected while other parallel AFE units are running. When connecting the AFE to the DC bus, follow these steps in the order shown.
 - a. Precharged the isolated AFE.

When completed, the AFE control closes the MCCB.

- b. To connect the AFE to the DC bus, close the DC disconnect.

When disconnecting the AFE from the DC bus, follow these steps in the order shown.

- a. Stop the inverters and AFEs connected to the same DC bus from modulating.

The AFE load must be zero before being disconnected to reduce the load on the MCCB.

- b. Open the MCCB of the AFE.
 - c. Open the DC disconnect switch.
 - d. Restart the other AFE units.
- When AFEs are paralleled, the DC bus voltage at regeneration is 5% higher than with one AFE due to the 5% droop. See Drives in Common Bus Configurations, publication [DRIVES-AT002](#), for supported drives that can be used in the various AFE configurations.
 - [Figure 58 on page 174](#) shows an example of paralleling two AFEs in their IP21 Rittal enclosures, where each AFE has its own precharging circuit, precharging control, and fusing on the DC bus output and input contactor.

In this case, turn the disconnects (Q0) of all AFEs to ON, and set all MCCB CONTROL selector switches on the door to AUTO to enable automatic operation.

When turning on the main power, the two AFEs precharge automatically. After charging, the MCCB motor-controlled circuit breakers (Q1) are closed and the AFEs start the modulation. The control signal 'Inverter Enable' shown in [Figure 40 on page 79](#) can be used to interlock the drives connected to the DC bus.

Figure 58 - Connecting Parallel Frame 10 AFEs in IP21 Rittal Enclosure


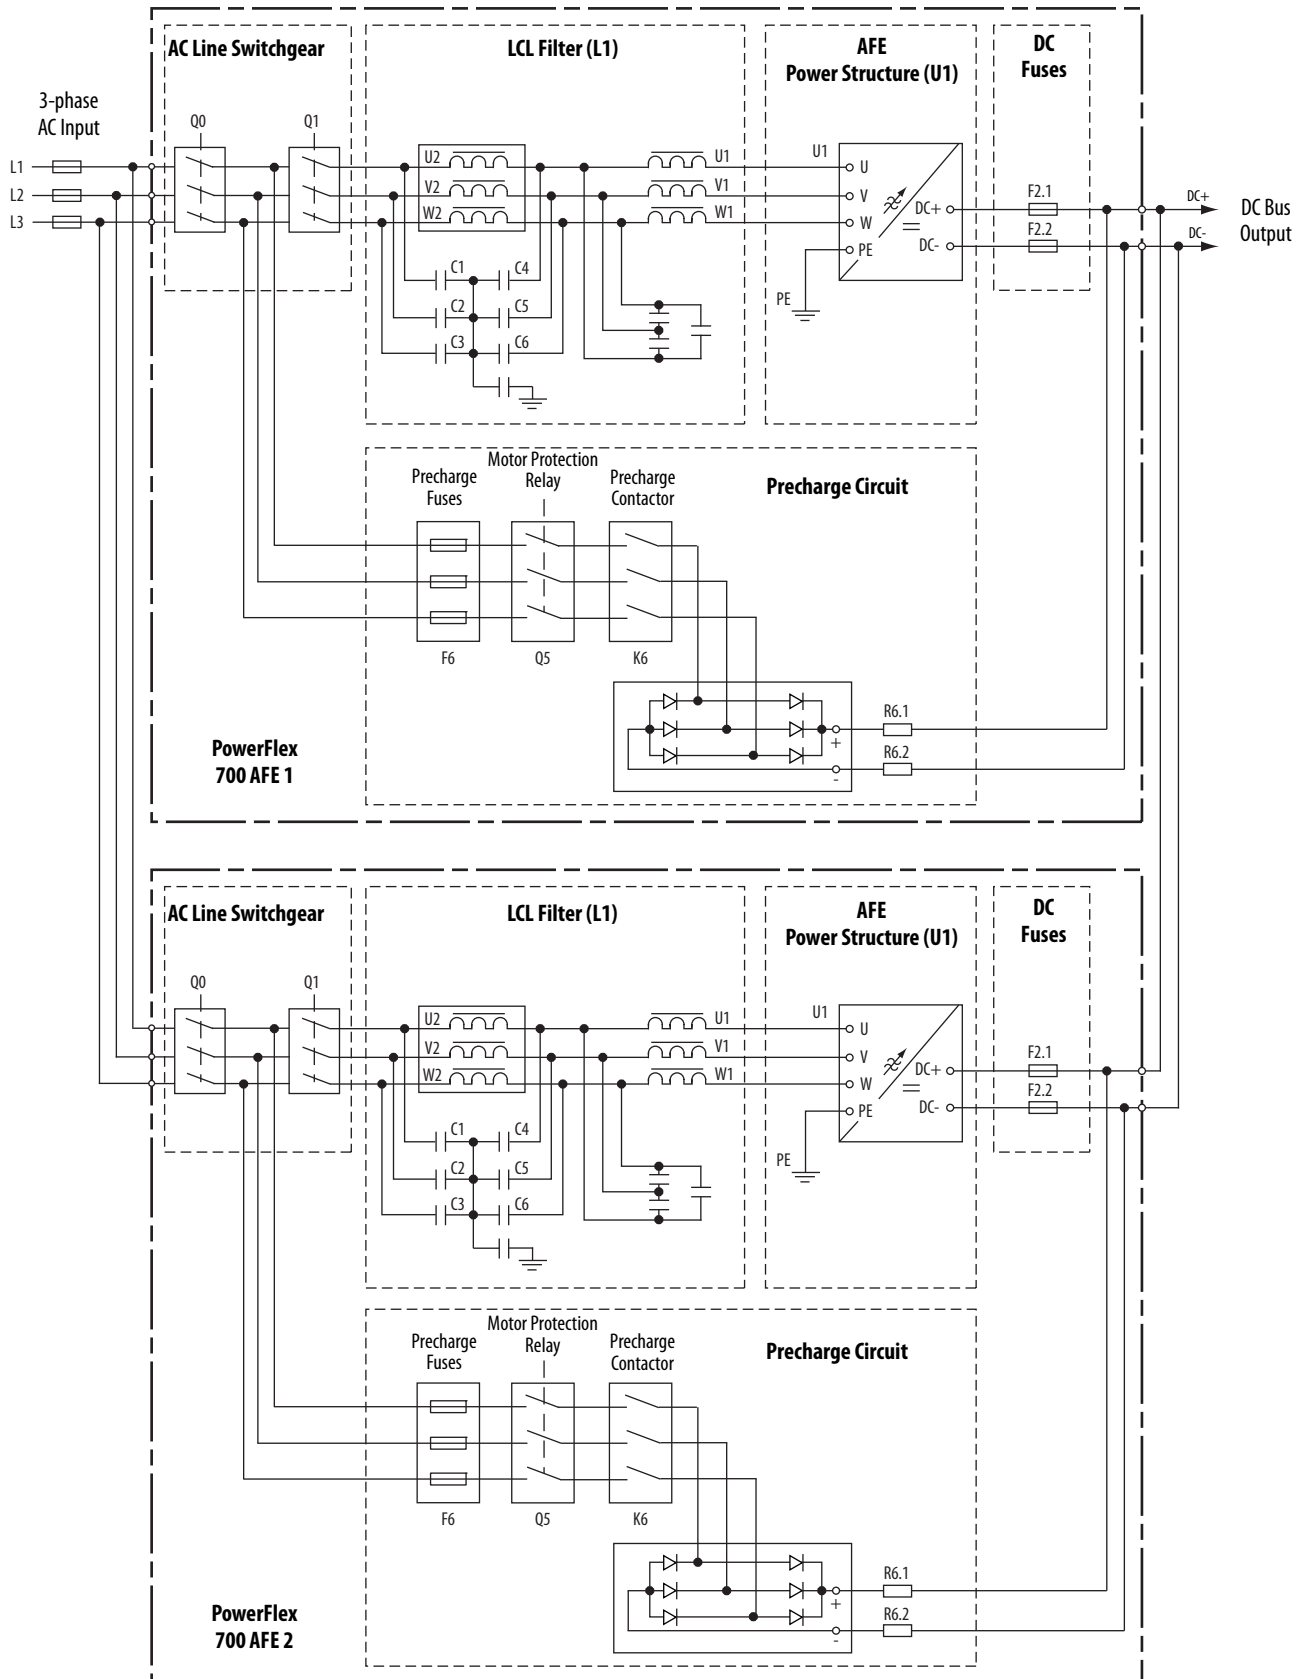


Figure 59 - Connecting Parallel Frame 13 AFEs in IP21 Rittal Enclosure

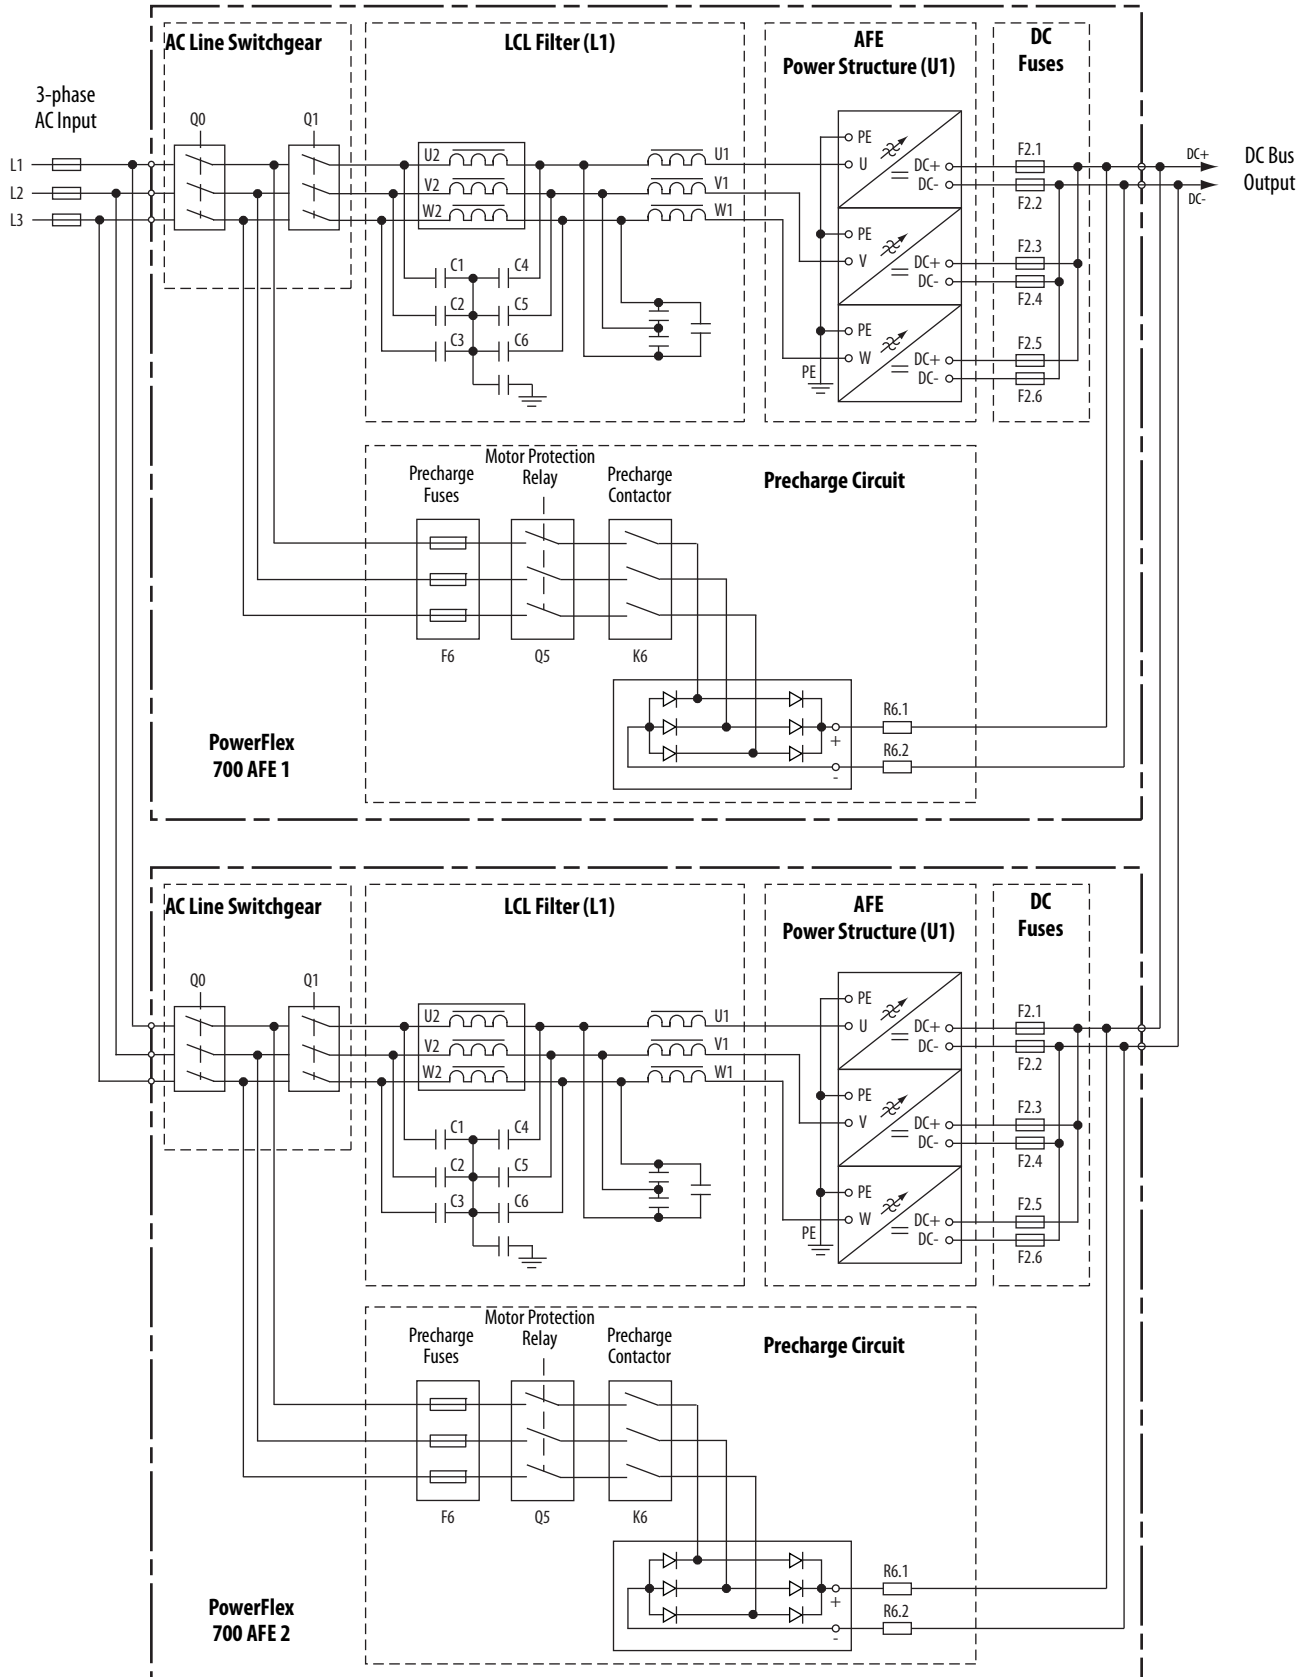

Paralleling an AFE with One or More PowerFlex SCR Bus Supplies

For information about paralleling an AFE with one or more PowerFlex® SCR Bus Supplies, see Drives in Common Bus Configurations, publication [DRIVES-AT002](#).

A

AC Line Freq parameter 99
AC Line kVA parameter 99
AC Line kVar parameter 99
AC Line kW parameter 99
AC supply source
 unbalanced 26, 58
 ungrounded 26, 58
Active Current parameter 99
Active I Ki parameter 103
Active I Kp parameter 103
Active I Ref parameter 103
AFE
 dimensions 143
 fault descriptions 127
 Frame 10 main component locations
 in IP20 2500 MCC Style enclosure 22
 in IP21 Rittal enclosure 54
 Frame 13 main component locations
 in IP20 2500 MCC Style enclosure 23
 in IP21 Rittal enclosure 55
 main component sections
 in IP20 2500 MCC Style enclosure 20
 in IP21 Rittal enclosure 52
 parameters 95
Alarm 1 @ Fault parameter 108
Alarm 1 Code parameter 110
Alarm 2 @ Fault parameter 108
Alarm 2 Code parameter 110
Alarm 3 Code parameter 110
Alarm 4 Code parameter 110
Alarm Clear parameter 110
alarm clearing 131
Alarm Config parameter 110
Alarms Parameter Group 110
Analog In 1 Hi parameter 113
Analog In 1 Lo parameter 113
Analog In 1 Loss parameter 113
Analog In 2 Hi parameter 113
Analog In 2 Lo parameter 113
Analog In 2 Loss parameter 113
Analog In1 Value parameter 100
Analog In2 Value parameter 100
Analog Inputs Parameter Group 113
Analog Out1 Hi parameter 114
Analog Out1 Lo parameter 114
Analog Out1 Sel parameter 114
Analog Out2 Hi parameter 114
Analog Out2 Lo parameter 114
Analog Out2 Sel parameter 114
Analog Outputs Parameter Group 113
Anlg In Config parameter 113
Anlg Out Absolute parameter 114
Anlg Out Config parameter 113
Anlg Out1 Scale parameter 115
Anlg Out1 Setpt parameter 115

Anlg Out2 Scale parameter 115
Anlg Out2 Setpt parameter 115
armored cable 30, 63
Auto Rstrt Delay parameter 102
Auto Rstrt Tries parameter 102
Auto Stop Level parameter 101
Auto-Reset/Start 126
AutoRstrt Config parameter 102

B

bus capacitors, discharging 12

C**cables, power**

armored 30, 63
 insulation 29, 62
 separation 29, 63
 shielded 29, 30, 62, 63
 unshielded 29, 30, 62

capacitors 37, 69**capacitors - bus, discharging** 12**catalog number explanation** 13**CE Conformity** 49, 82**clearing**

alarms 131
 faults 127

Cmd DC Volt parameter 100**Cnvtr Alarm 1 parameter** 106**Cnvtr Alarm 2 parameter** 106**Cnvtr Logic Rslt parameter** 111**Cnvtr OL Count parameter** 108**Cnvtr OL Factor parameter** 109**Cnvtr Status 1 parameter** 105**Cnvtr Status 2 parameter** 106**Comm Control Parameter Group** 111**Common Mode**

capacitors 37, 69
 interference 40, 75

Communication File 111**communications - programmable controller****configurations** 152**component locations**

Frame 10 AFE in IP20 2500 MCC Style enclosure 22
 Frame 10 AFE in IP21 Rittal enclosure 54
 Frame 13 AFE in IP20 2500 MCC Style enclosure 23
 Frame 13 AFE in IP21 Rittal enclosure 55

component sections

AFE in IP20 2500 MCC Style enclosure 20
 AFE in IP21 Rittal enclosure 52

configuring parameters 95**Conformity - CE** 49, 82**Contact Off Cnfg parameter** 109**Contact On Delay parameter** 101

- control**
 - I/O terminal block in IP20 2500 MCC Style enclosure 44
 - I/O terminal block in IP21 Rittal enclosure 78
 - wire 41, 75
 - Control Modes Parameter Group** 101
 - Control Options parameter** 102
 - Control SW Ver parameter** 100
 - conventions used in this manual** 10
 - Converter Data Parameter Group** 100
 - Converter Memory Parameter Group** 105
 - CopyCat HIM function** 162
 - cross-reference of parameters**
 - by name 117
 - by number 120
 - Current Lmt Val parameter** 103
 - Current Loop Parameter Group** 103
- D**
- Data In A1 parameter** 112
 - Data In A2 parameter** 112
 - Data In B1 parameter** 112
 - Data In B2 parameter** 112
 - Data In C1 parameter** 112
 - Data In C2 parameter** 112
 - Data In D1 parameter** 112
 - Data In D2 parameter** 112
 - Data Out A1 parameter** 112
 - Data Out A2 parameter** 112
 - Data Out B1 parameter** 112
 - Data Out B2 parameter** 112
 - Data Out C1 parameter** 112
 - Data Out C2 parameter** 112
 - Data Out D1 parameter** 112
 - Data Out D2 parameter** 112
 - data, saving** 162
 - Datalinks Parameter Group** 112
 - DC Bus Current parameter** 99
 - DC Bus Hi Alarm parameter** 103
 - DC Bus Lo Alarm parameter** 103
 - DC Bus Volt parameter** 99
 - DC Ref Hi Lmt parameter** 103
 - DC Ref Lo Lmt parameter** 103
 - DC Ref Source parameter** 106
 - DC Volt Ki parameter** 102
 - DC Volt Kp parameter** 102
 - DC Volt Ref parameter** 102
 - DC Volt Ref Sel parameter** 102
 - defaults, resetting to** 162
 - diagnostic data, viewing** 161
 - Diagnostics Parameter Group** 105
 - Dig In Status parameter** 107
 - Dig Out Setpt parameter** 116
 - Dig Out Status parameter** 107
 - Dig Out2 Invert parameter** 116
 - Dig Out2 OffTime parameter** 116
 - Dig Out2 OnTime parameter** 116
 - Dig Out3 Invert parameter** 116
 - Dig Out3 OffTime parameter** 116
 - Dig Out3 OnTime parameter** 116
 - Digital In1 Sel parameter** 115
 - Digital In2 Sel parameter** 115
 - Digital In3 Sel parameter** 115
 - Digital In4 Sel parameter** 115
 - Digital In5 Sel parameter** 115
 - Digital In6 Sel parameter** 115
 - Digital Inputs Parameter Group** 115
 - Digital Out1 Sel parameter** 116
 - Digital Out2 Sel parameter** 116
 - Digital Out3 Sel parameter** 116
 - Digital Outputs Parameter Group** 116
 - discharging bus capacitors** 12
 - distribution systems** 37, 69
 - unbalanced 26, 58
 - ungrounded 26, 58
 - DPI Baud Rate parameter** 111
 - DPI communication configurations** 152
 - DPI Port Sel parameter** 111
 - DPI Port Value parameter** 111
 - Droop parameter** 104
 - Dynamic Control File** 101
- E**
- editing parameters** 95
 - Elapsed Run Time parameter** 100
 - electrostatic discharge (ESD)** 12
 - EMC Directive** 49, 82
- F**
- factory defaults, resetting to** 162
 - fault**
 - descriptions 127
 - queue 161
 - Fault 1 Code parameter** 109
 - Fault 1 Time parameter** 109
 - Fault 2 Code parameter** 109
 - Fault 2 Time parameter** 109
 - Fault 3 Code parameter** 109
 - Fault 3 Time parameter** 109
 - Fault 4 Code parameter** 109
 - Fault 4 Time parameter** 109
 - Fault Bus Volts parameter** 107
 - Fault Clear Mode parameter** 109
 - Fault Clear parameter** 109
 - Fault Clr Mask parameter** 111
 - Fault Clr Owner parameter** 111
 - Fault Config parameter** 109
 - Fault Frequency parameter** 107
 - Fault Temp parameter** 107

Fault Total Curr parameter 107

Faults Parameter Group 109

File

- Communication 111
- Dynamic Control 101
- Inputs & Outputs 113
- Monitor 99
- Utility 105

File-Group-Parameter 96

fuse and circuit breaker ratings 141, 142

G

general precautions 12

Ground Current parameter 99

Ground I Lvl parameter 103

grounding

- recommended scheme 27, 59
- requirements 27, 59
- shields 29, 61

Group - Parameter

- Alarms 110
- Analog Inputs 113
- Analog Outputs 113
- Comm Control 111
- Control Modes 101
- Converter Data 100
- Converter Memory 105
- Current Loop 103
- Datalinks 112
- Diagnostics 105
- Digital Inputs 115
- Digital Outputs 116
- Faults 109
- Limits 103
- Masks & Owners 111
- Metering 99
- Parallel Mode 104
- Restart Modes 102
- Voltage Loop 102

H

hardware enable 46, 80

Heatsink Temp parameter 99

HIM 159

- ALT functions 160
- Diagnostics menu 161
- external and internal connections 159
- LCD display elements 160
- Memory Storage menu 162
- menu structure 161
- Preferences menu 162
- removing 163

I

I Imbalance parameter 99

Input Current R parameter 99

Input Current S parameter 99

Input Current T parameter 99

input potentiometer 47, 80

input power conditioning 27, 59

Input Voltage parameter 99

Inputs & Outputs File 113

L

Language parameter 105

Last Stop Source parameter 107

Limits Parameter Group 103

linear list of parameters 120

Logic Command Word

- PowerFlex 700/700H/700S drives 152
- PowerFlex 750-Series drives 155

Logic Mask parameter 111

Logic Status Word

- PowerFlex 700/700H/700S drives 153
- PowerFlex 750-Series drives 156

Low Voltage Directive 49, 82

M

main component locations

- Frame 10 AFE in IP20 2500 MCC Style enclosure 22
- Frame 10 AFE in IP21 Rittal enclosure 54
- Frame 13 AFE in IP20 2500 MCC Style enclosure 23
- Frame 13 AFE in IP21 Rittal enclosure 55

main component sections

- AFE in IP20 2500 MCC Style enclosure 20
- AFE in IP21 Rittal enclosure 52

manual conventions 10

Masks & Owners Parameter Group 111

Metering Parameter Group 99

mode capacitors 37, 69

Modulation Index parameter 101

Modulation Type parameter 101

Monitor File 99

Motor Power Lmt parameter 103

Motoring MWh parameter 100

N

Nom Input Volt parameter 101

non-resettable faults 126

O

operator interface 163

P

Parallel Mode Parameter Group 104

Param Access Lvl parameter 105
parameter

- changing/editing 163
- cross-reference
- by name 117

by number 120
linear list 120
viewing 163

Parameters

AC Line Freq 99
 AC Line kVA 99
 AC Line kVar 99
 AC Line kW 99
 Active Current 99
 Active I Ki 103
 Active I Kp 103
 Active I Ref 103
 Alarm 1 @ Fault 108
 Alarm 1 Code 110
 Alarm 2 @ Fault 108
 Alarm 2 Code 110
 Alarm 3 Code 110
 Alarm 4 Code 110
 Alarm Clear 110
 Alarm Config 110
 Analog In 1 Hi 113
 Analog In 1 Lo 113
 Analog In 1 Loss 113
 Analog In 2 Hi 113
 Analog In 2 Lo 113
 Analog In 2 Loss 113
 Analog In1 Value 100
 Analog In2 Value 100
 Analog Out1 Hi 114
 Analog Out1 Lo 114
 Analog Out1 Sel 114
 Analog Out2 Hi 114
 Analog Out2 Lo 114
 Analog Out2 Sel 114
 Anlg In Config 113
 Anlg Out Absolute 114
 Anlg Out Config 113
 Anlg Out1 Scale 115
 Anlg Out1 Setpt 115
 Anlg Out2 Scale 115
 Anlg Out2 Setpt 115
 Auto Rstrt Delay 102
 Auto Rstrt Tries 102
 Auto Stop Level 101
 AutoRstrt Config 102
 Cmd DC Volt 100
 Cnvtr Alarm 1 106
 Cnvtr Alarm 2 106
 Cnvtr Logic Rslt 111
 Cnvtr OL Count 108
 Cnvtr OL Factor 109
 Cnvtr Status 1 105
 Cnvtr Status 2 106
 Contact Off Cnfg 109
 Contact On Delay 101
 Control Options 102
 Control SW Ver 100
 Current Lmt Val 103
 Data In A1 112
 Data In A2 112
 Data In B1 112
 Data In B2 112
 Data In C1 112
 Data In C2 112
 Data In D1 112
 Data In D2 112
 Data Out A1 112
 Data Out A2 112
 Data Out B1 112
 Data Out B2 112
 Data Out C1 112
 Data Out C2 112
 Data Out D1 112
 Data Out D2 112
 DC Bus Current 99
 DC Bus Hi Alarm 103
 DC Bus Lo Alarm 103
 DC Bus Volt 99
 DC Ref Hi Lmt 103
 DC Ref Lo Lmt 103
 DC Ref Source 106
 DC Volt Ki 102
 DC Volt Kp 102
 DC Volt Ref 102
 DC Volt Ref Sel 102
 Dig In Status 107
 Dig Out Setpt 116
 Dig Out Status 107
 Dig Out2 Invert 116
 Dig Out2 OffTime 116
 Dig Out2 OnTime 116
 Dig Out3 Invert 116
 Dig Out3 OffTime 116
 Dig Out3 OnTime 116
 Digital In1 Sel 115
 Digital In2 Sel 115
 Digital In3 Sel 115
 Digital In4 Sel 115
 Digital In5 Sel 115
 Digital In6 Sel 115
 Digital Out1 Sel 116
 Digital Out2 Sel 116
 Digital Out3 Sel 116
 DPI Baud Rate 111
 DPI Port Sel 111
 DPI Port Value 111
 Droop 104
 Elapsed Run Time 100
 Fault 1 Code 109
 Fault 1 Time 109
 Fault 2 Code 109
 Fault 2 Time 109
 Fault 3 Code 109
 Fault 3 Time 109
 Fault 4 Code 109
 Fault 4 Time 109
 Fault Bus Volts 107
 Fault Clear 109
 Fault Clear Mode 109
 Fault Clr Mask 111
 Fault Clr Owner 111
 Fault Config 109
 Fault Frequency 107
 Fault Temp 107
 Fault Total Curr 107
 Ground Current 99
 Ground I Lvl 103
 Heatsink Temp 99
 I Imbalance 99
 Input Current R 99
 Input Current S 99
 Input Current T 99
 Input Voltage 99
 Language 105
 Last Stop Source 107

- Logic Mask 111
- Modulation Index 101
- Modulation Type 101
- Motor Power Lmt 103
- Motoring MWh 100
- Nom Input Volt 101
- Param Access Lvl 105
- Power Factor 99
- Power Up Marker 109
- PWM Frequency 101
- PWM Synch 104
- Rated Amps 100
- Rated kW 100
- Rated Volts 100
- RatedLineCurrent 101
- Reactive Current 99
- Reactive I Ki 103
- Reactive I Kp 103
- Reactive I Ref 103
- Reactive I Sel 103
- Regen MWh 100
- Regen Power Lmt 103
- Reset Meters 105
- Reset to Defaults 86, 90, 105
- Restart Delay 101
- Start Inhibits 107
- Start Owner 111
- Start Up Delay 104
- Start/Stop Mode 101
- Status 1 @ Fault 108
- Status 2 @ Fault 108
- Stop Delay 101
- Stop Owner 111
- Testpoint 1 Data 108
- Testpoint 1 Sel 108
- Testpoint 2 Data 108
- Testpoint 2 Sel 108
- Total Current 99
- Voltage Class 105

PE 27, 59

potentiometer, wiring 47, 80

power

cables/wiring

AFE in IP20 2500 MCC Style enclosure
29

AFE in IP21 Rittal enclosure 62

terminal locations/specifications

Frame 10 in IP20 2500 MCC Style en-
closure 34

Frame 10 in IP21 Rittal enclosure 66

Frame 13 in IP20 2500 MCC Style en-
closure 35

Frame 13 in IP21 Rittal enclosure 67

power conditioning, input 27, 59

Power Factor parameter 99

Power Up Marker parameter 109

precautions, general 12

preferences, setting 162

programmable controller configurations 152

PWM Frequency parameter 101

PWM Synch parameter 104

R

Rated Amps parameter 100

Rated kW parameter 100

Rated Volts parameter 100

RatedLineCurrent parameter 101

Reactive Current parameter 99

Reactive I Ki parameter 103

Reactive I Kp parameter 103

Reactive I Ref parameter 103

Reactive I Sel parameter 103

Regen MWh parameter 100

Regen Power Lmt parameter 103

Reset Meters parameter 105

Reset to Defaults 162

Reset to Defaults parameter 86, 90, 105

Residual Current Detector (RCD) 26, 58

Restart Delay parameter 101

Restart Modes Parameter Group 102

S

saving data 162

setting preferences 162

shielded cables - power 30, 63

SHLD termination 29, 61

signal wire 41, 75

specifications 137

control 138

electrical 138

environment 138

protection 138

Start Inhibits parameter 107

Start Owner parameter 111

Start Up Delay parameter 104

Start/Stop Mode parameter 101

start-up 85

static discharge (ESD) 12

Status 1 @ Fault parameter 108

Status 2 @ Fault parameter 108

Stop Delay parameter 101

Stop Owner parameter 111

supplemental information 137

supply source - AC 26, 58

T

technical support 10, 135

terminal block

I/O in IP20 2500 MCC Style enclosure 44

I/O in IP21 Rittal enclosure 78

wire size 42, 76

terminals - power

- Frame 10 in IP20 2500 MCC Style enclosure
34
- Frame 10 in IP21 Rittal enclosure 66
- Frame 13 in IP20 2500 MCC Style enclosure
35
- Frame 13 in IP21 Rittal enclosure 67

Testpoint 1 Data parameter 108**Testpoint 1 Sel parameter** 108**Testpoint 2 Data parameter** 108**Testpoint 2 Sel parameter** 108**Total Current parameter** 99**troubleshooting** 125**U****unbalanced/ungrounded AC supply source**

26, 58

ungrounded distribution systems 37, 69**unshielded power cables** 30, 62**user configurable alarms** 126**Utility File** 105**V****viewing and changing parameters** 163**Voltage Class parameter** 105**Voltage Loop Parameter Group** 102**W****website**

technical support 10

wire

control 41, 75

signal 41, 75

wiring

hardware enable 46, 80

potentiometer 47, 80

power for AFE in IP20 2500 MCC Style
enclosure 29

power for AFE in IP21 Rittal enclosure 62

Notes:

Rockwell Automation Support

Use the following resources to access support information.

Technical Support Center	Knowledgebase Articles, How-to Videos, FAQs, Chat, User Forums, and Product Notification Updates.	https://rockwellautomation.custhelp.com/
Local Technical Support Phone Numbers	Locate the phone number for your country.	http://www.rockwellautomation.com/global/support/get-support-now.page
Direct Dial Codes	Find the Direct Dial Code for your product. Use the code to route your call directly to a technical support engineer.	http://www.rockwellautomation.com/global/support/direct-dial.page
Literature Library	Installation Instructions, Manuals, Brochures, and Technical Data.	http://www.rockwellautomation.com/global/literature-library/overview.page
Product Compatibility and Download Center (PCDC)	Get help determining how products interact, check features and capabilities, and find associated firmware.	http://www.rockwellautomation.com/global/support/pcdc.page

Documentation Feedback

Your comments will help us serve your documentation needs better. If you have any suggestions on how to improve this document, complete the How Are We Doing? form at http://literature.rockwellautomation.com/idc/groups/literature/documents/du/ra-du002_-en-e.pdf.

Rockwell Automation maintains current product environmental information on its website at <http://www.rockwellautomation.com/rockwellautomation/about-us/sustainability-ethics/product-environmental-compliance.page>.

Allen-Bradley, Connected Components Workbench, DPI, DriveExecutive, DriveExplorer, DriveLogix, PowerFlex, SCANport, Rockwell automation, and Rockwell Software are trademarks of Rockwell Automation, Inc.

Trademarks not belonging to Rockwell Automation are property of their respective companies.

Rockwell Otomasyon Ticaret A.Ş., Kar Plaza İş Merkezi E Blok Kat:6 34752 İçerenköy, İstanbul, Tel: +90 (216) 5698400

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Publication 20Y-UM001F-EN-P - April 2017

Supersedes Publication 20Y-UM001E-EN-P - July 2014

Copyright © 2017 Rockwell Automation, Inc. All rights reserved. Printed in the U.S.A.